


# INSTALLATION INSTRUCTIONS

## CT1241A

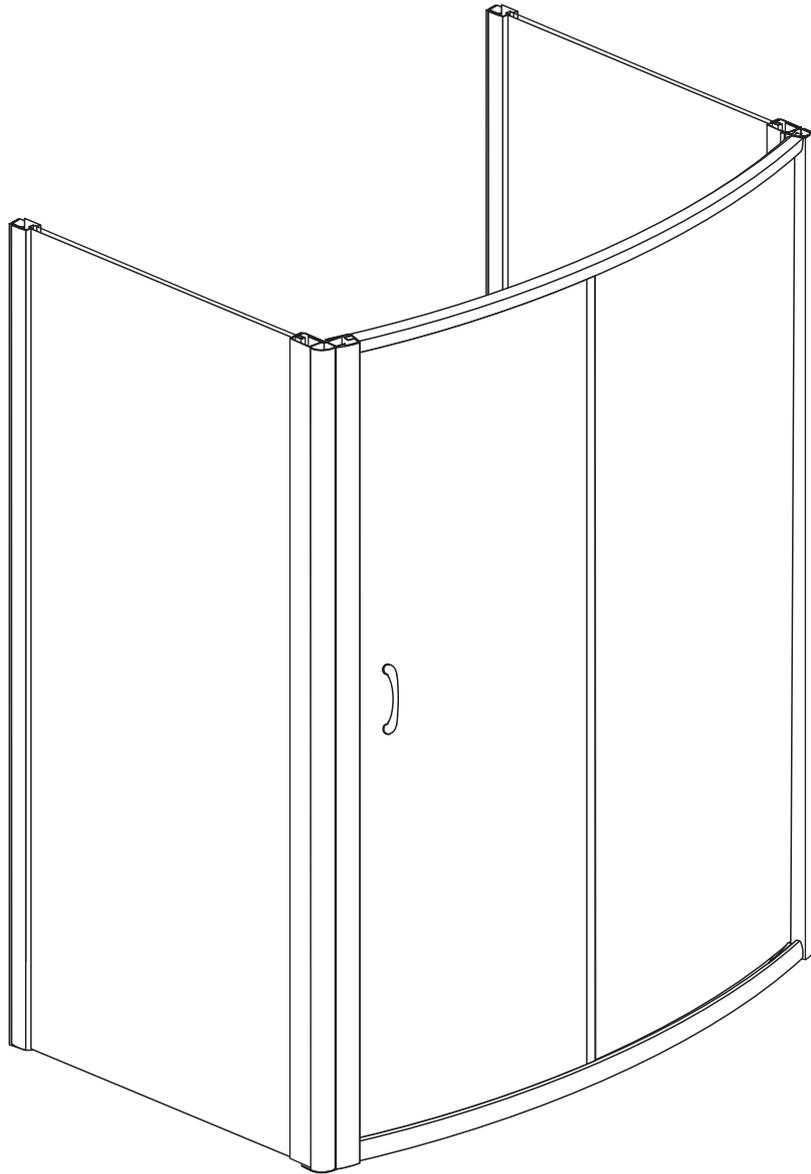

## ◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

## Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.








Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.


Please keep these instructions for aftercare and customer service details.

---


## Tools Required

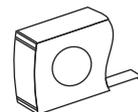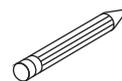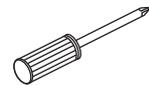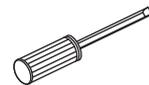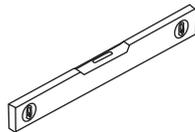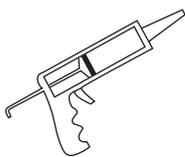

**This product is heavy and may require two people to install.**

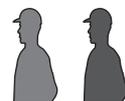


## ◆ Assembly Drawing

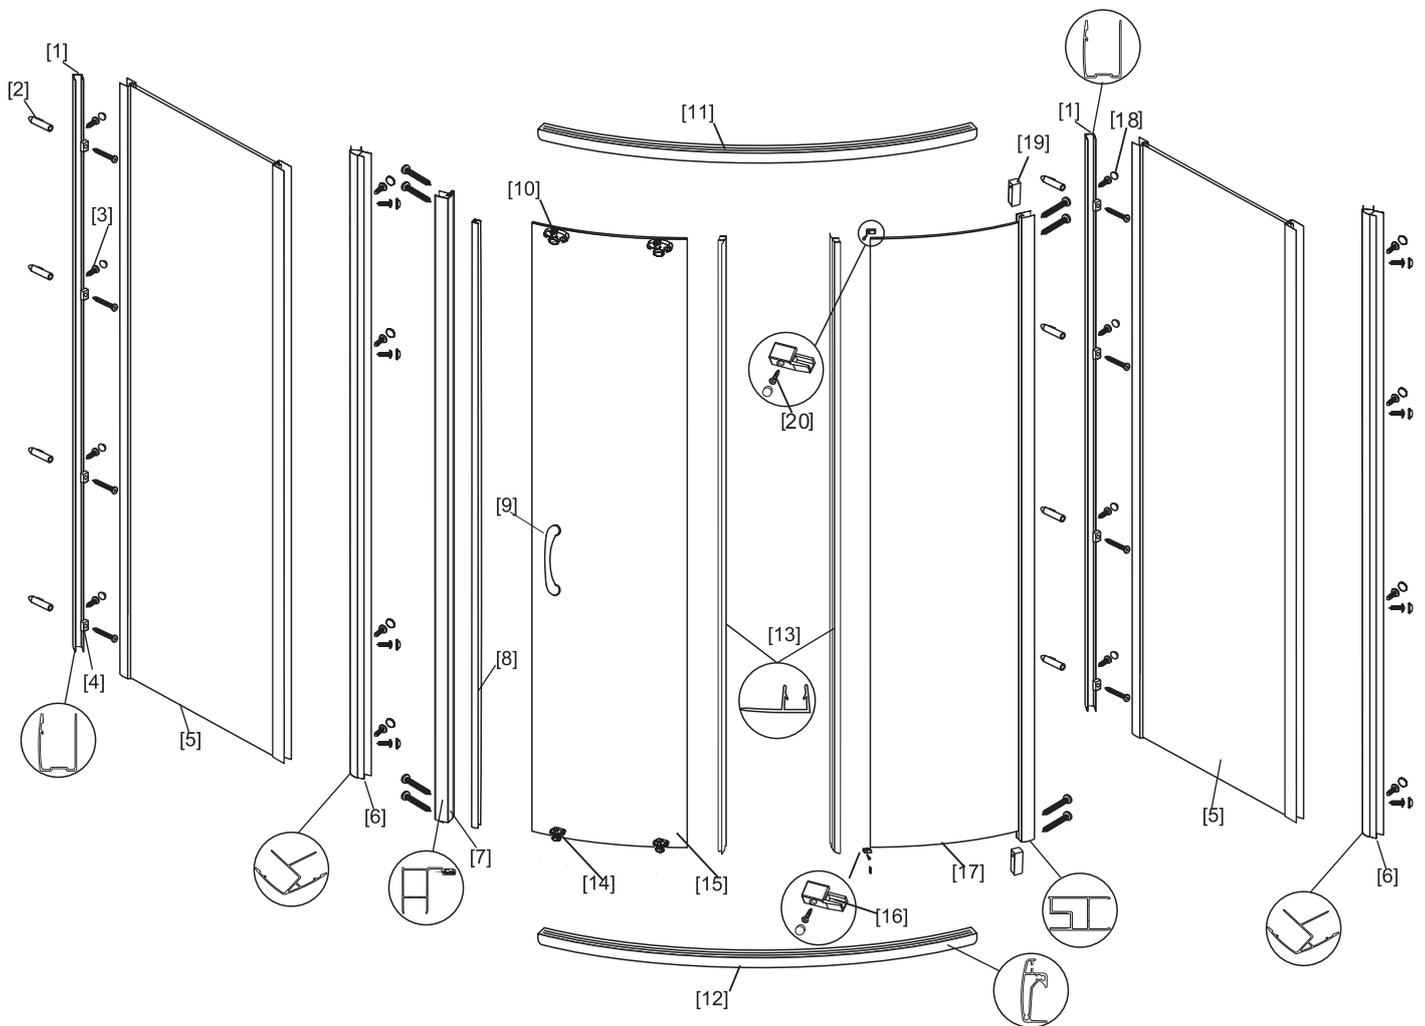

- |                            |                               |
|----------------------------|-------------------------------|
| [1] 2XWall Jamba           | [12] 1xBottom Horizontal Rail |
| [2] 8xWall Plugs           | [13] 2xWater Deflectors       |
| [3] 24xM4x8 Screws         | [14] 2xBottom Rollers         |
| [4] 8xBumper Mouldings     | [15] 1xDoor Panel             |
| [5] 2xFixed Panels         | [16] 2xBumper Bloks           |
| [6] 2xCorner Jamba         | [17] 1xFixed Panel            |
| [7] 2 xJamba               | [18] 24xScrew Cover Caps      |
| [8] 1xMagnetic Seal        | [19] 2xSealed Gum Lumps       |
| [9] 1xHandle Set           | [20] 2xWall Jamba             |
| [10] 2xTop Rollers         | [21] 2xScrew M4x10            |
| [11] 1xTop Horizontal Rail | [22] 16xScrew M4x35           |


# ◆ Installation Steps

## Step 1

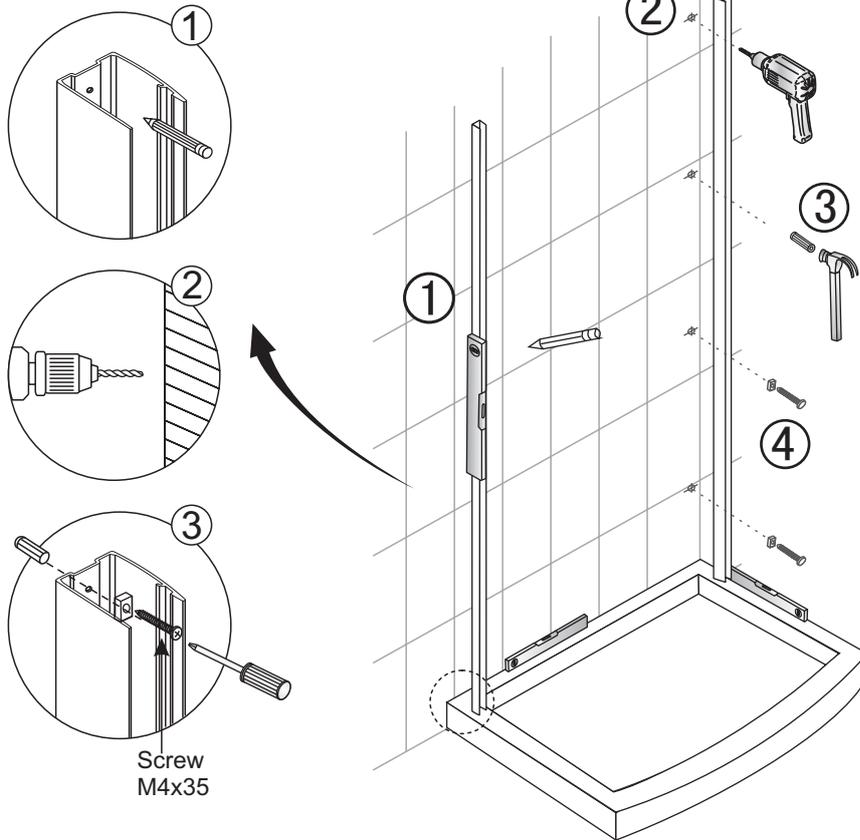

Screw  
M4x35


## Step 2

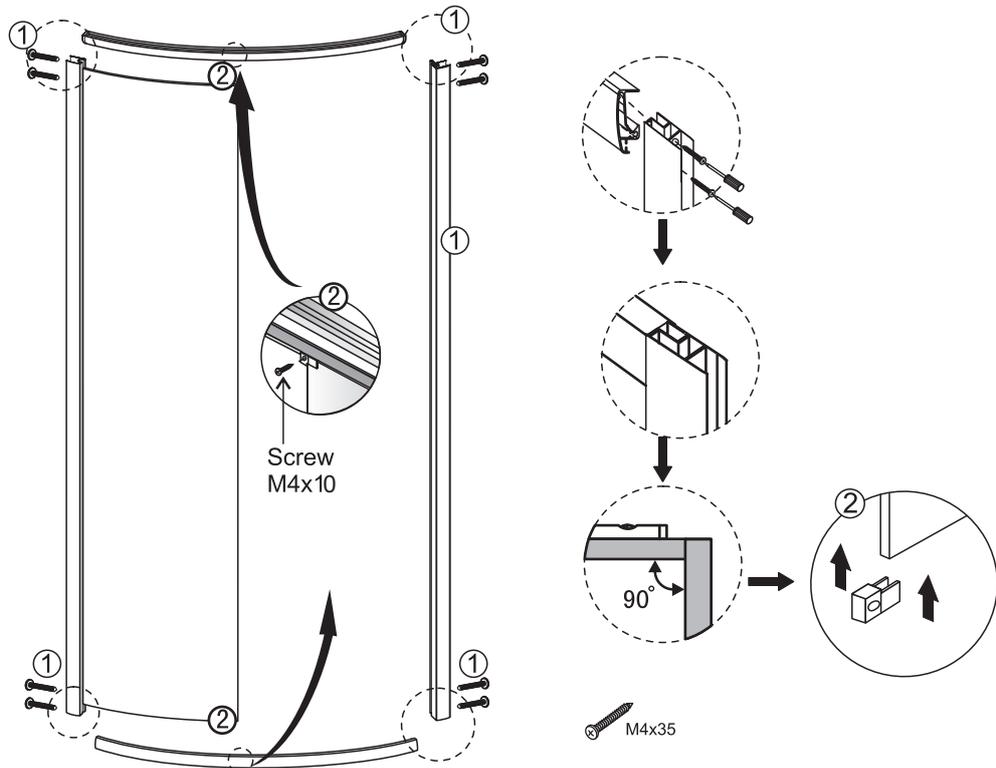


Screw  
M4x10

M4x35


### Step 3

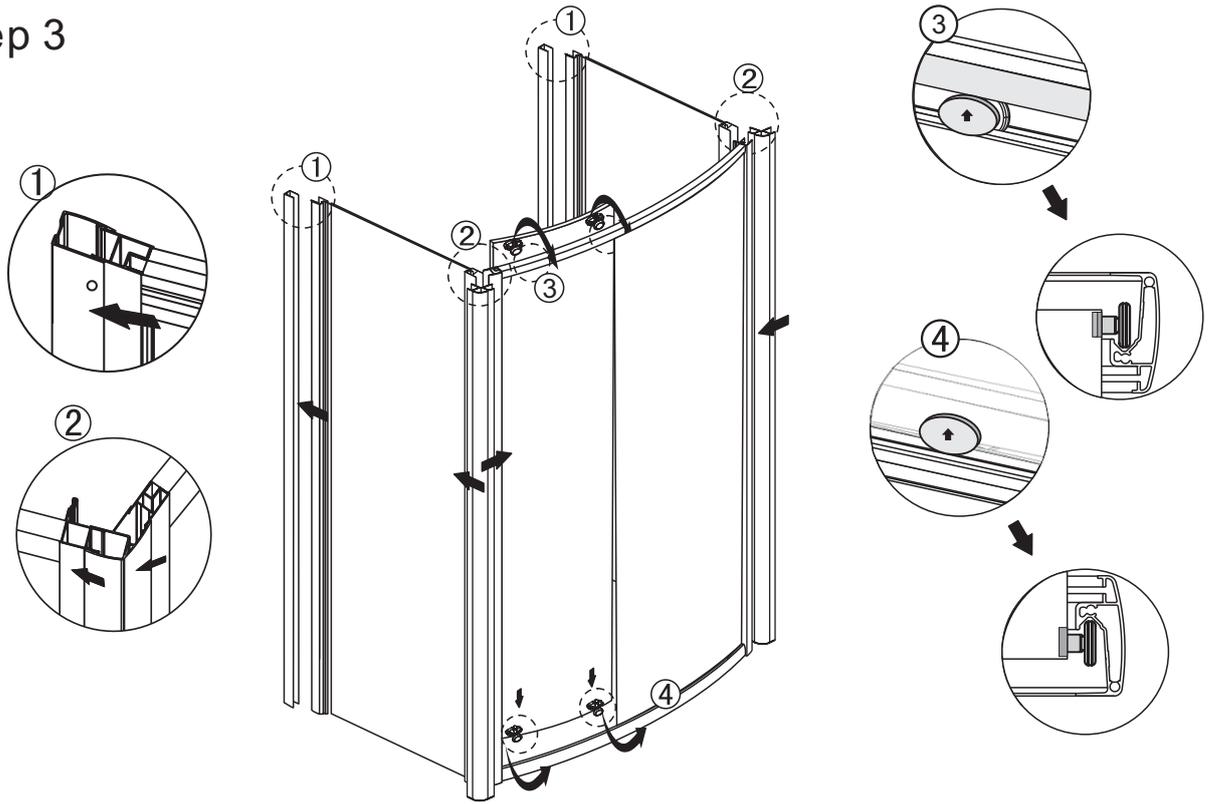


### Step 4

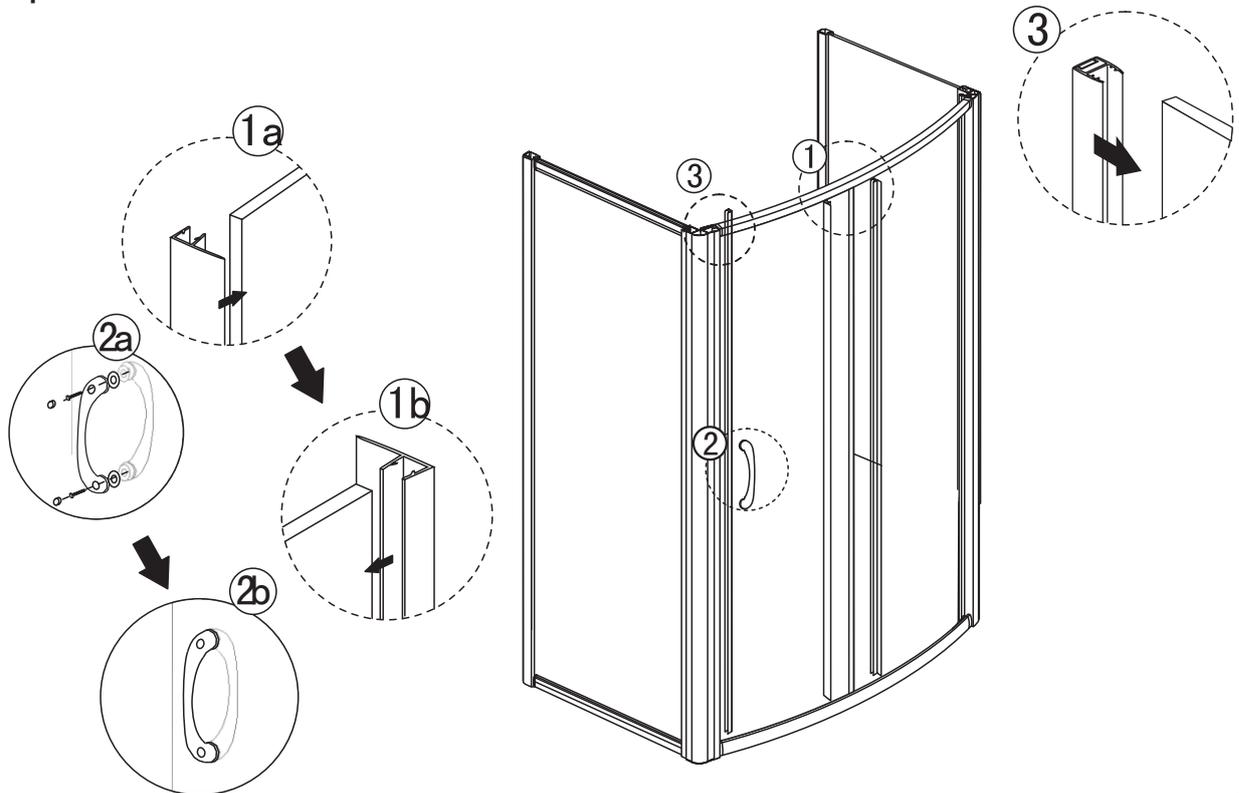

## Step 5

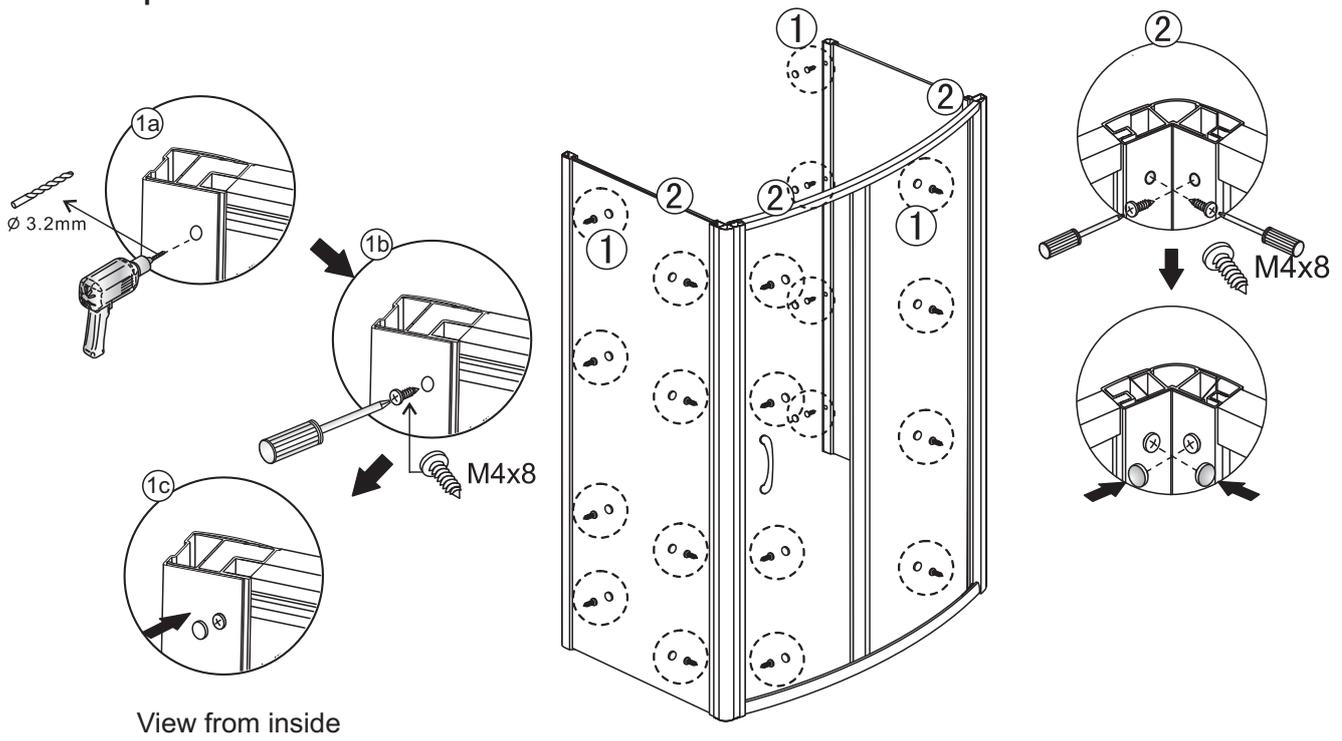

## Step 6

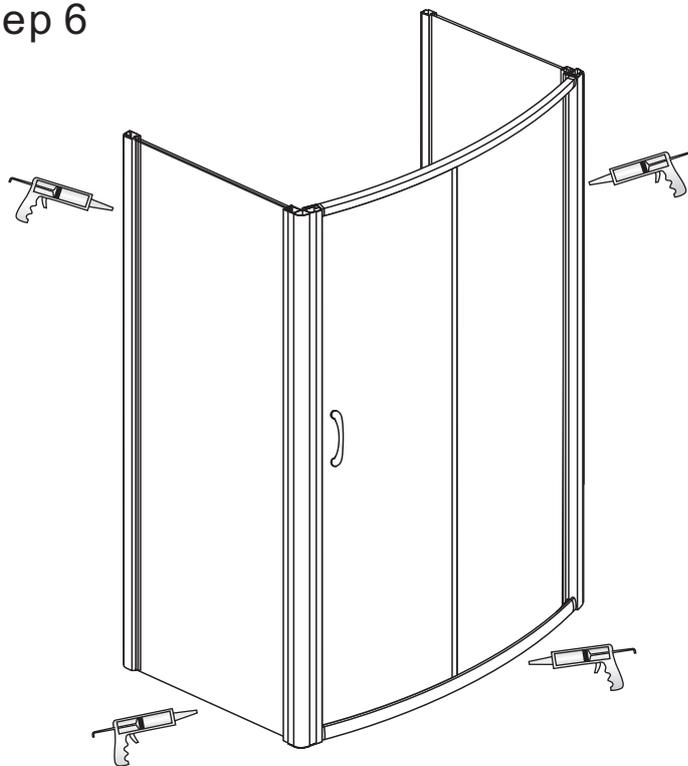

Allow 24 hours for silicone to dry before use.