


INSTALLATION INSTRUCTIONS

CT3242

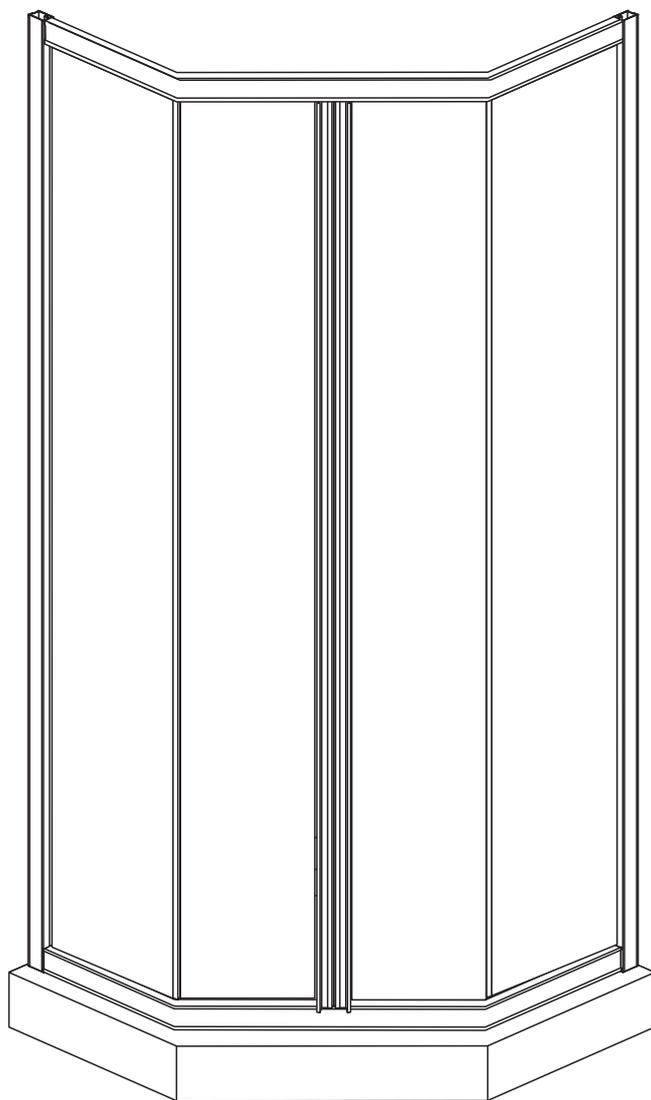

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.


Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.


Tools Required

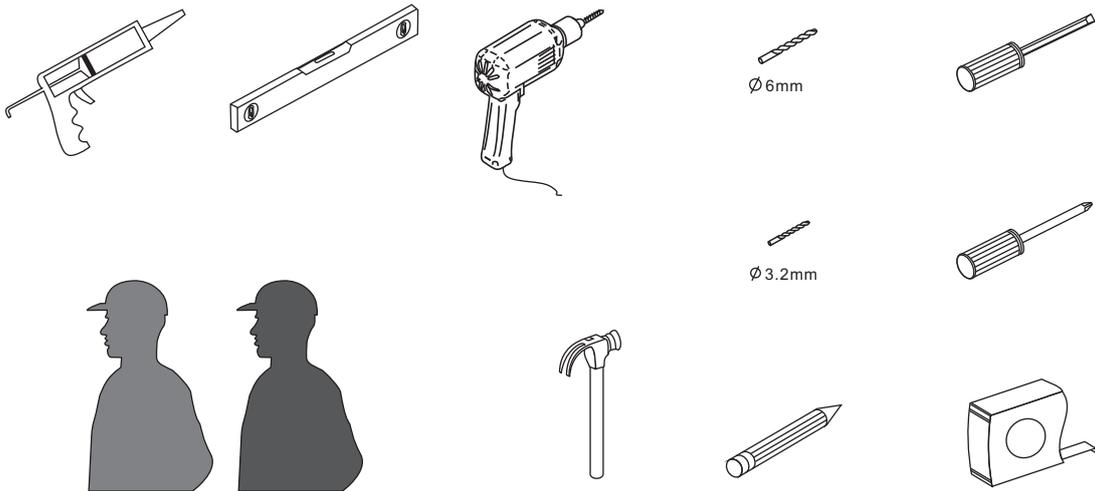

This product is heavy and may require two people to install.


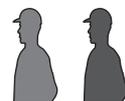


◆ Assembly Drawing



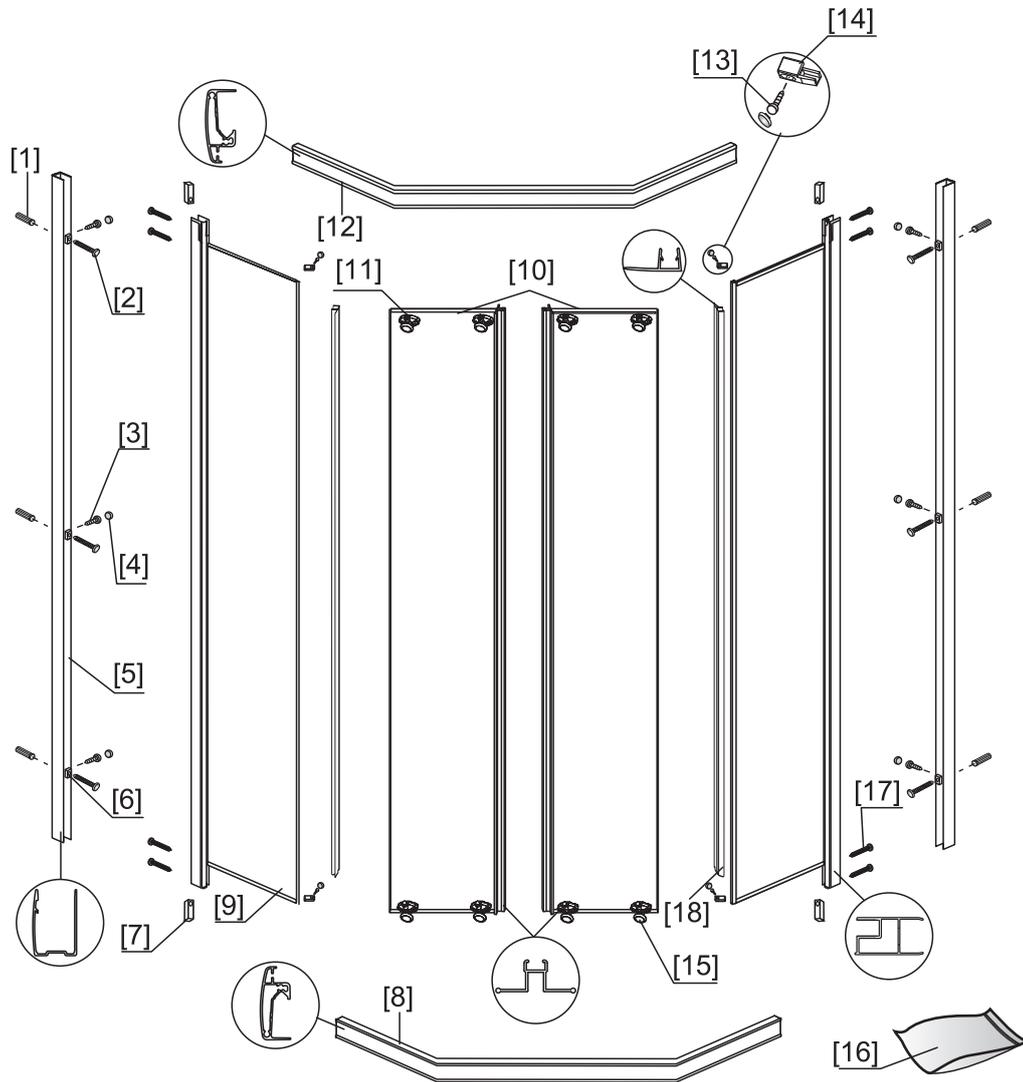


Item no.in exploded drawing picture	Discription	Q'TY	Item no.in exploded drawing picture	Discription	Q'TY
1	Wall Plugs	6	10	Door Panels	2
2	M4x35 Screws	6	11	Top Rollers	4
3	M4x8 Screws	6	12	Top Rail	1
4	Screw Caps	6	13	M4x12 Screws	4
5	Wall Posts	2	14	Sumper Blocks	4
6	Bumper Mouldings	6	15	Bottom Rollers	4
7	Sealed Gum Lumps	4	16	Jubrication oil	1
8	Bottom Rail	1	17	M4x35 Screws	8
9	Fixed Panels	2	18	Water Deflectors	2

Step 3

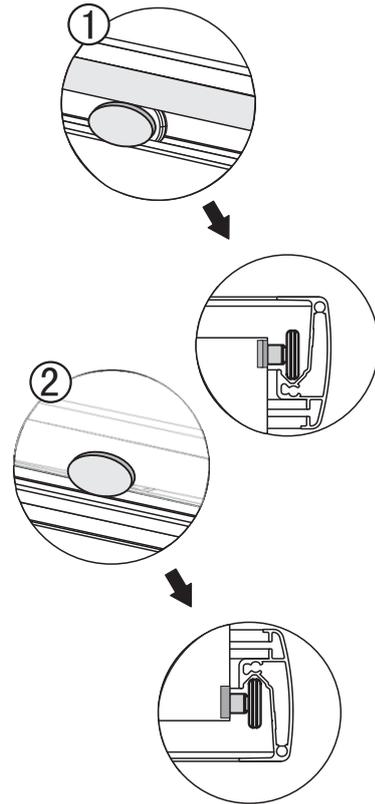
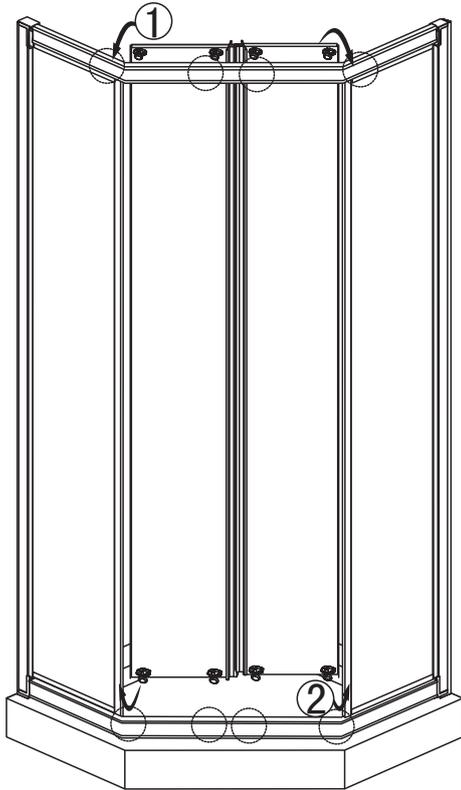


Step 4

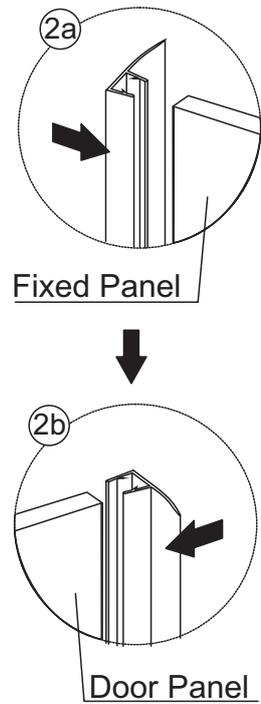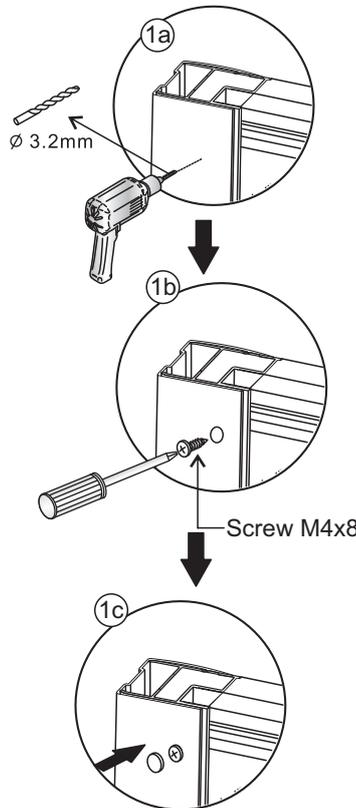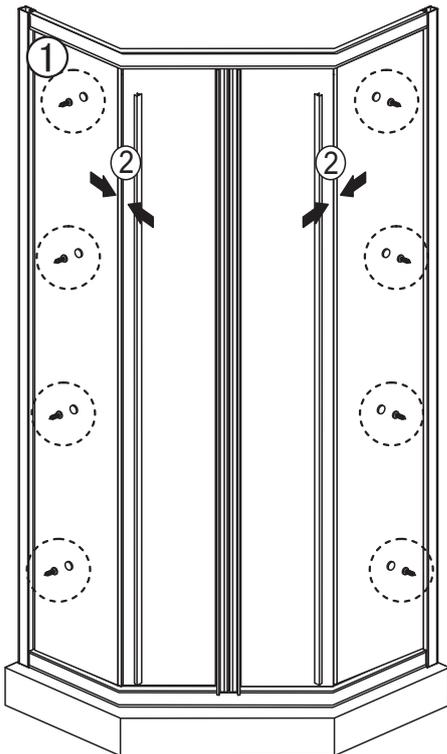


View from inside

Step 5

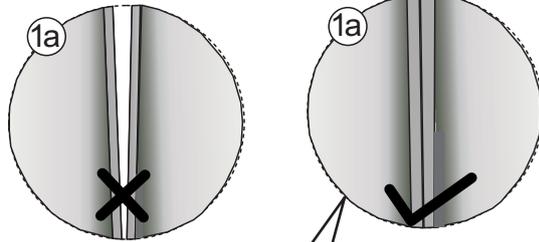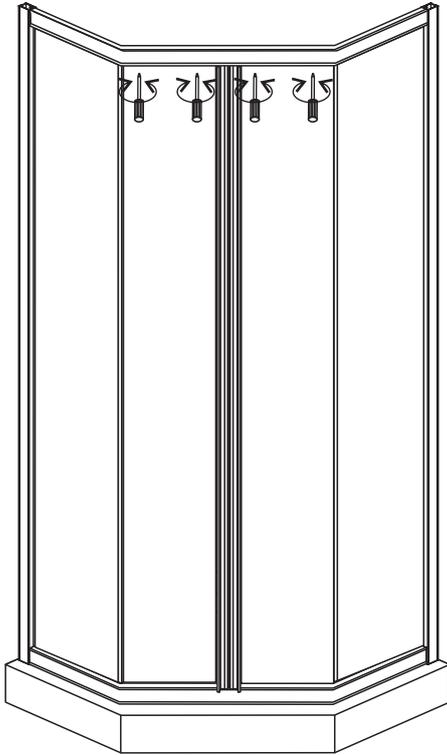

! Adjust the sliding doors using the screws located on the bottom of top roller assemblies. Adjust rollers so that the sliding doors are parallel to the fixed panels and parallel to each other.
Note: Do not overtighten top rollers as this will cause the bottom rollers to jamb and/or break.

Step 6

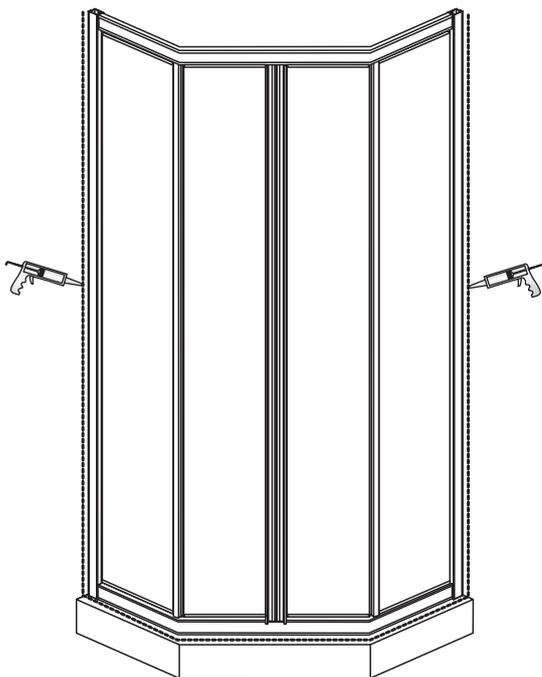

Allow 24 hours for silicone to **dry** before use.