


# CB2142 Instruction Manual

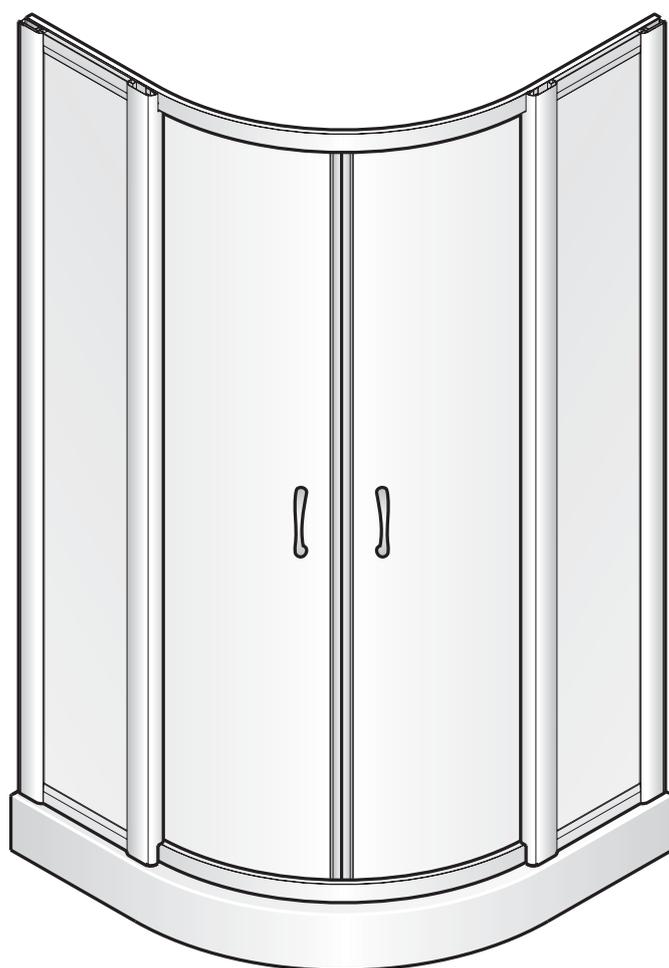

## ◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

## Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.


Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.


Please keep these instructions for aftercare and customer service details.

---


## Tools Required

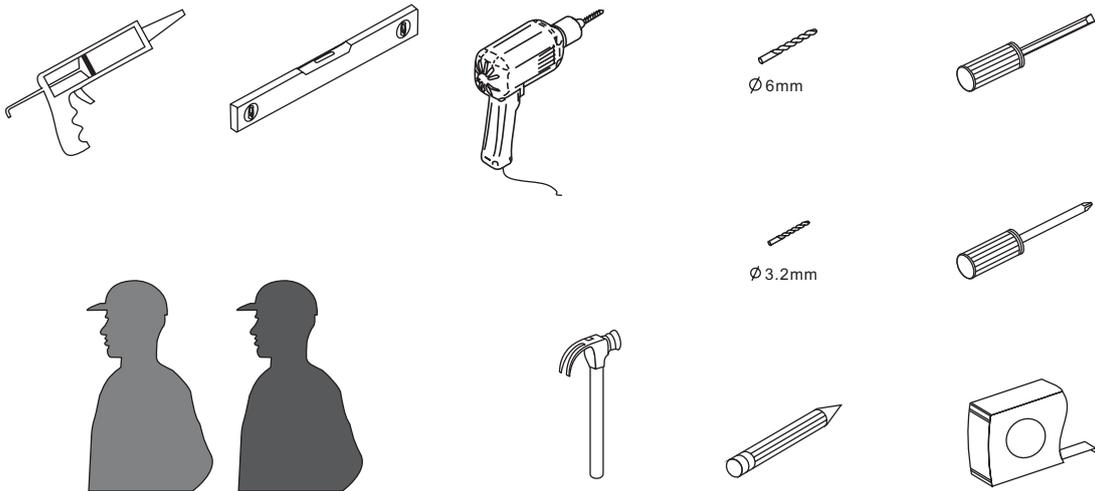

**This product is heavy and may require two people to install.**



# ◆ Assembly Drawing

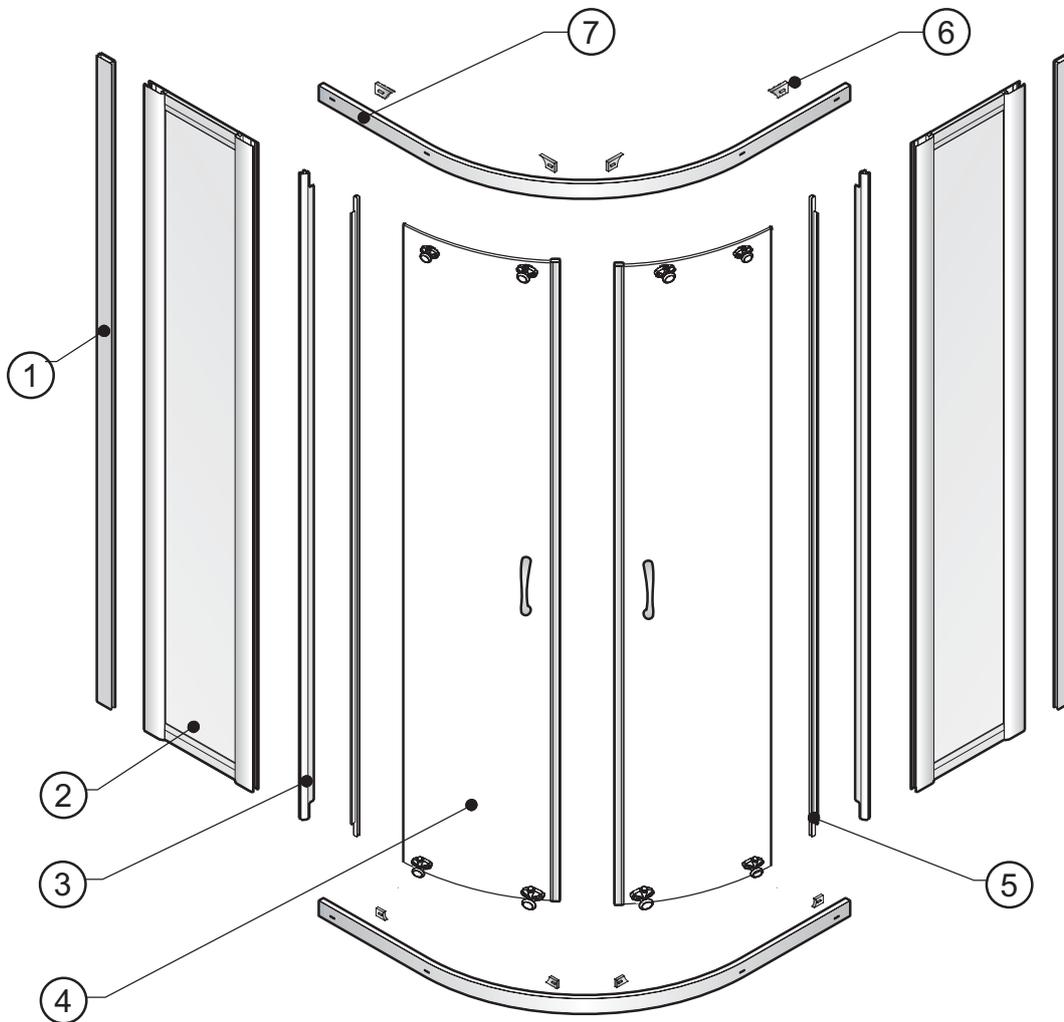


- ① WALL JAMB (2)
- ② FIXED PANEL (2)
- ③ FIXED PANEL COVER (2)
- ④ DOOR PANEL ASSEMBLY (2)





- ⑤ SIDE GASKET (2)
- ⑥ BUMPER (8)
- ⑦ TRACK (2)

# ◆ Installation Steps

## Step 1

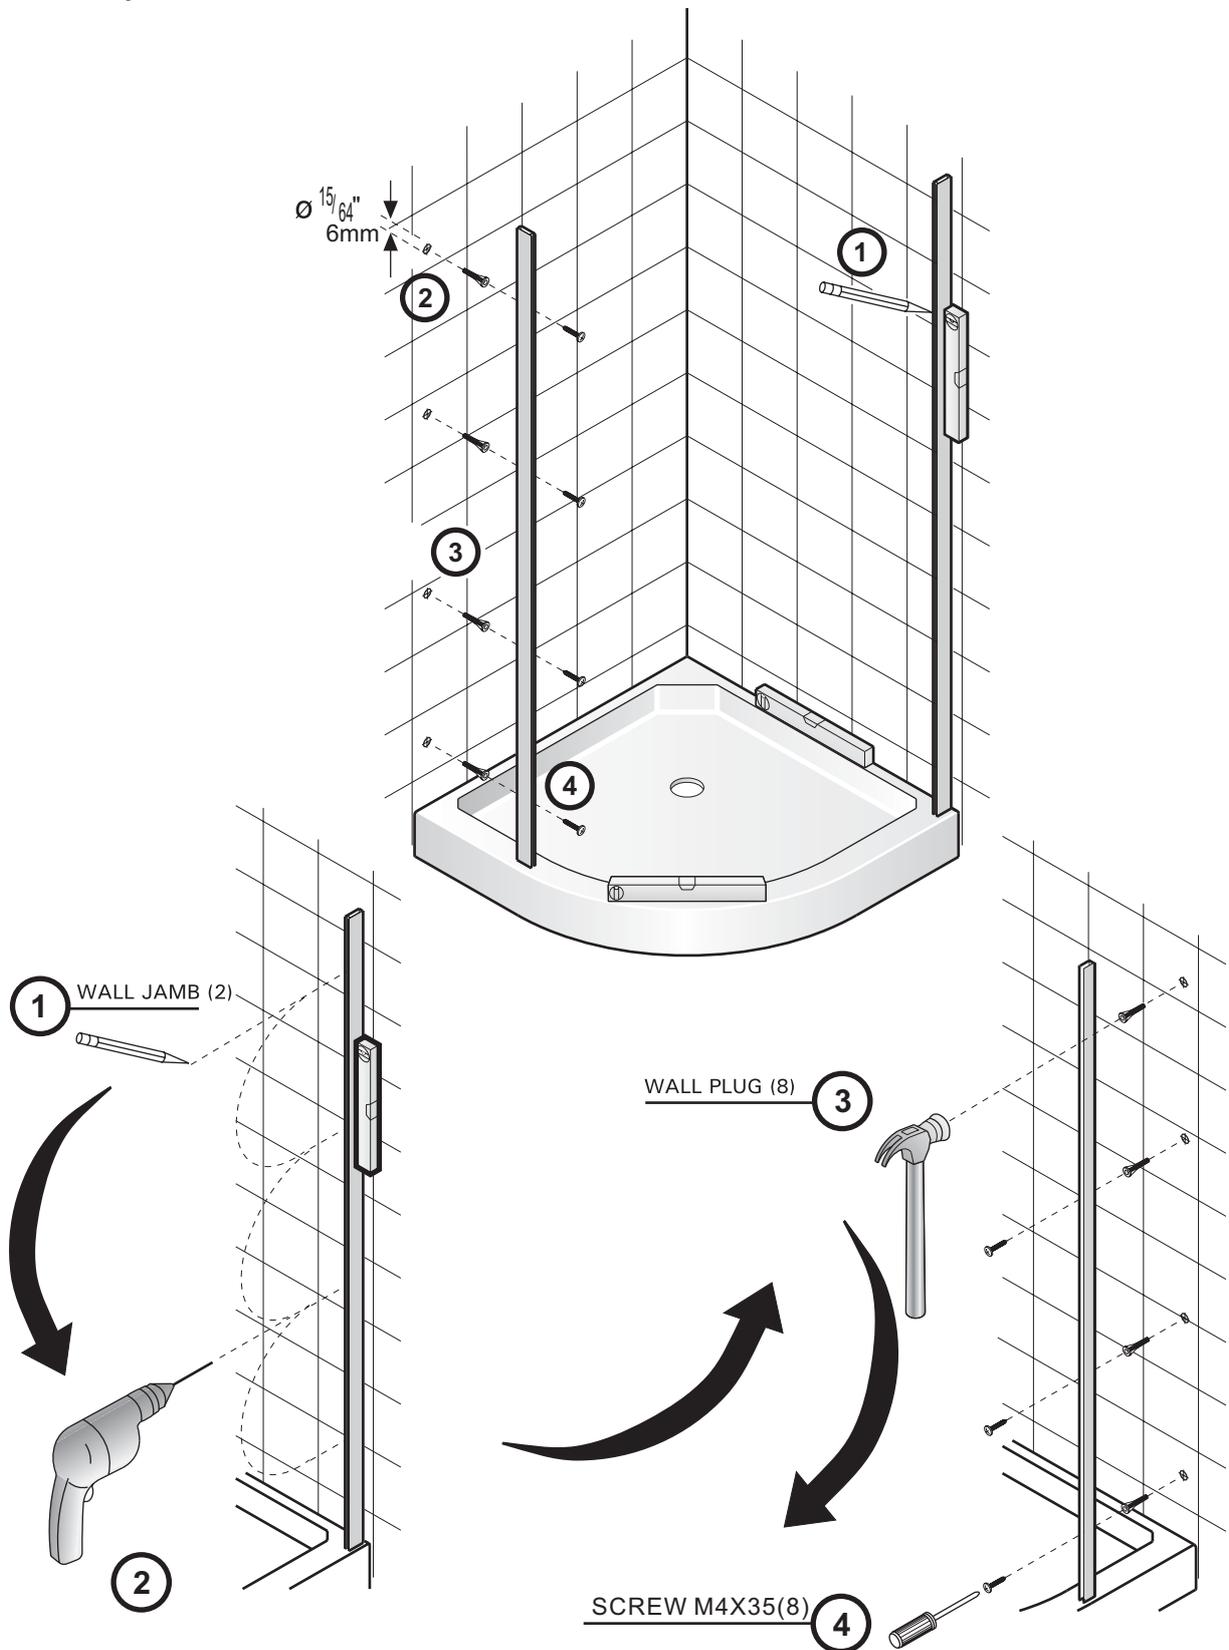


# Step 2

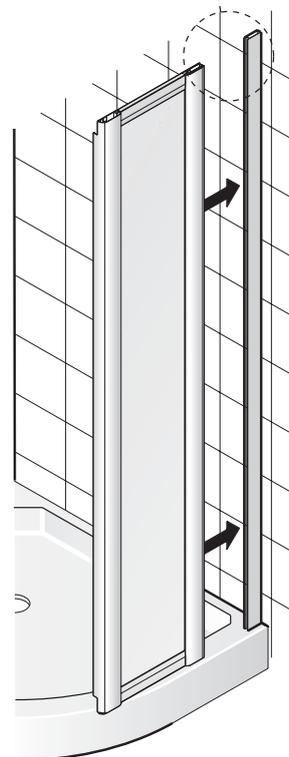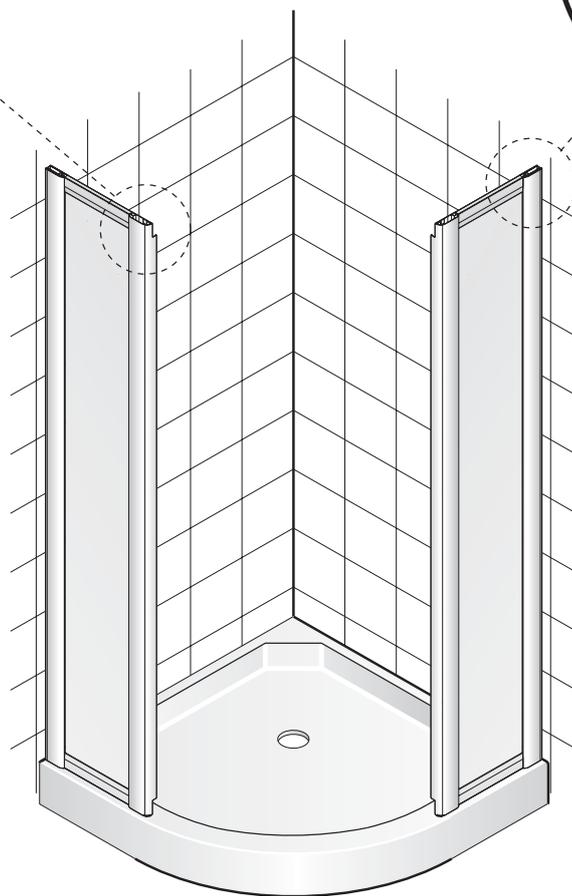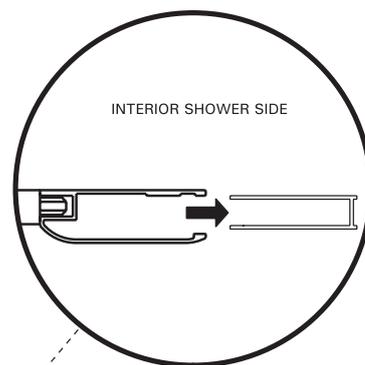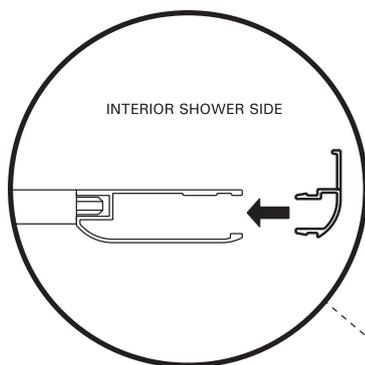

**1** SIDE PANEL COVER (2)  
INSERT INTO BOTH SIDE PANELS




**2** SIDE PANEL (2)  
INSERT ONTO BOTH WALL JAMBS

# Step 3

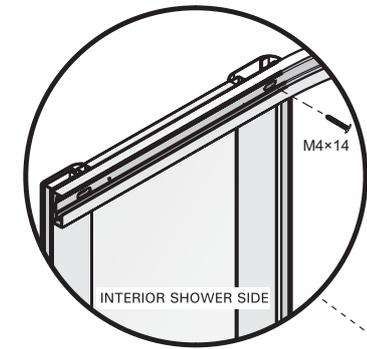

**4** SCREW M4X14LG(2)  
ATTACH TRACK TO FIXED PANELS


**3** TRACK (1) + FIXED PANEL (2)  
DRILL ON BOTH SIDE PANELS

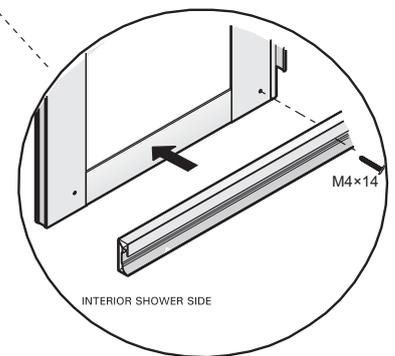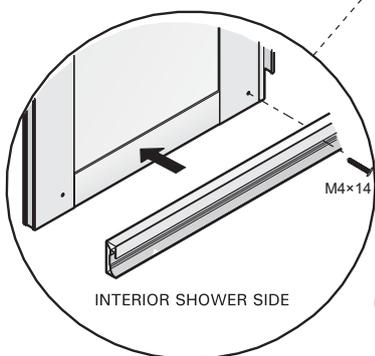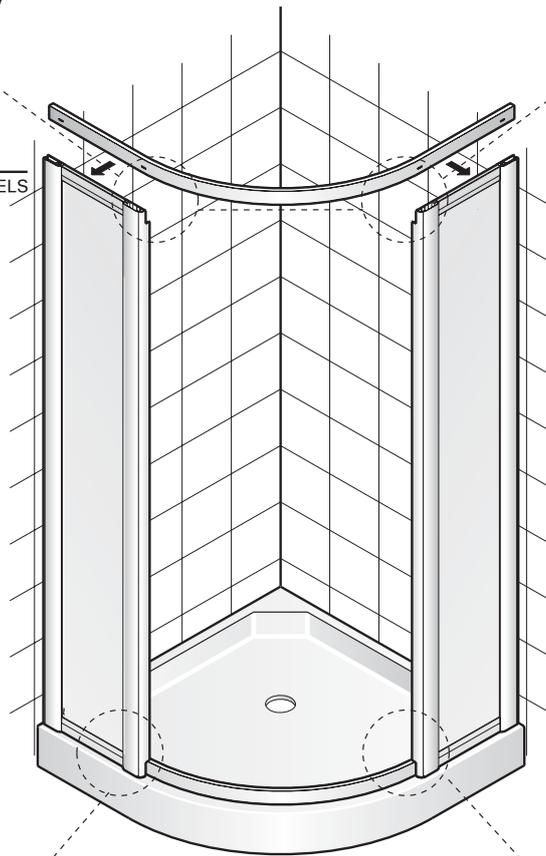

**1** TRACK (1) + FIXED PANEL (2)  
DRILL ON BOTH SIDE PANELS

**2** SCREW M4X14LG(2)  
ATTACH TRACK TO FIXED PANELS

# Step 4

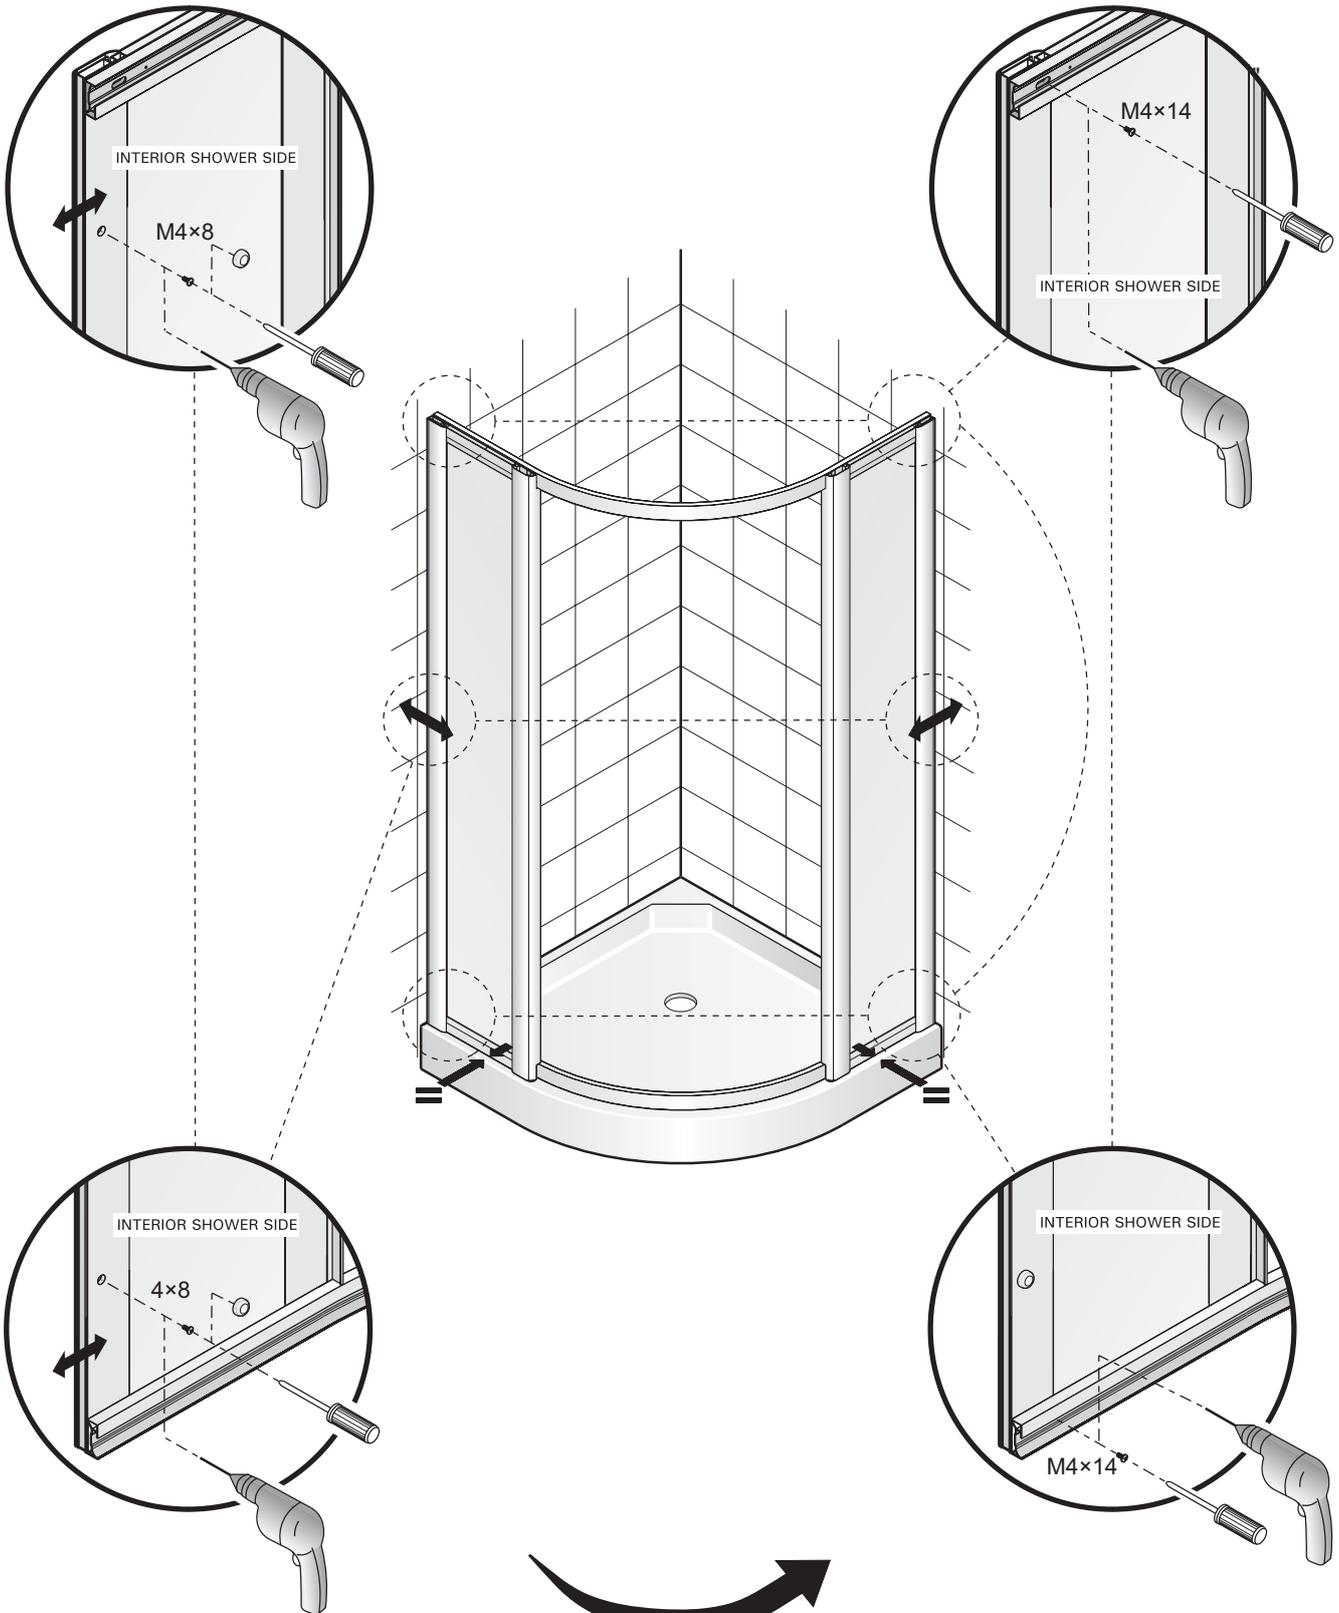


**1** SCREW M4X8LG(8)+SCREW(8)  
ATTACH FIXED PANELS ONCE ADJUSTED


**2** SCREW M4X14LG(2)  
ATTACH TRACK TO FIXED PANELS

# Step 5


1 GLIDER (4)  
INSTALL GLIDERS ON BOTH DOOR HAND

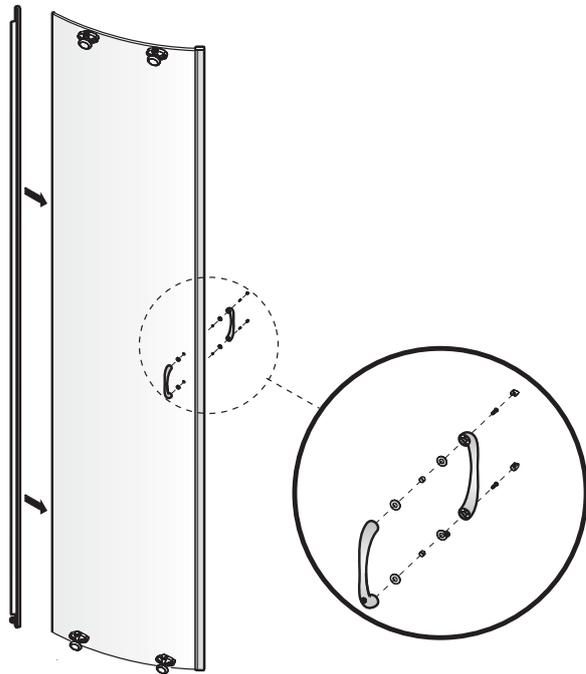

2 GLIDER (4)  
INSTALL GLIDERS ON BOTH DOOR PANELS

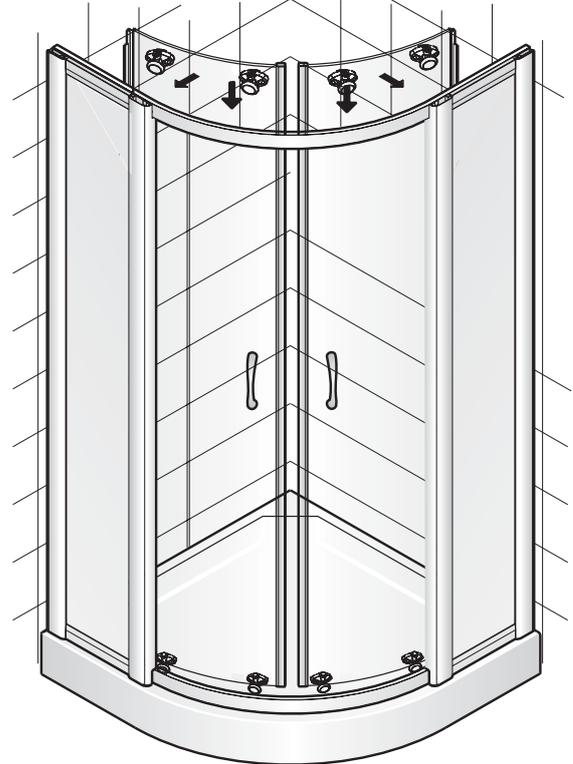


3 INSTALL BOTH DOOR PANELS BY  
HOOKING GLIDERS INTO THE TRACK

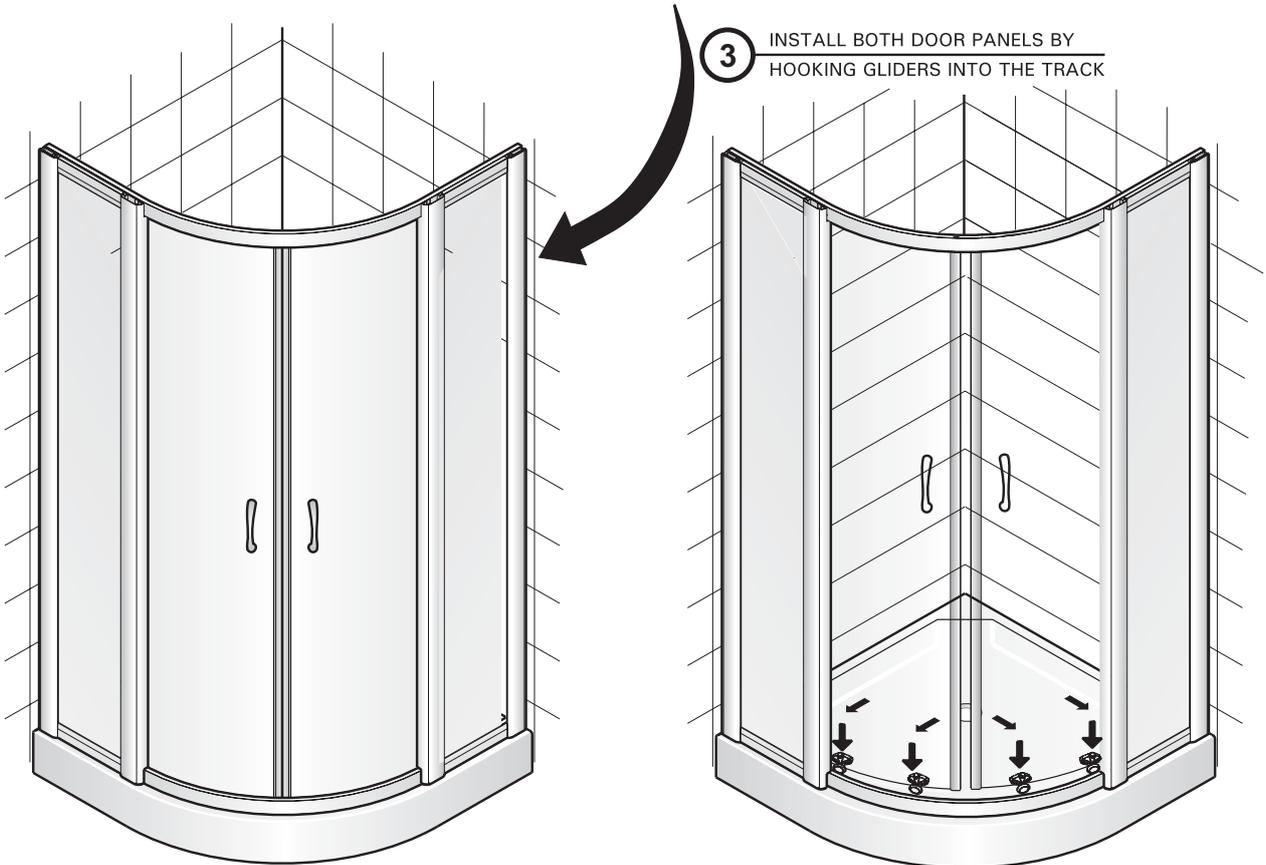






# Step 6

↻ DOOR UP

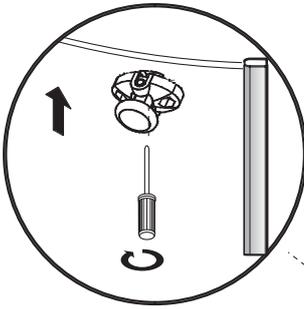


① TURN PLASTIC SET SCREW FOR VERTICAL DOOR ADJUSTMENT.

↻ DOOR DOWN

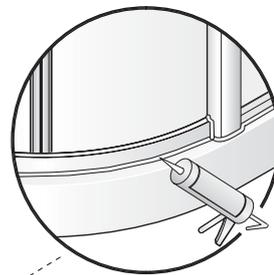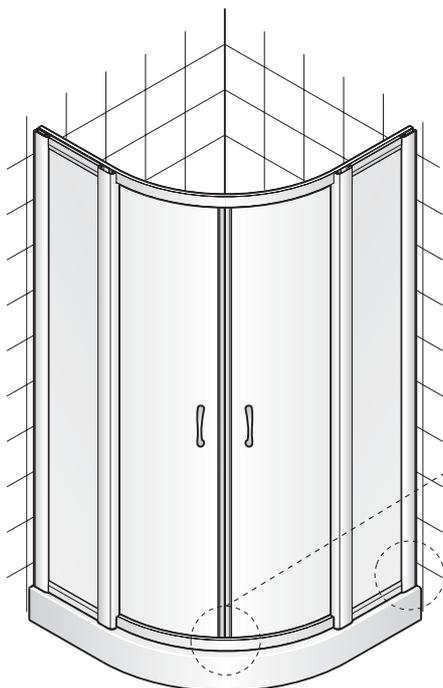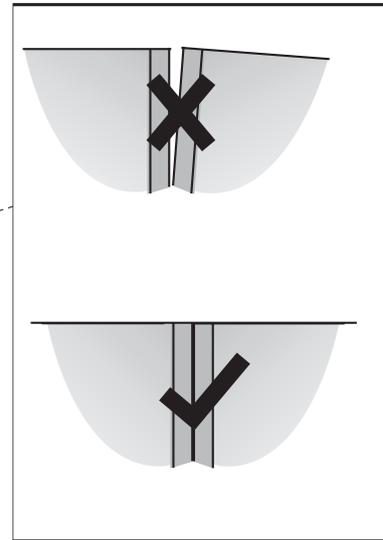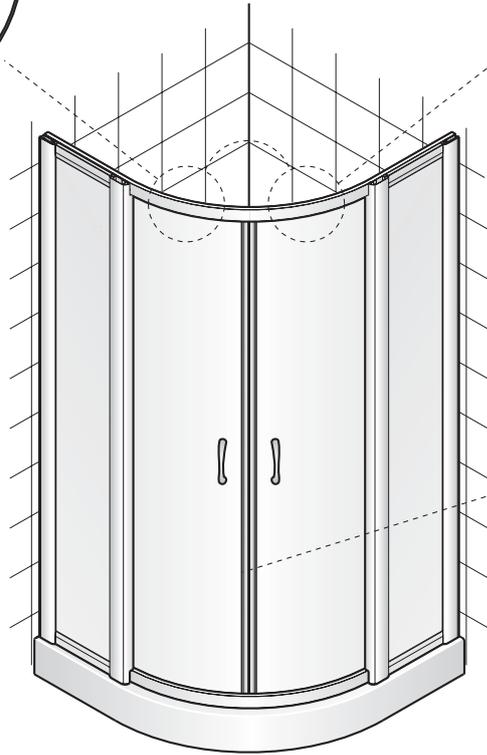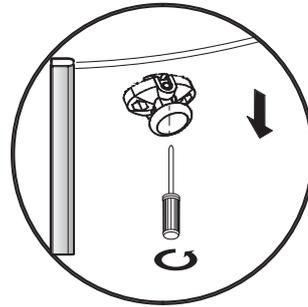

② SILICONE OUTSIDE OF THE SHOWER ALONG THE BOTTOM TRACK AND THE SIDE PANELS.

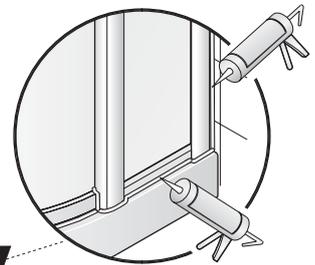

③ SILICONE OUTSIDE ON BOTH SIDE ALONG THE WALLJAMBS AND THE WALLS.

