


# CH6122A Instruction Manual

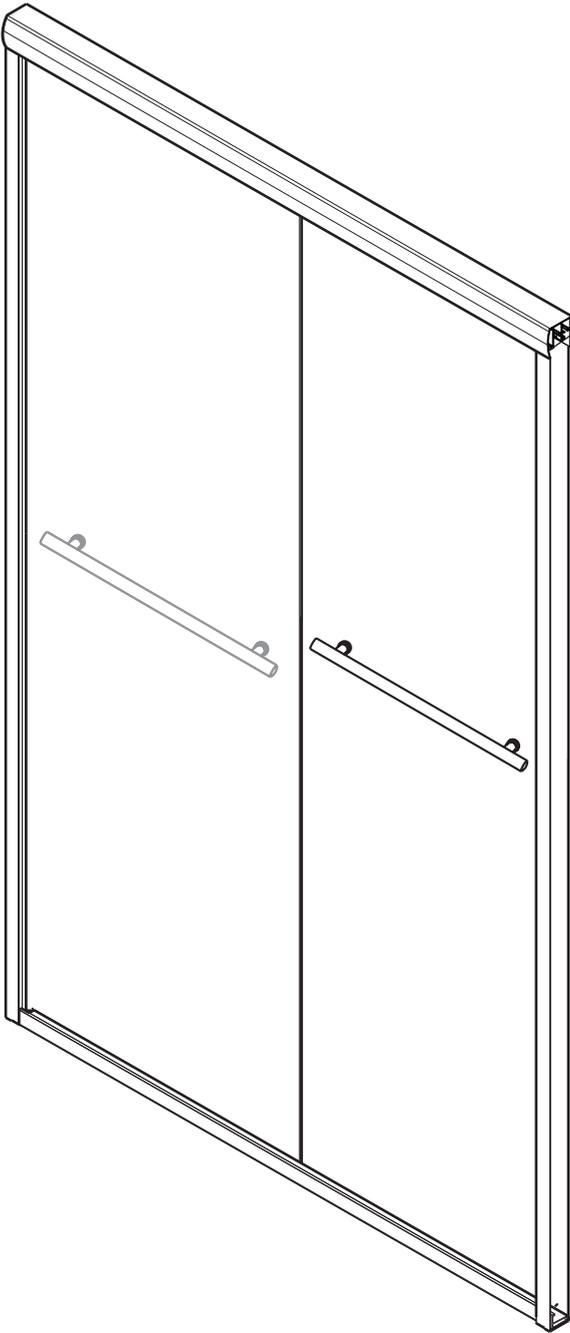

## ◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

## Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.


Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.


Please keep these instructions for aftercare and customer service details.

---


## Tools Required

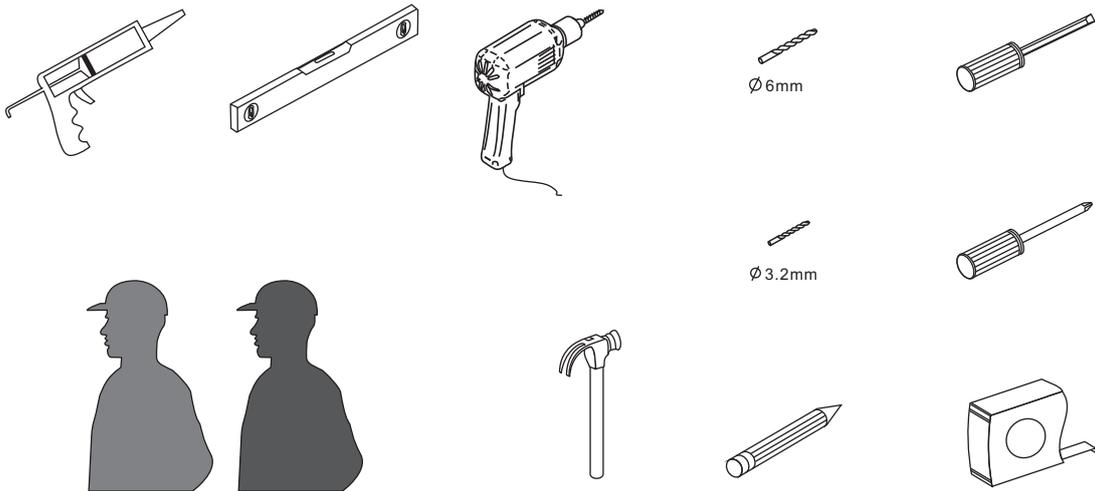

**This product is heavy and may require two people to install.**

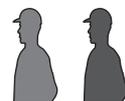

## ◆ Assembly Drawing


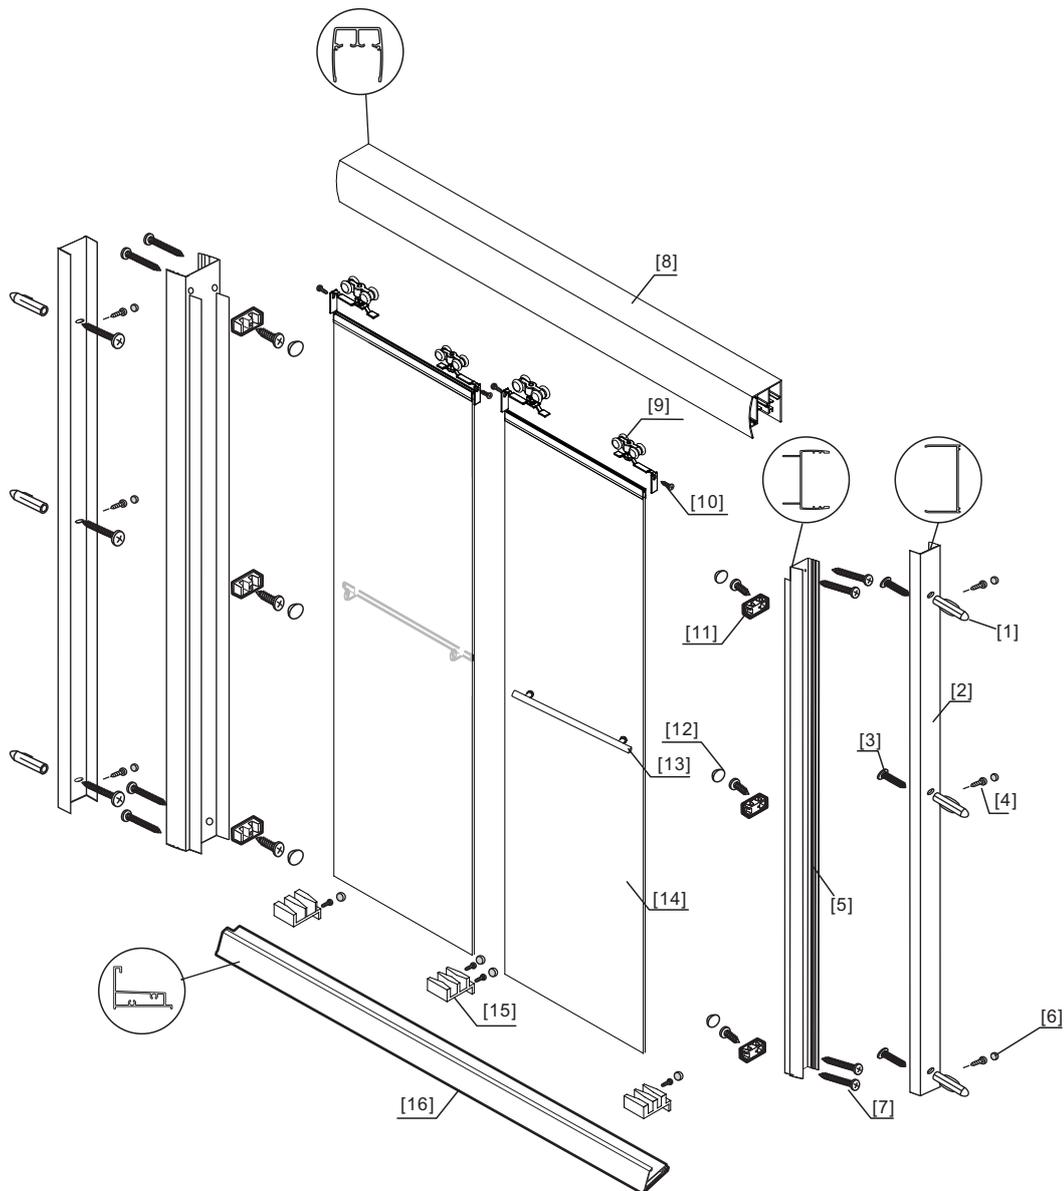


- [1] 6x Wall Plugs Jamp
- [2] 2x Fixed Panel Wall Jamp
- [3] 6x Flat Screws M4x35
- [4] 6x Screws M4x8
- [5] 2x Posts
- [6] 10x Screw Cover caps
- [7] 8X Screws M4x25
- [8] 1x Top Horizontal Rail

- [9] 4x Top Rollers
- [10] 8x Screws M4x10
- [11] 6x Glass Blocks
- [12] 6x Glass Block caps
- [13] 2x Handle Sets
- [14] 2x Door Panels
- [15] 3x Glass Tracks
- [16] 1x Bottm Horizontal Rail

# ◆ Installation Steps


## Step 1

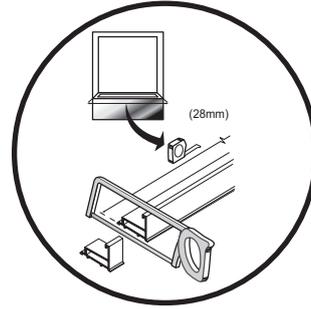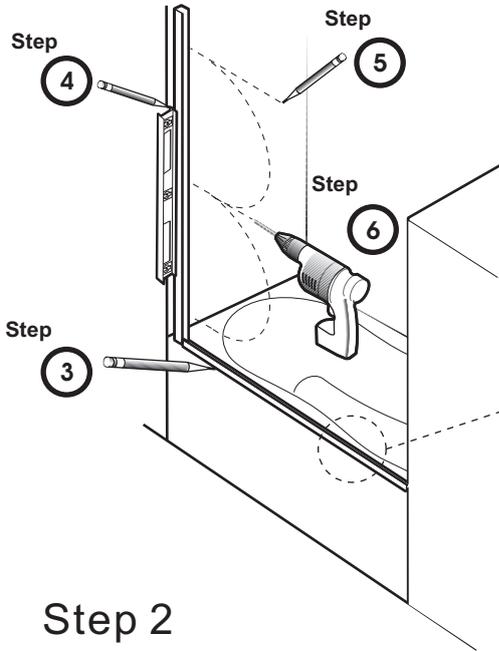

### Step

MEASURE THE BOTTON OF INSTALLATION, CUT THE SPARE LENGTH (MEASUREMENT LENGTH SUBTRACT 28mm) WIT A SAW IF THE SIZE YOU WANT IS LESS THAN 1500mm

7A

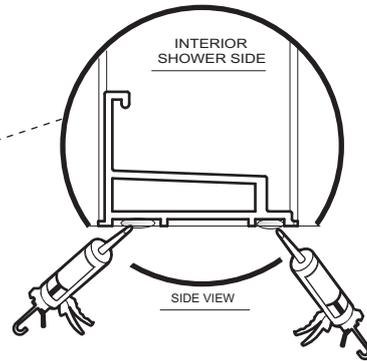



7B

BOTTOM TRACK (1) SILICONE UNDERNEATH

## Step 2

### Step

8 WALL PLUG (6)

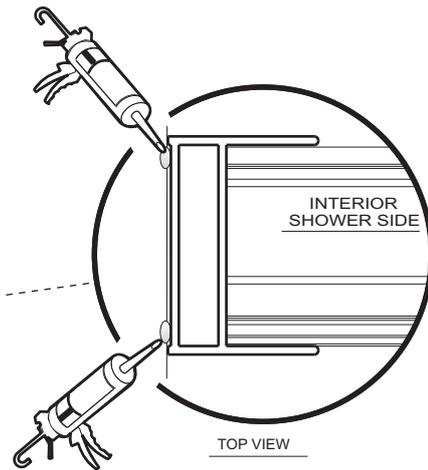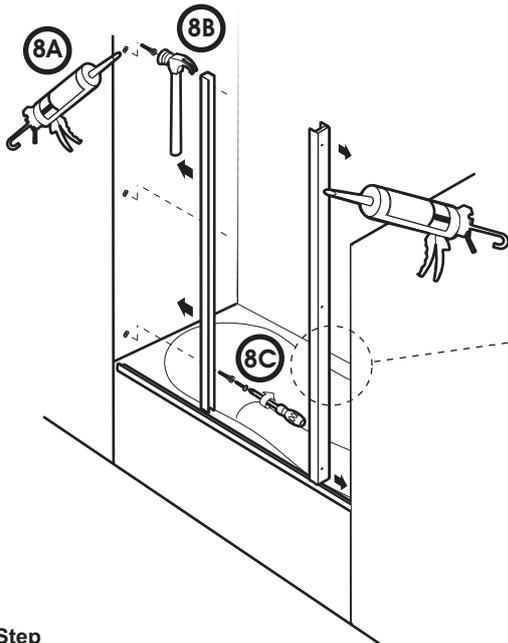

### Step

9

WALL JAMB (2) SILICONE ON BACKSIDE



### Step

10 SCREW 1 3/8" LG (6) ATTACH BOTH WALL JAMBS




# Step 3

Step **13A** MEASURE THE TOP OF INSTALLATION, CUT THE SPARE LENGTH WITH A SAW IF IT'S LESS THAN 1500mm


Step **11** FASTEN BUMPER (6) ONTO BOTH WALL JAMBS WITH 5/8" SCREW

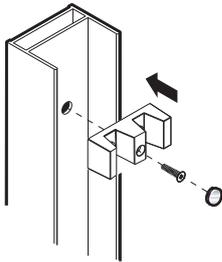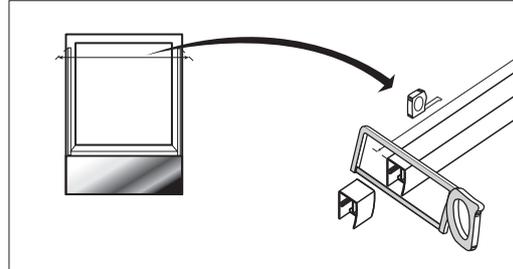

Step **13B** PLACE TOP RAIL ON THE WALL JAMBS.

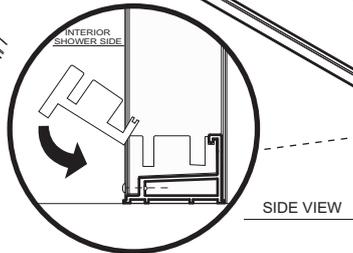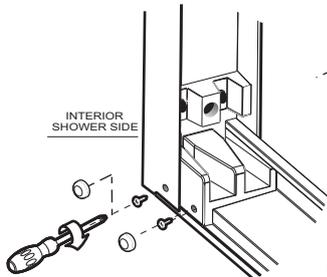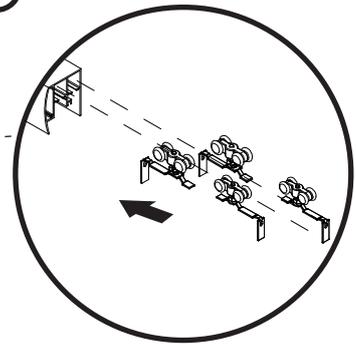

Step **12** - FASTEN SIDE GUIDES (2) ONTO WALL JAMBS AND BOTTOM TRACK WITH 5/8" SCREW  
- PUT SCREW CAP.

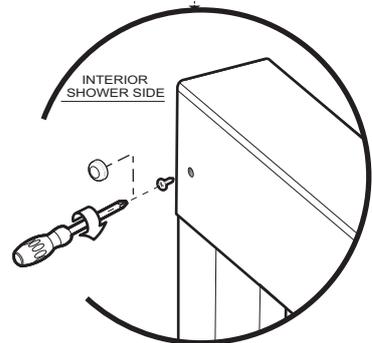


Step **14** - FASTEN TOP TRACK ONTO WALL JAMBS WITH 5/8" SCREW.  
- PUT SCREW CAP.

# Step 4

Step

**15** INSERT OUTER DOOR PANEL BY LIFTING UP & INTO TOP TRACK

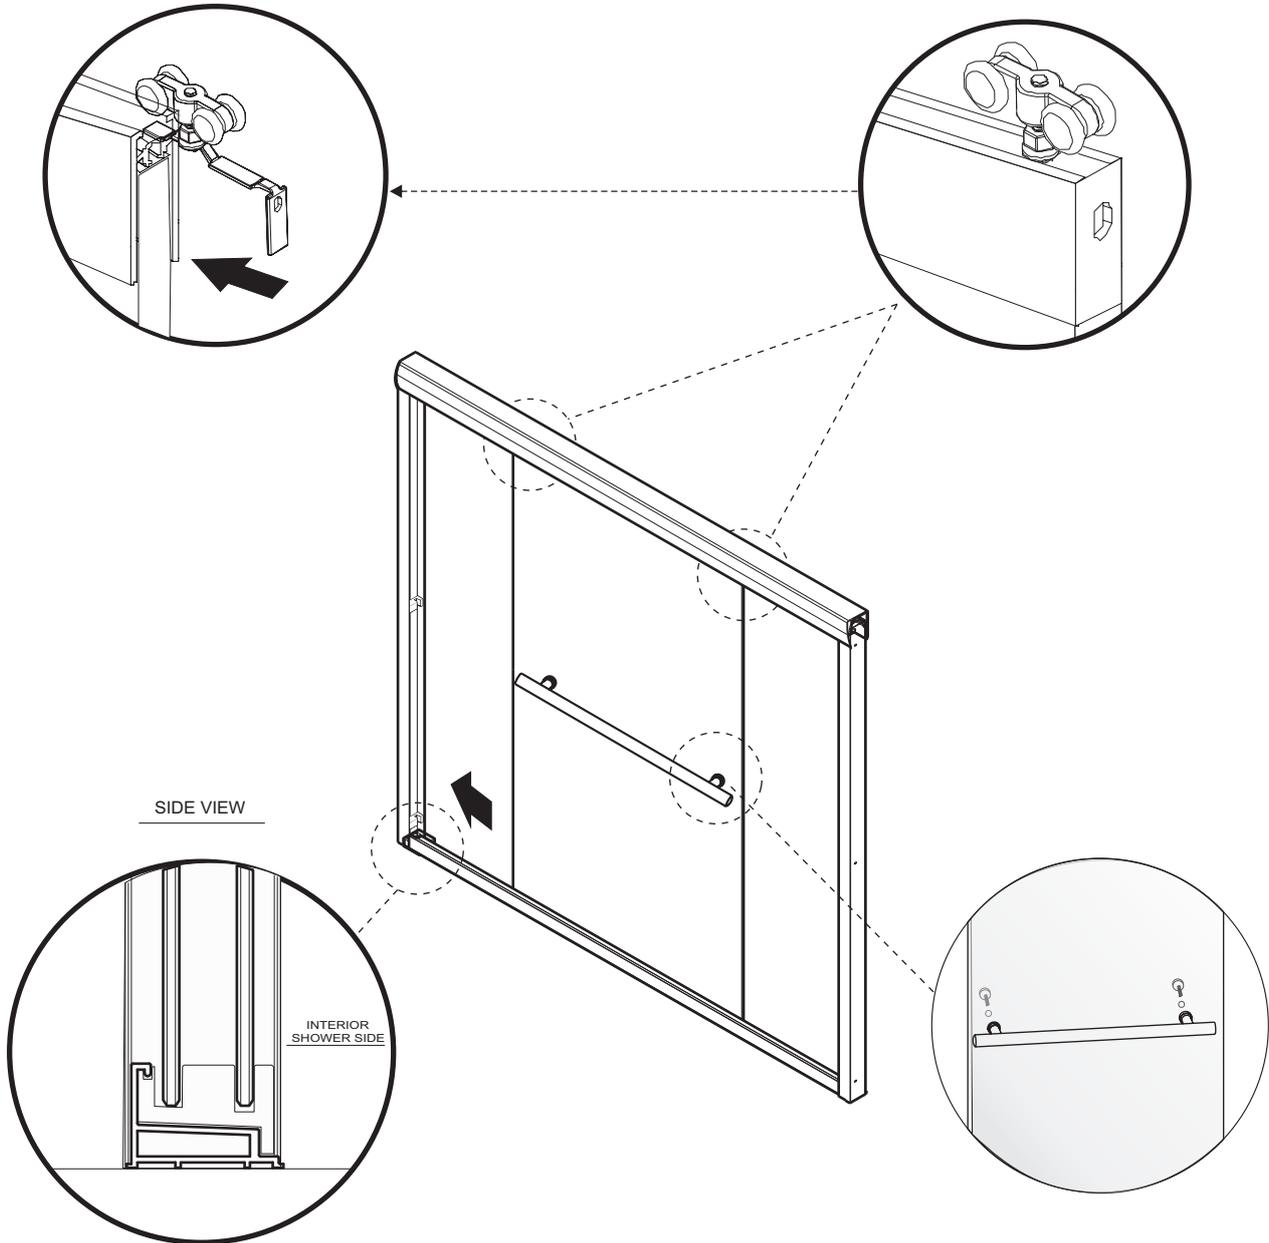

Step

**16** SLIDE OUTER PANEL INTO SIDE GUIDE.

# Step 5

