


INSTALLATION INSTRUCTIONS

CLD6121

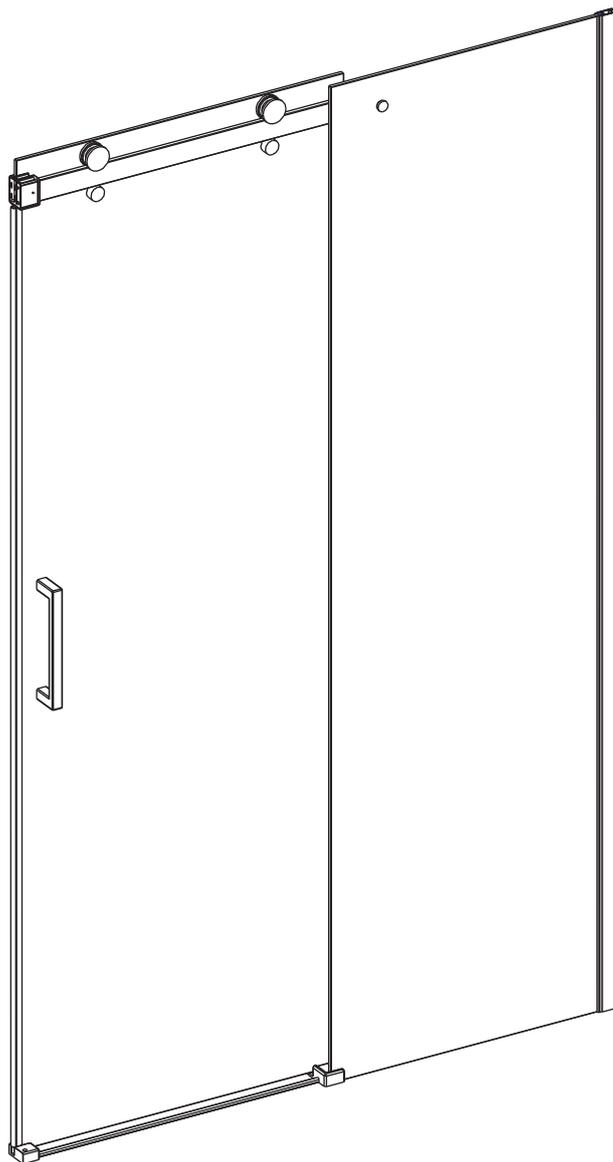

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.


Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.


Tools Required

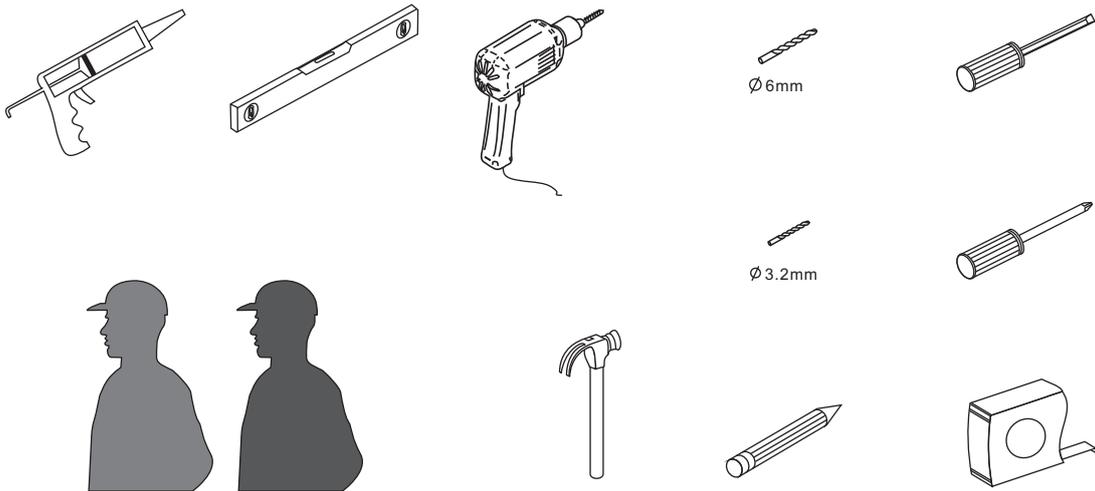

This product is heavy and may require two people to install.

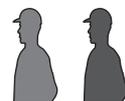


◆ Assembly Drawing

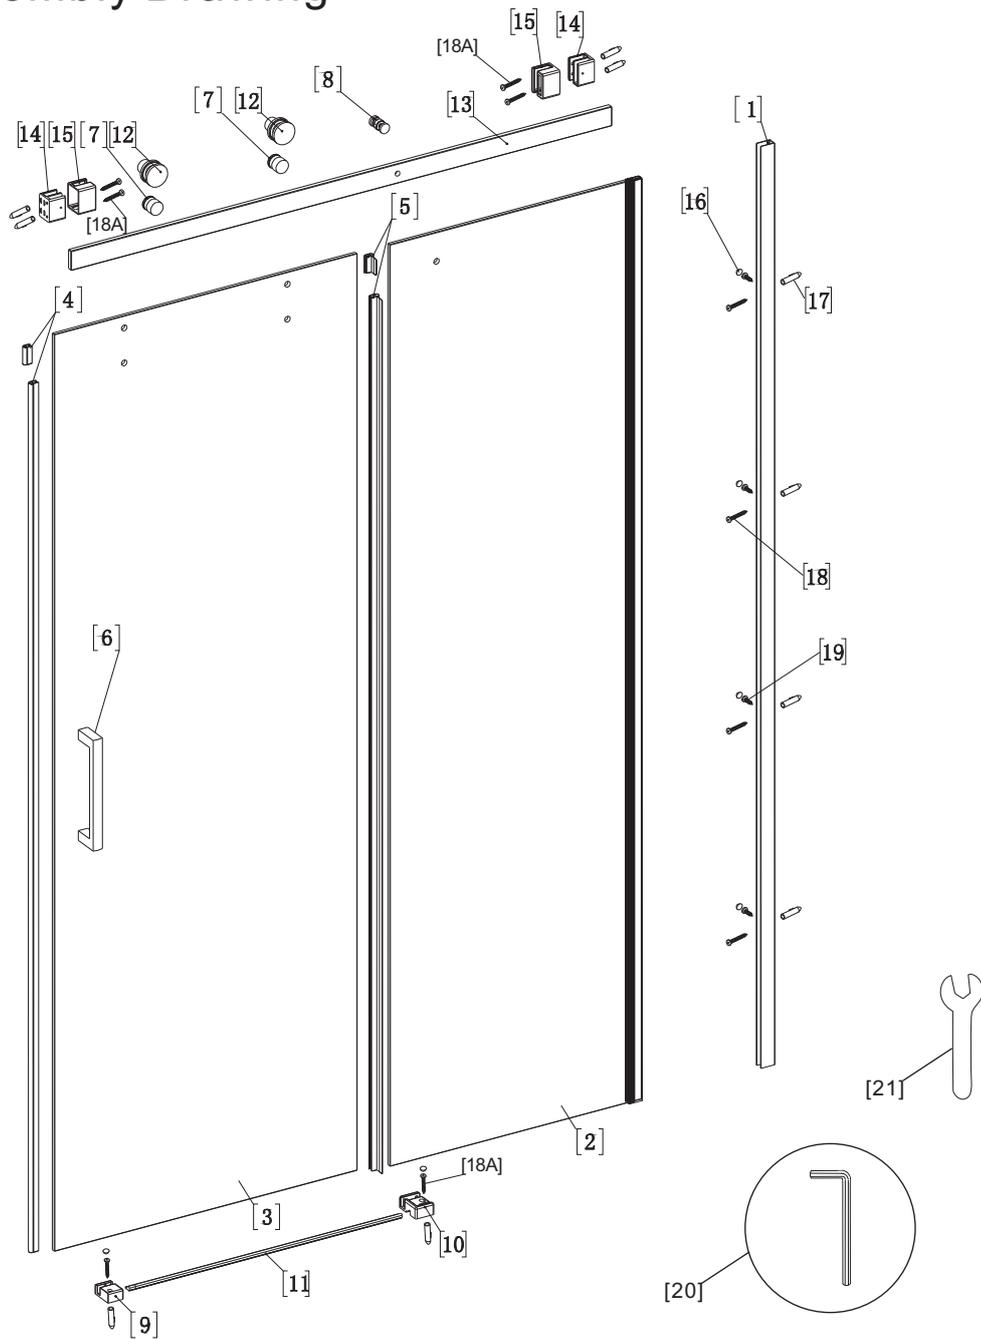


Item no.in exploded drawing picture	Description	Q'TY	Item no.in exploded drawing picture	Description	Q'TY
1	Wall jamb	1	12	Roller Sets	2
2	Fixed Panel	1	13	Rail	1
3	Door Panel	1	14	Square Wall Joints(L/R)	2
4	Gasket	2	15	Wall Caps	2
5	Gasket	2	16	Screw Cover Caps	4
6	Handle Set	1	17	Wall Plugs	10
7	Lock In Knob Sets	2	18	Screws M4x35	4
8	Glass Fixing Piece	1	18A	Screws M4x35	6
9	End Block(L/R)	2	19	Screws M4x8	4
10	Sliding Block(L/R)	2	20	Allen Wrench	1
11	Drip Rail	1	21	Wrench	1

◆ Installation Steps:



Step 1

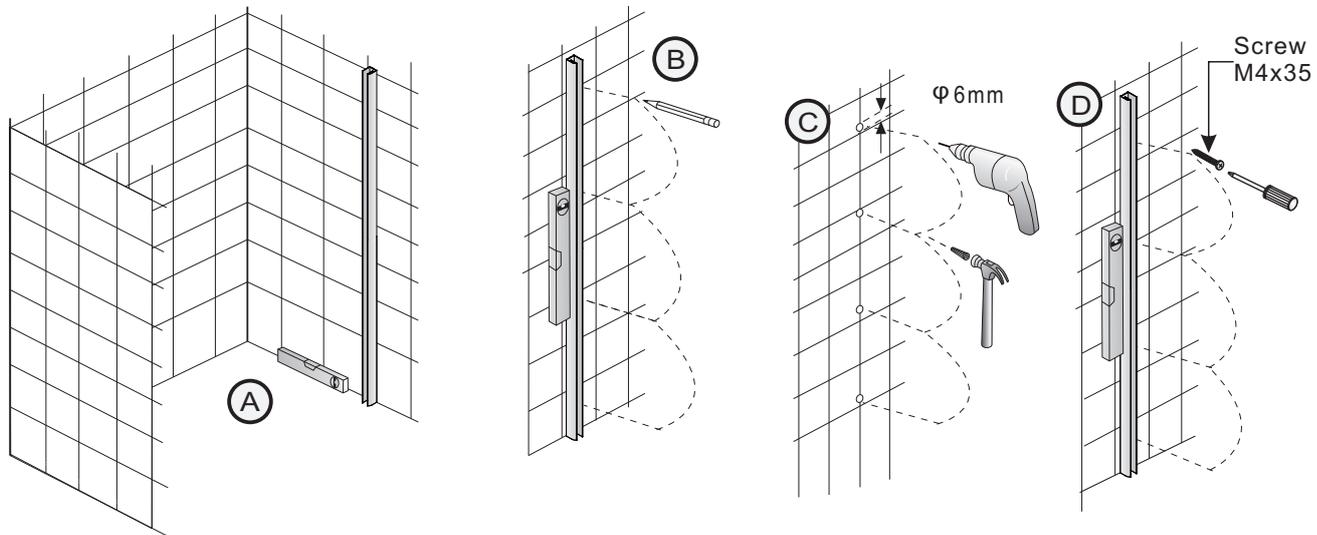



Step 2

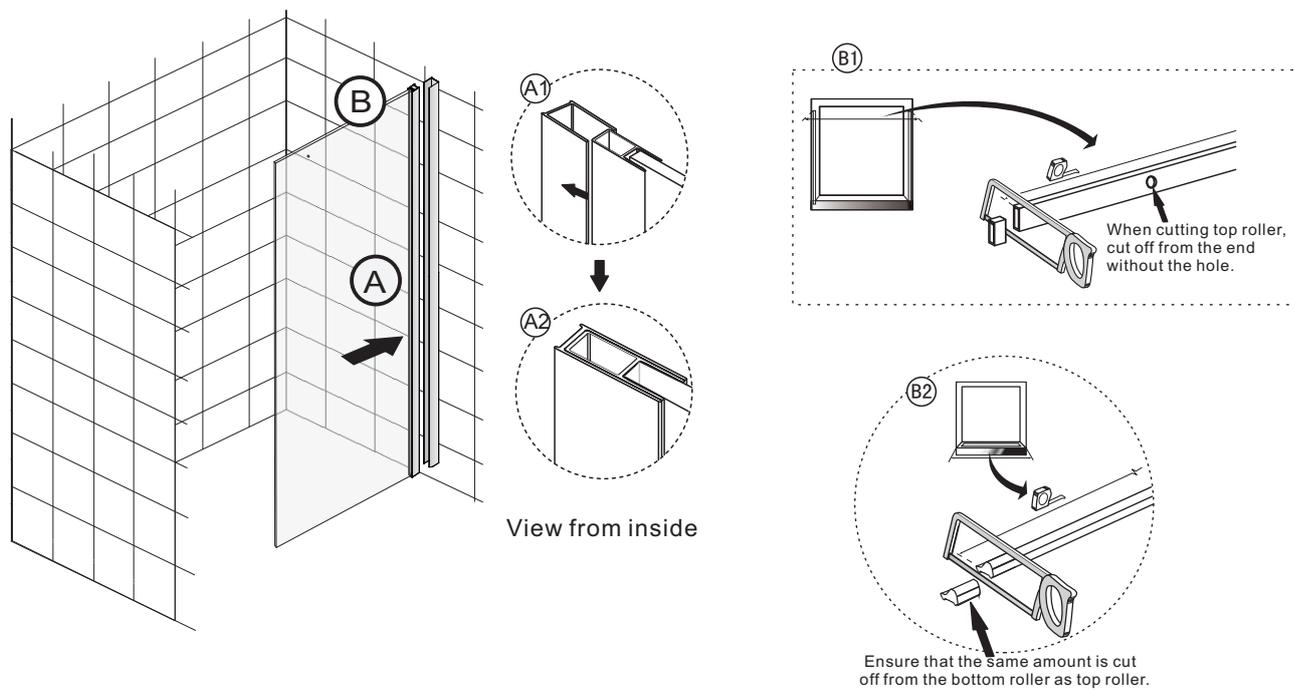



Step 3

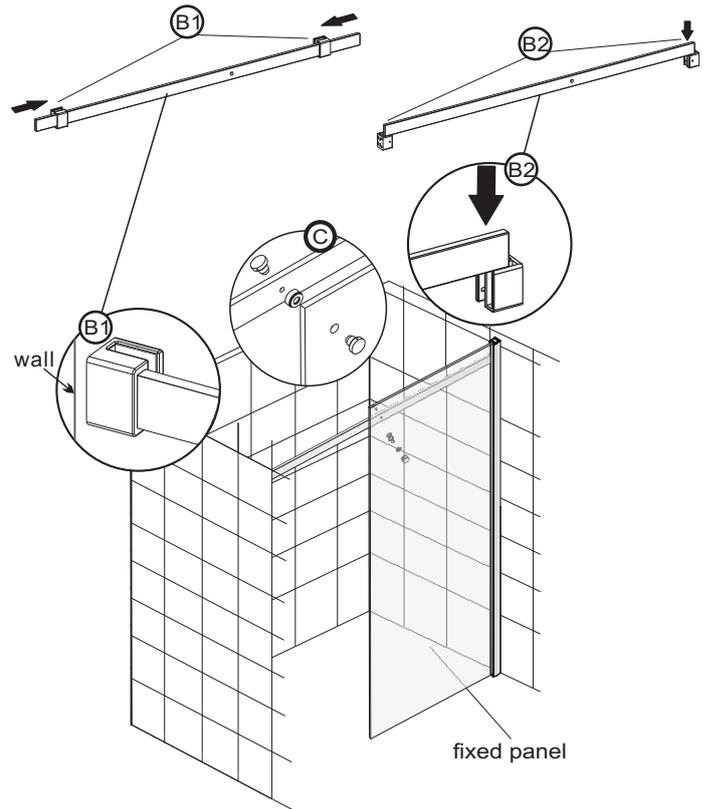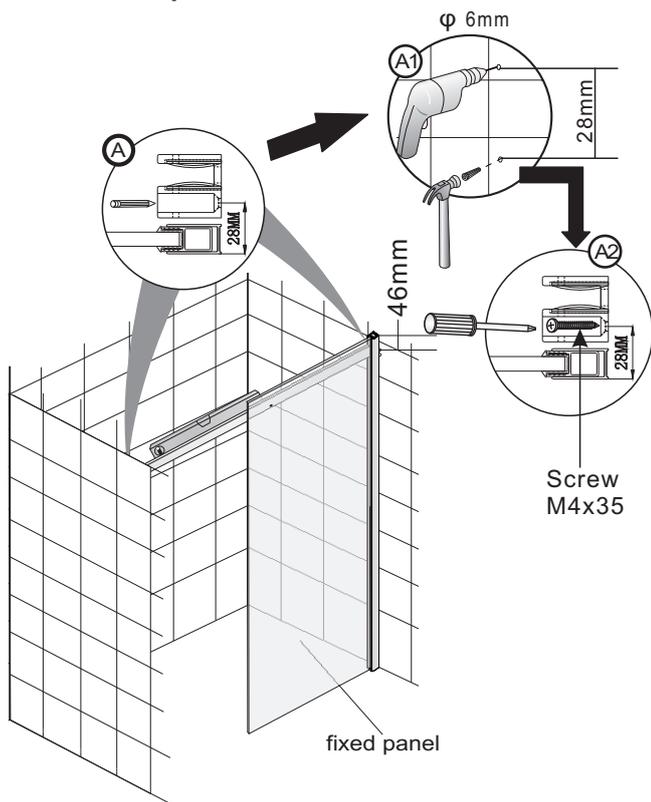



Step 4

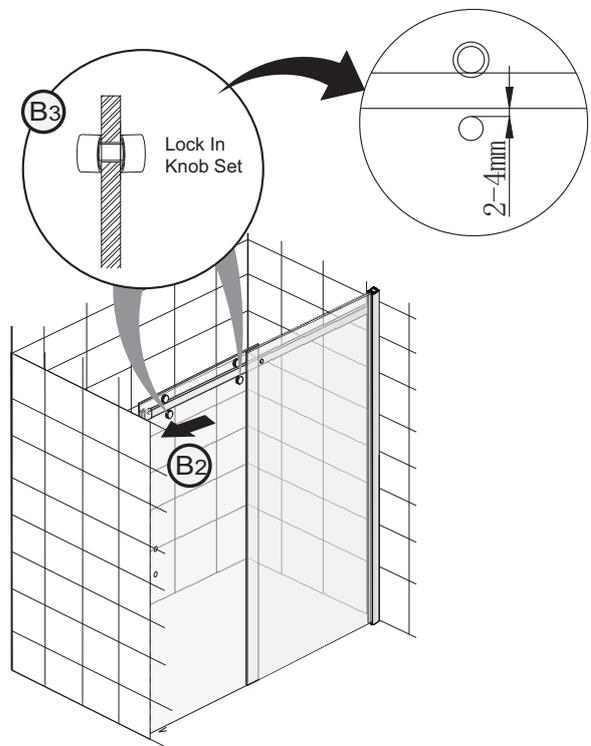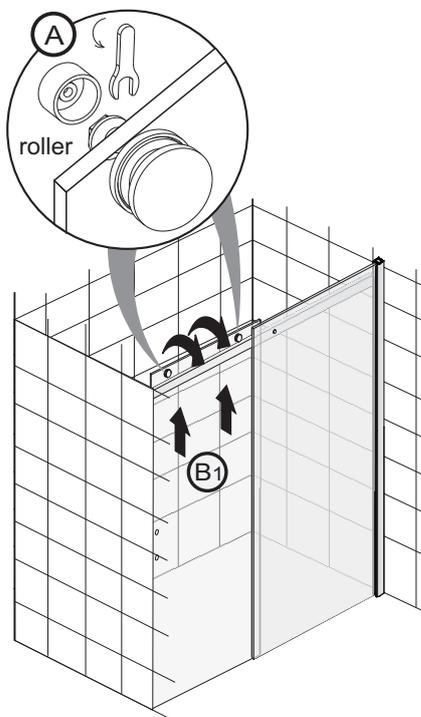


Step 5

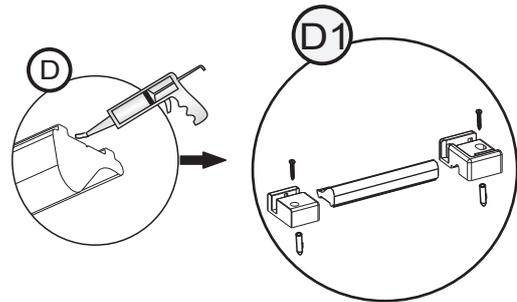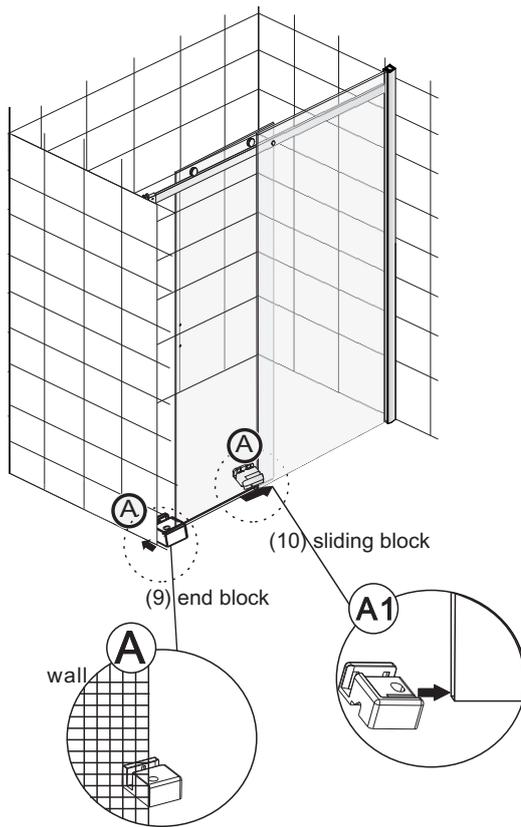

Step 6

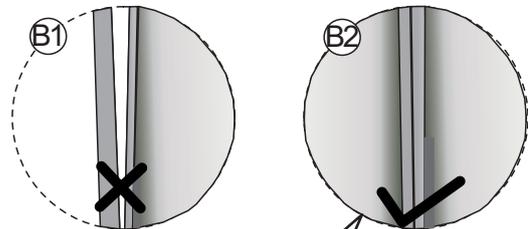
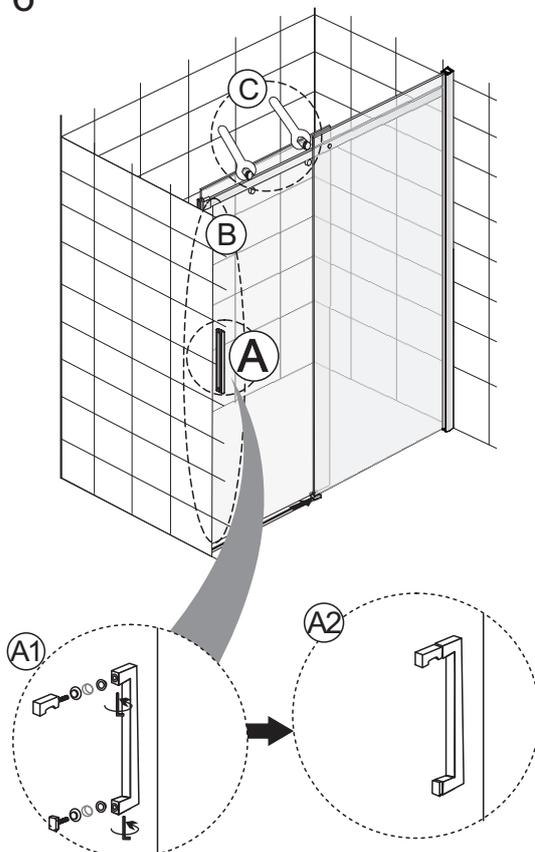


! Adjust the sliding doors using the screws located on the bottom of top roller assemblies. Adjust rollers so that the sliding doors are parallel to the fixed panels and parallel to each other.
 Note: Do not overtighten top rollers as this will cause the bottom rollers to jamb and or break.

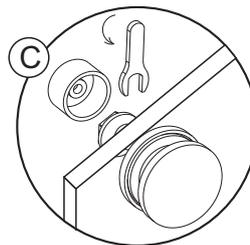


Step 7

Note: drill holes from the inside of the shower

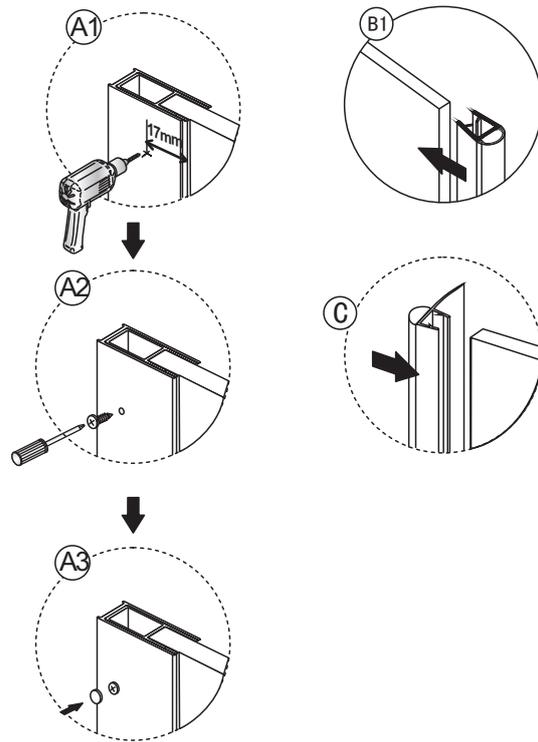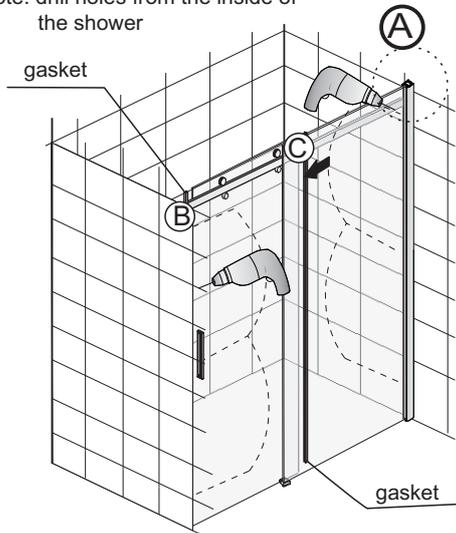

View from inside

Step 8

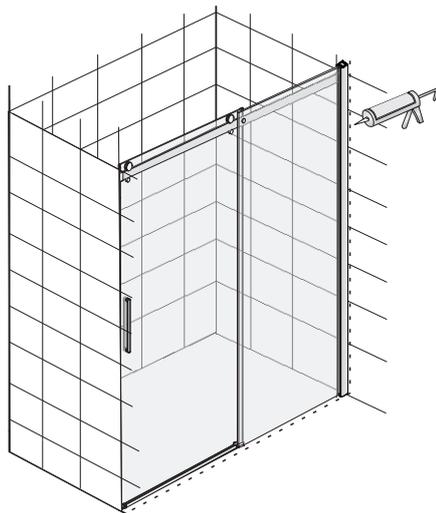

Allow 24 hours for silicone to dry before use.