


INSTALLATION INSTRUCTIONS

CP4121

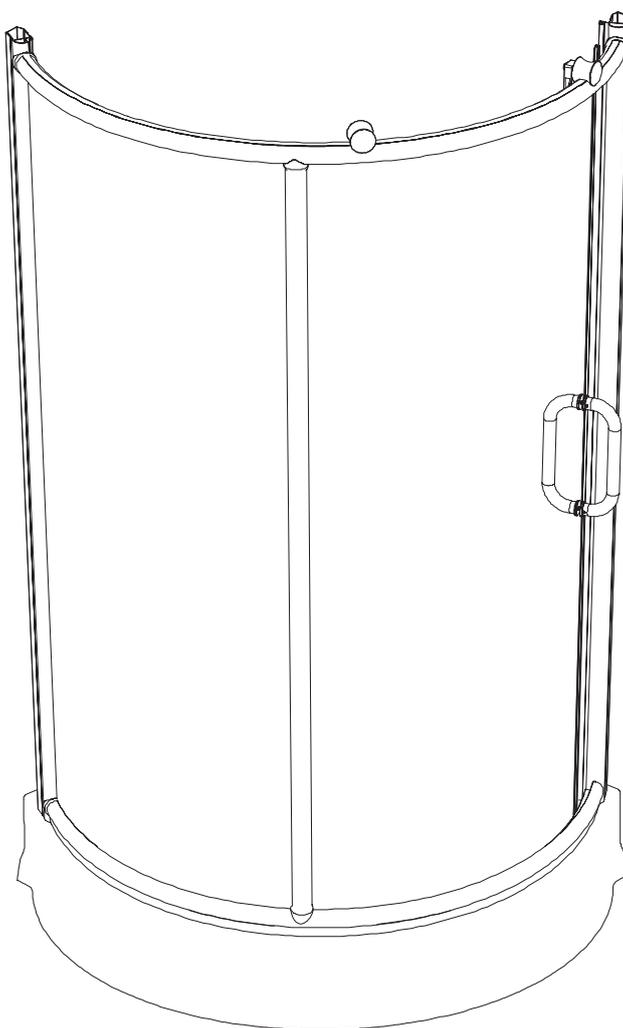

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions








After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.


Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.


Tools Required

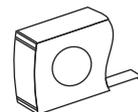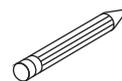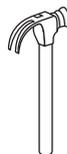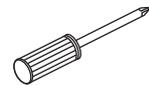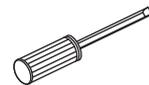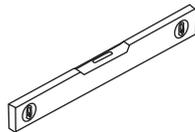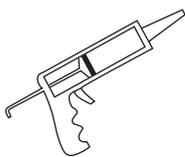

This product is heavy and may require two people to install.

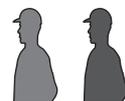

◆ Assembly Drawing

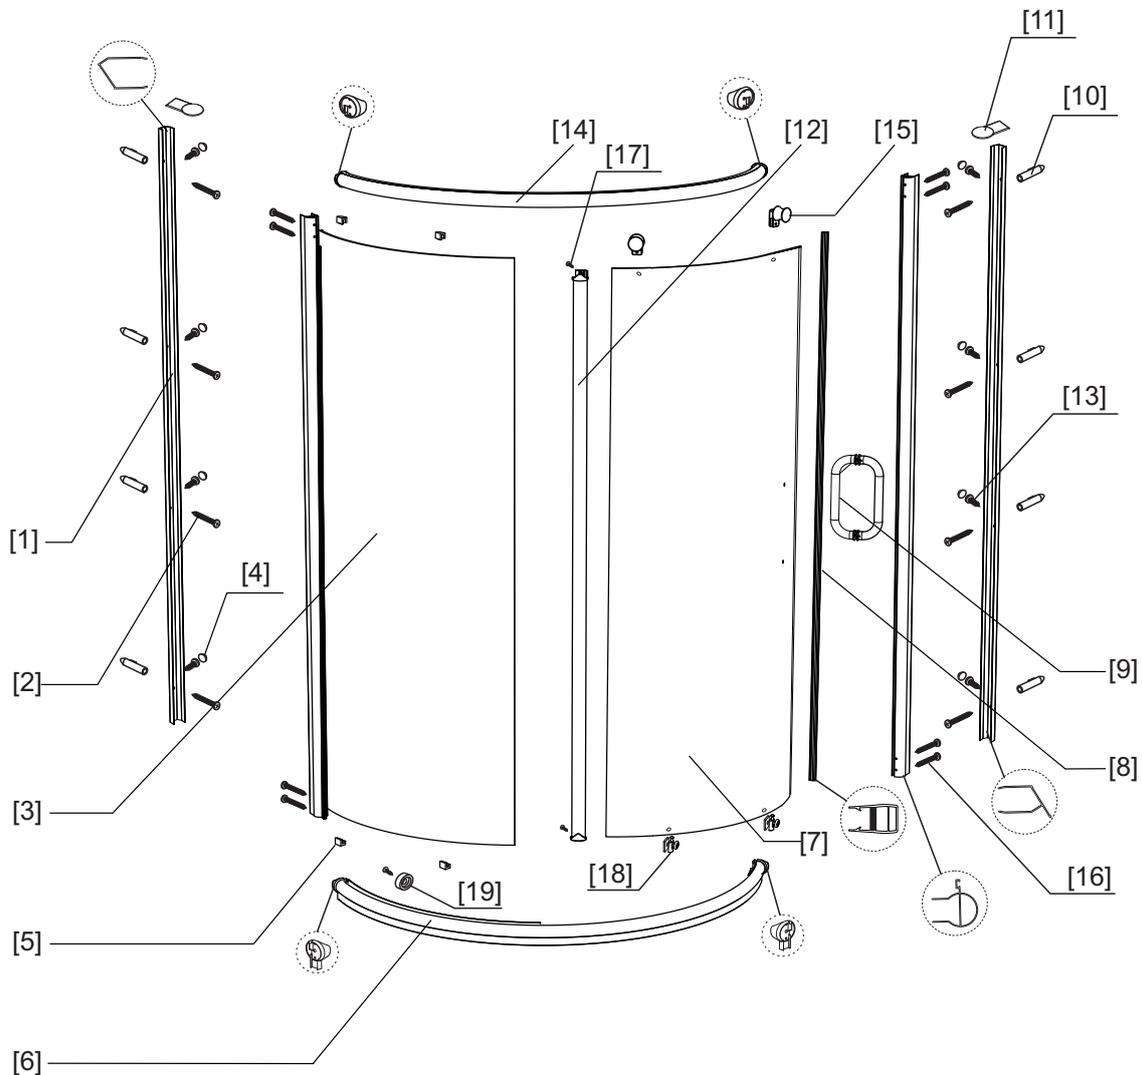


- [1] 2xWall Jambs
- [2] 8xScrews M4x30
- [3] 1xFixed Panel
- [4] 8xScrew Cover Caps
- [5] 4xGlass Supports
- [6] 1xBottom Track
- [7] 1xDoor Panel
- [8] 1xDoor Magnet Gasket
- [9] 1xSet of Handle
- [10] 8xWall Plugs

- [11] 2xExpander Caps
- [12] 1xVertical Column
- [13] 9xScrews M4x12
- [14] 1xTop Track
- [15] 2xWheels
- [16] 8xScrews M4x50
- [17] 2xScrews M4x16
- [18] 2xBottom Rollers
- [19] 1xBumper


◆ Installation steps:

Step 1

1A. Using screws M4x50(x2), fasten the expander (#2) to the bottom track (#6) by placing the bottom connector between the bottom track and expander.

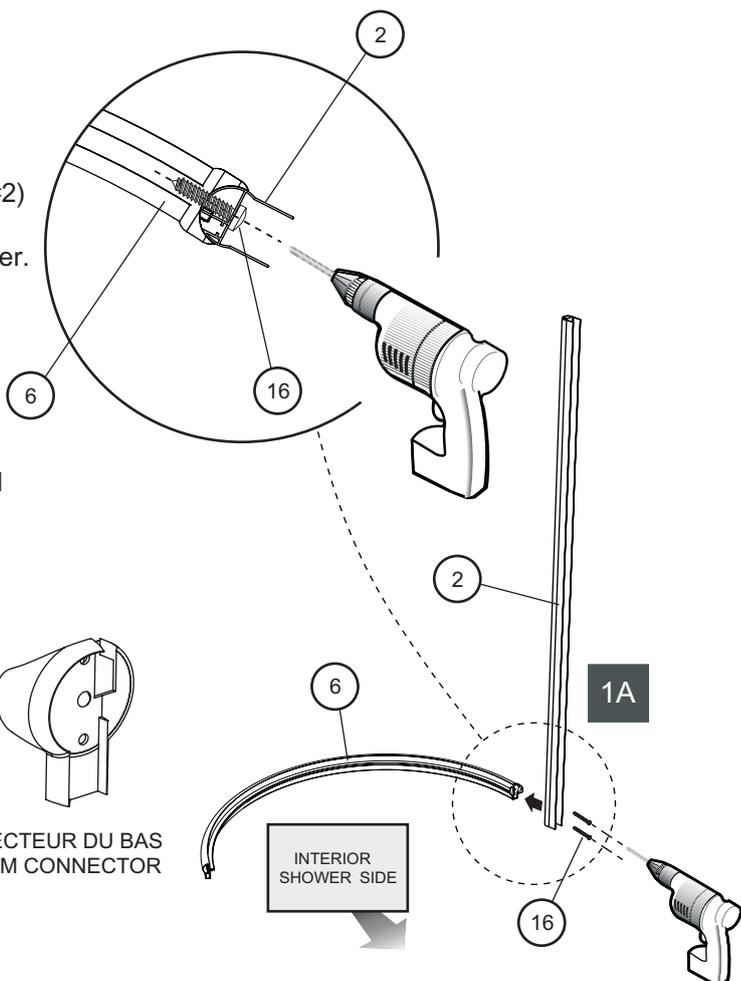

1B. Place glass clips (#5) on the bottom edge of the fixed panel and slide them into the expander and bottom track.

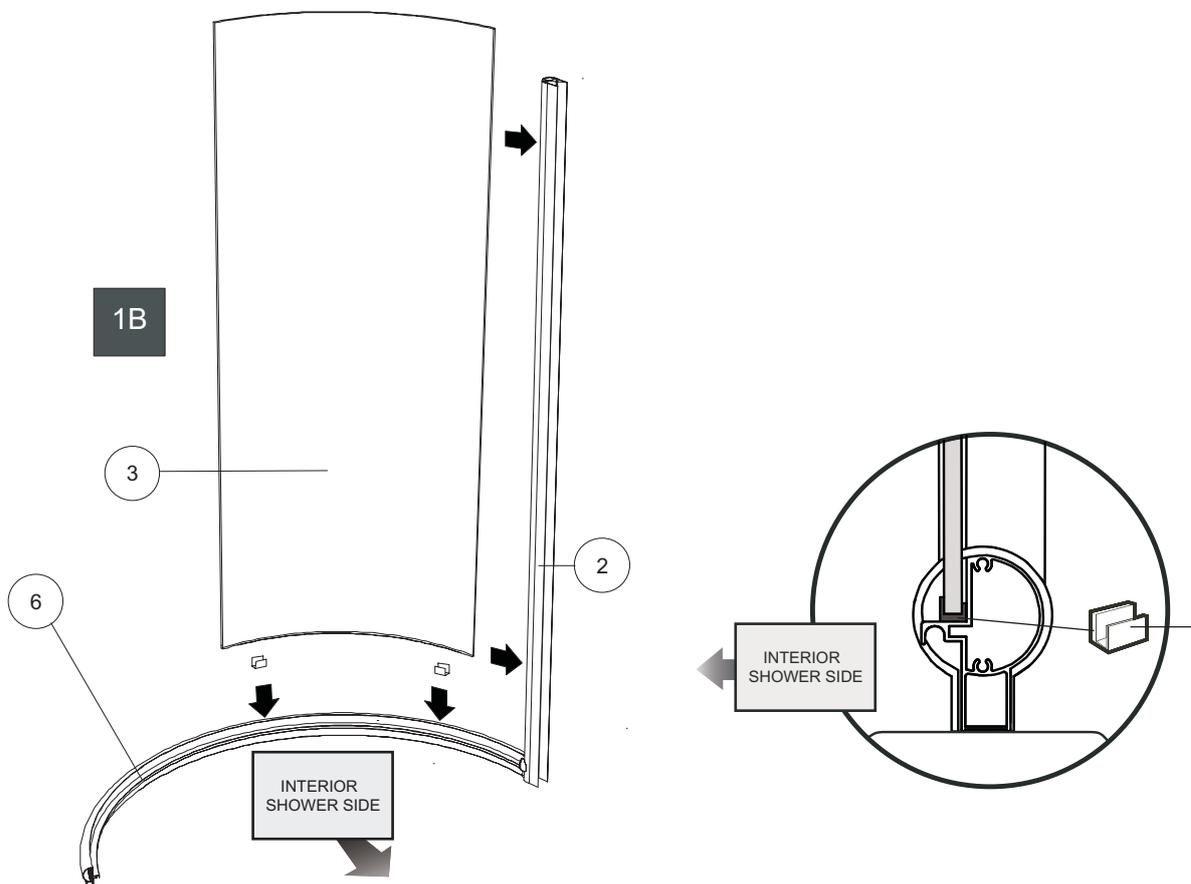


Step 2

2A. Place glass clips (#5) on the top edge of the fix panel. Fasten the top track (#14) using screws M4x50(x2) by placing the top connector between the top track and expander.

2B. Insert side gasket (#4) into vertical column (#12), before framing the fixed panel (#3).

2C. Screw the magnetic expander (#11) to the top and bottom tracks using the screws M4x50 (x4) by placing the two connectors between.

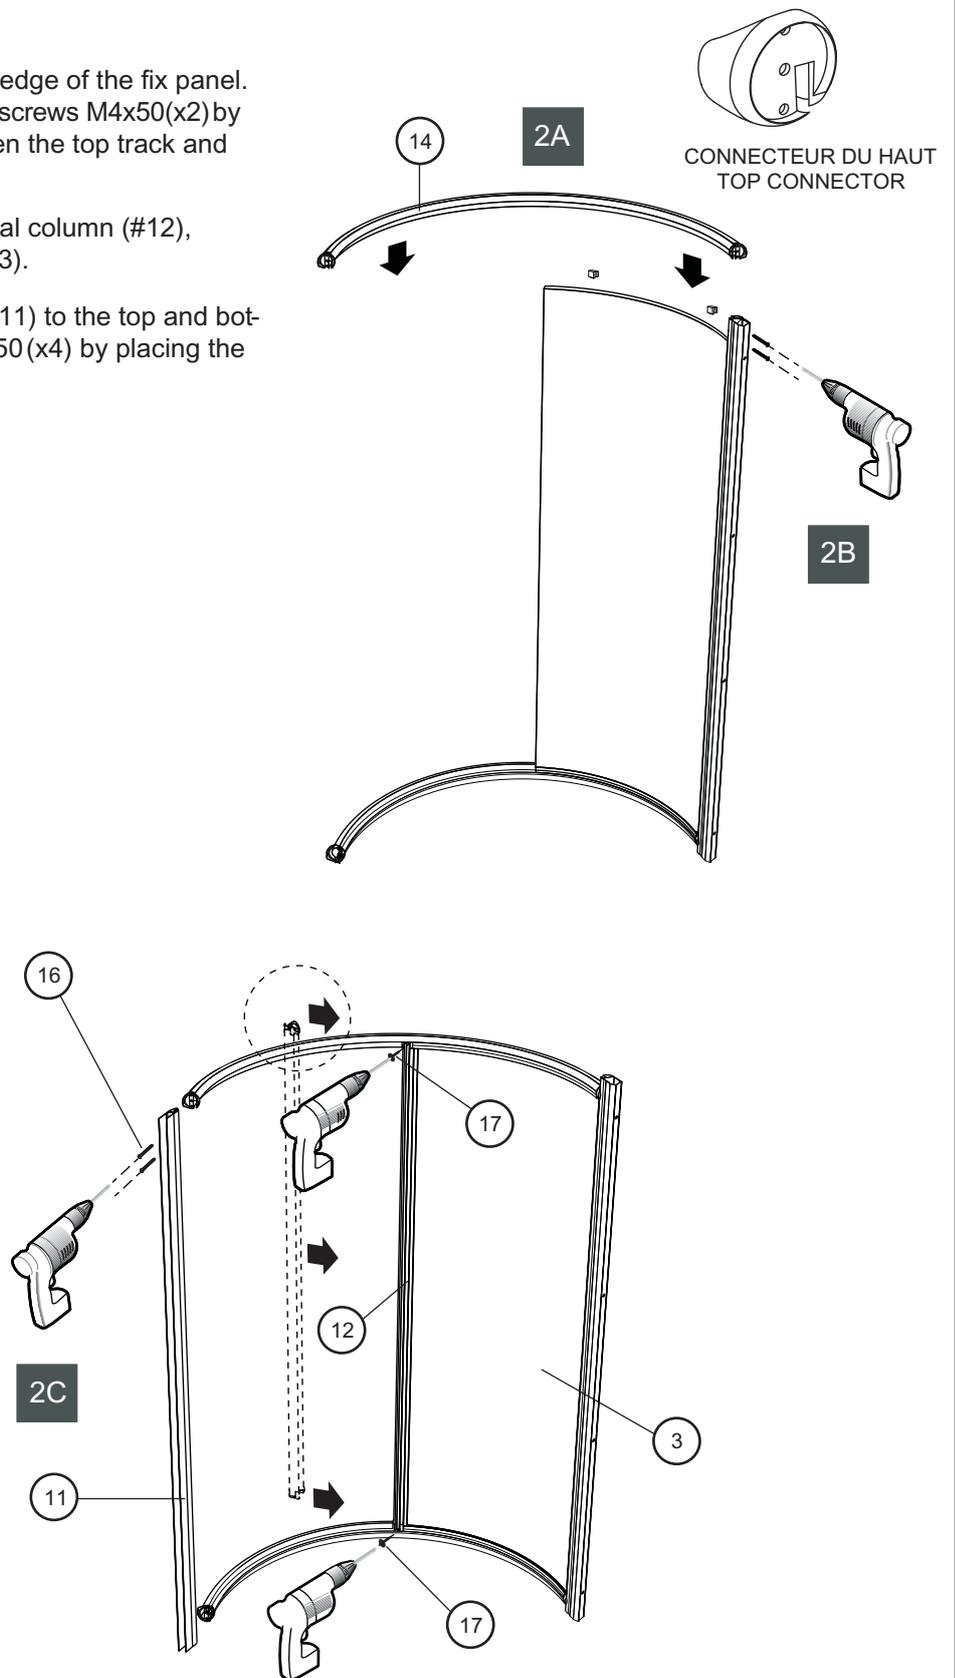






Step 3

3A. Insert the wheels (#15).


3B. Insert the door magnet gasket (#8) as shown.

3C. Install the handles (#9) as shown.

3D. Tighten the handle (#9) screws inside shower.

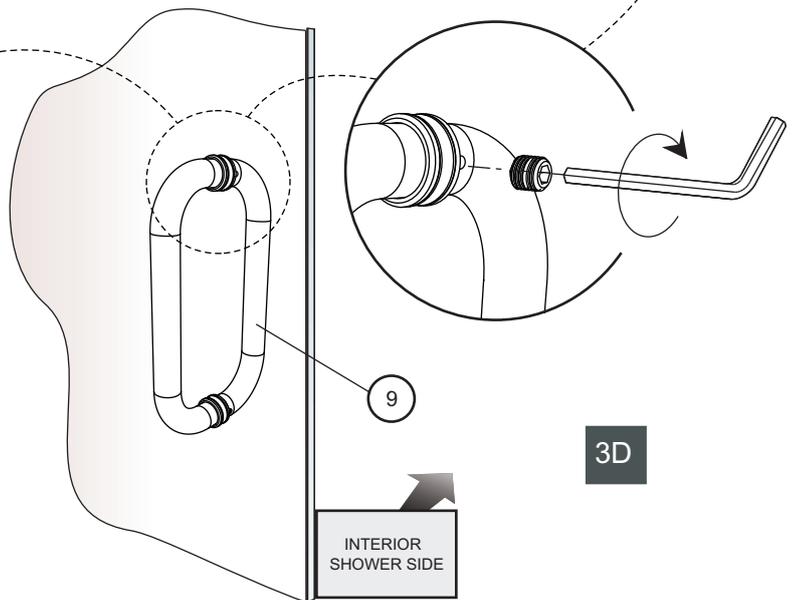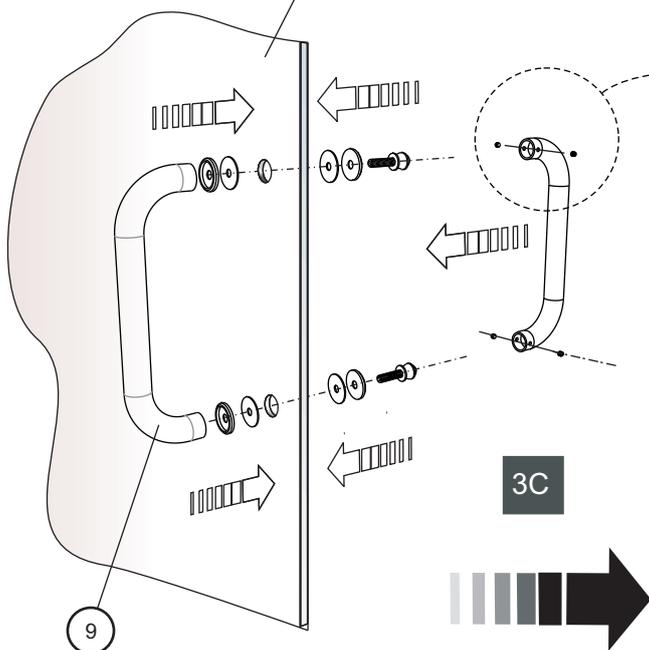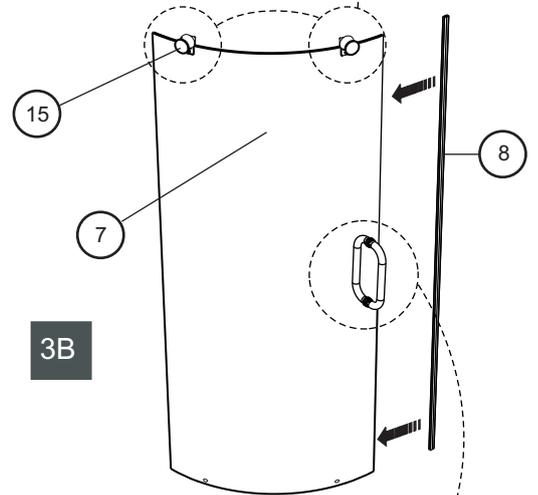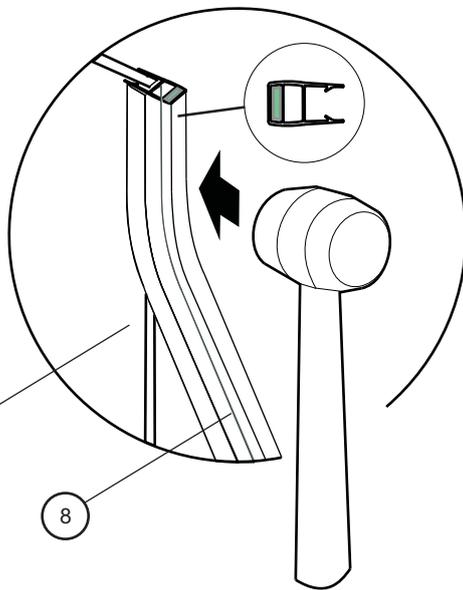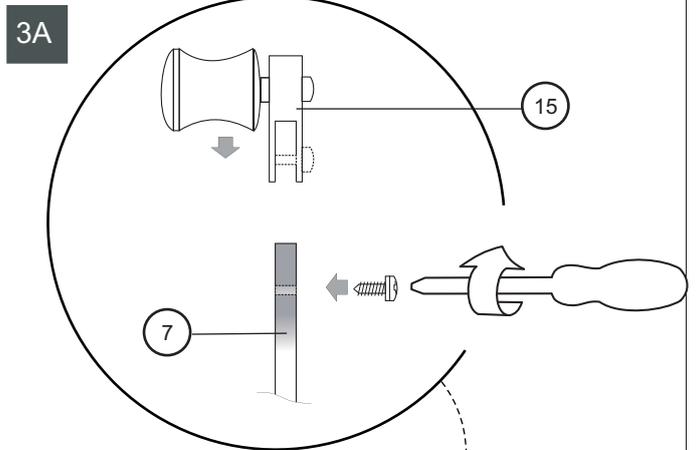


Step 4

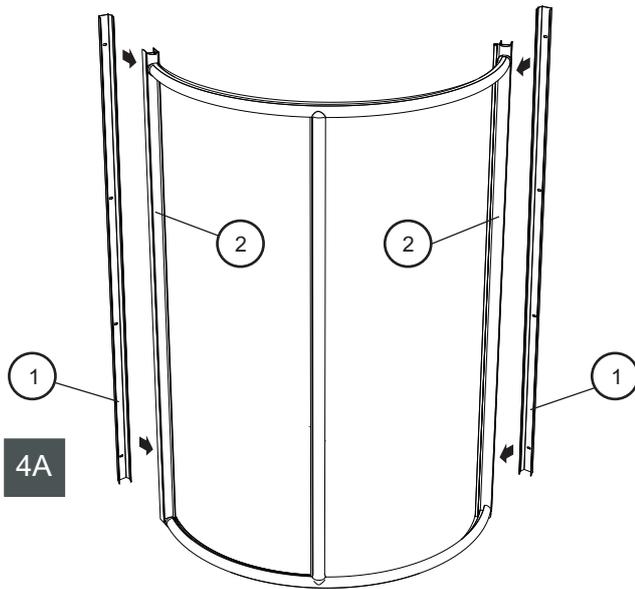

- 4A. Insert wall jambs(#1) temporarily into the frame expanders(#2).
- 4B. Position and center the frame onto threshold of shower base.




Place the door panel inside the shower base. Ensure to protect the surface of the base.

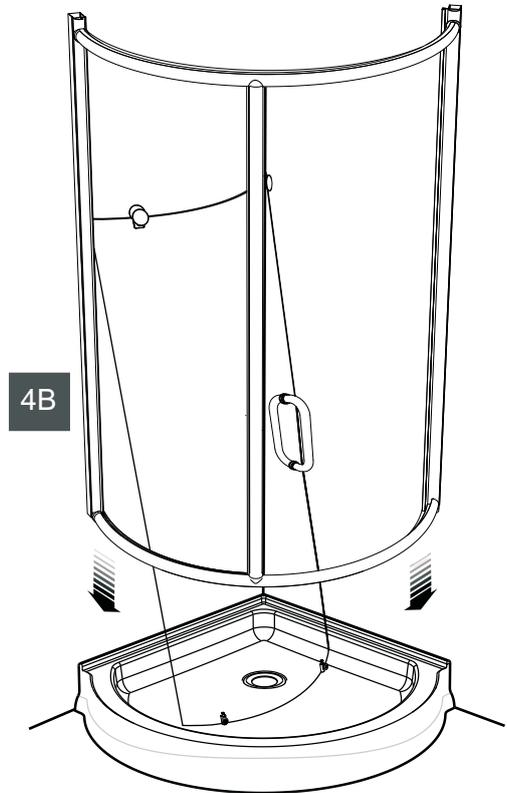

Step 5

- 5A. Level the shower frame. Trace the outer edge of the wall jambs (#1).

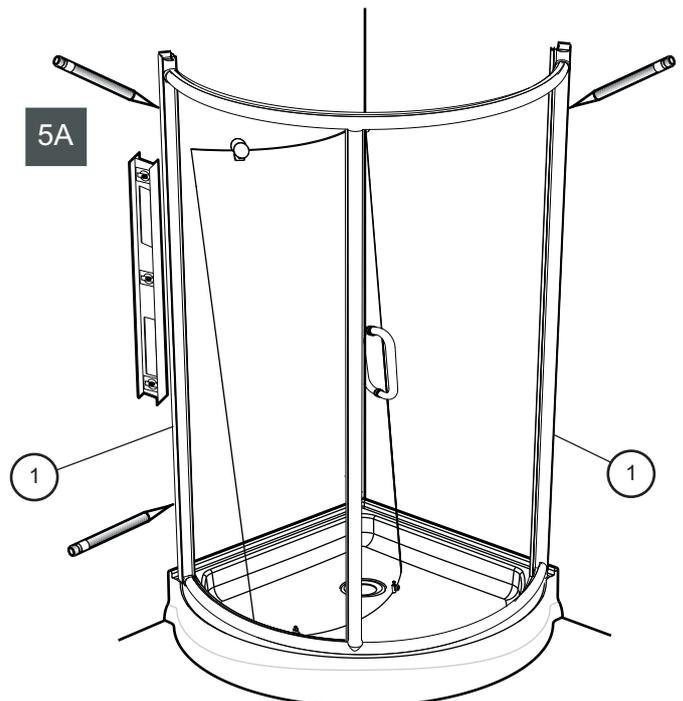

Step 6




6A. Reposition one of the wall jambs (#1) on the shower threshold using the marked line.

6B. Mark the drilling location and remove the wall jambs.

6C. With a 1/4" drill bit, drill 4 holes on each side.


6D. Insert 6 wall plugs (#10) and put in each a drop of silicone.

6E. Secure the wall jamb (#1) using the screws M4x30 (#2).

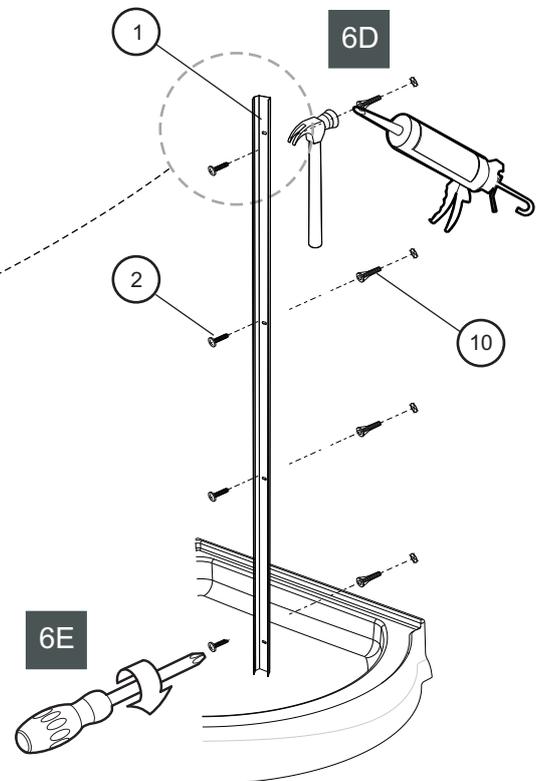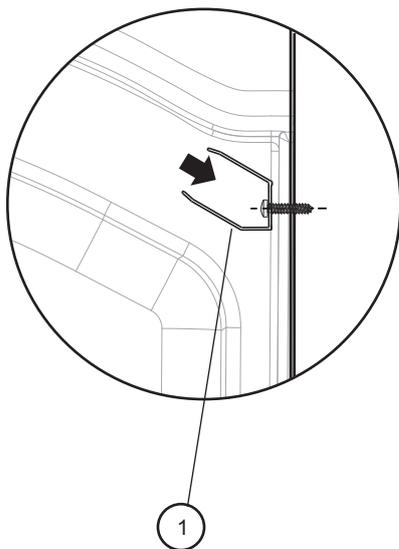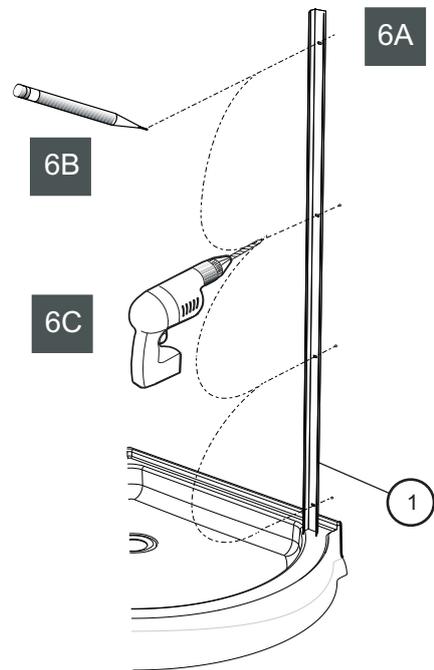


Step 7

7A. Insert the shower frame into wall jambs (#1) as illustrated.

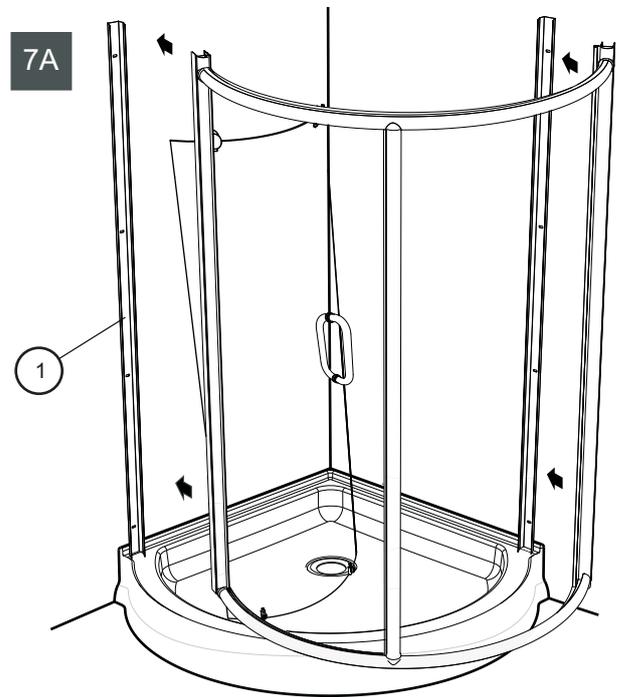


7B. Level the frame.

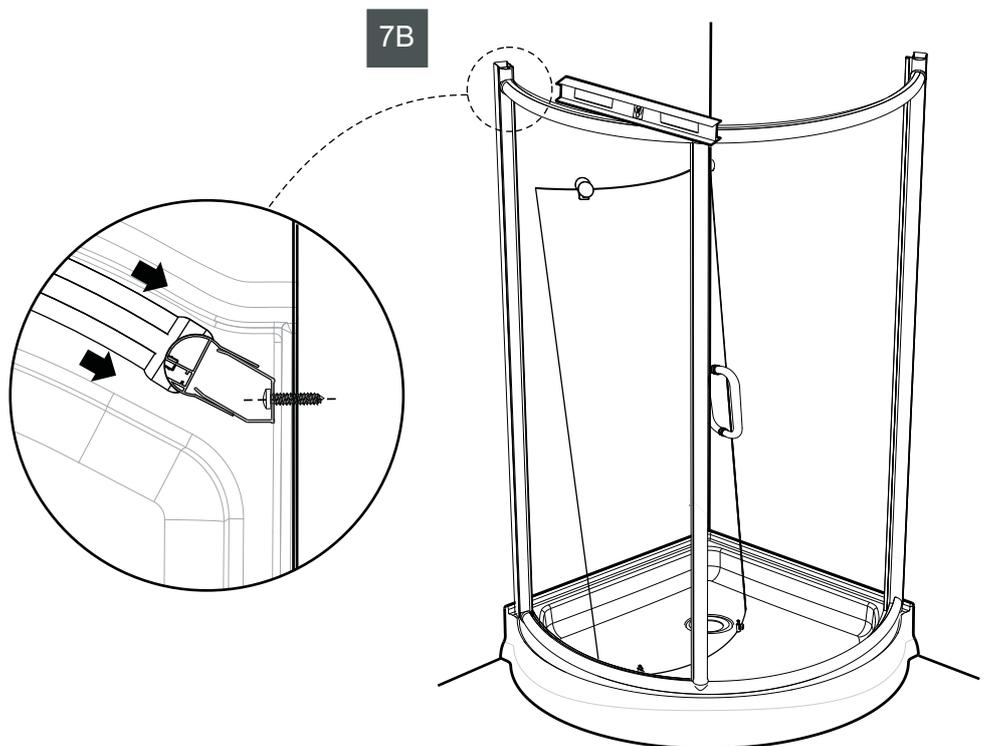


Step 8

8A. Fasten frame with screw M4x12 (#13) and add screw cap (#4).

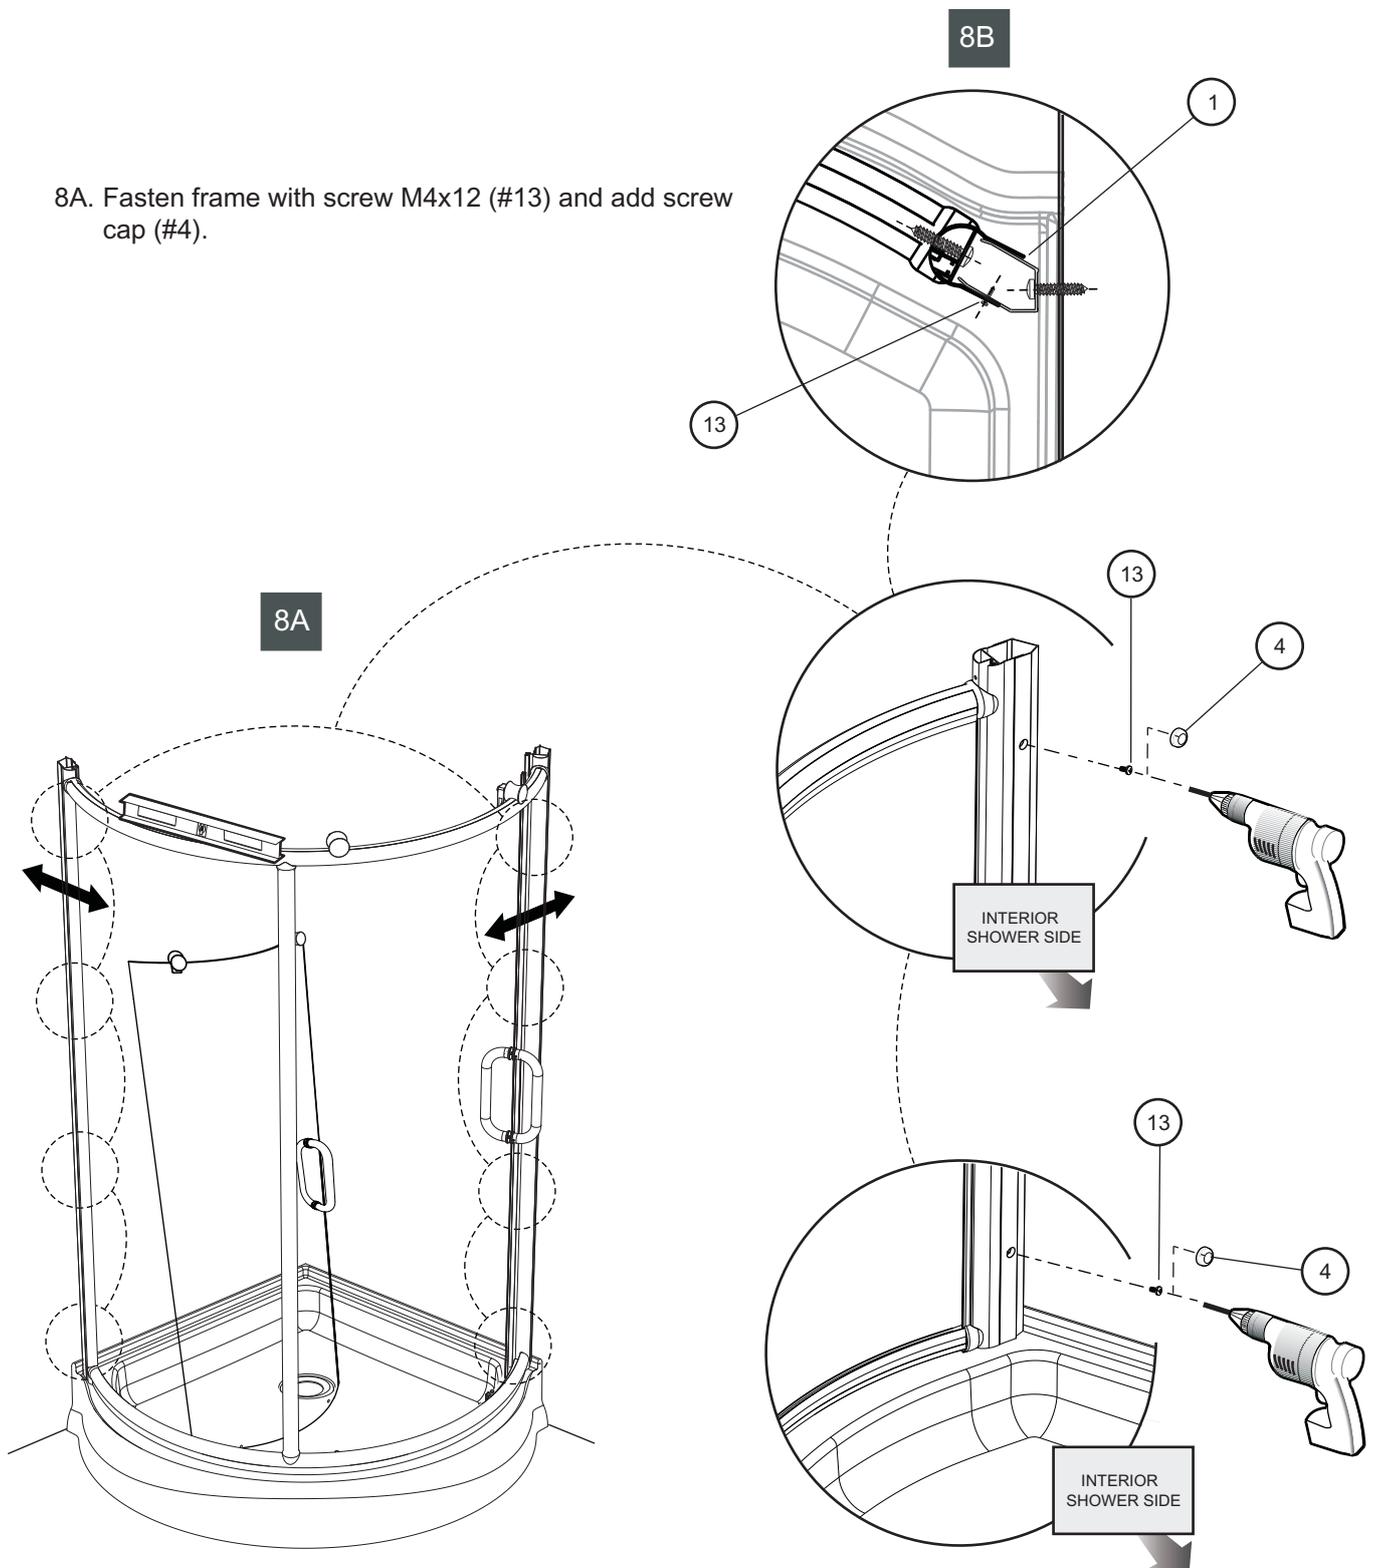


Step 9

9A. Place the top rollers of the door panel on the top track and push on the bottom sliders to engage them in to the bottom track.

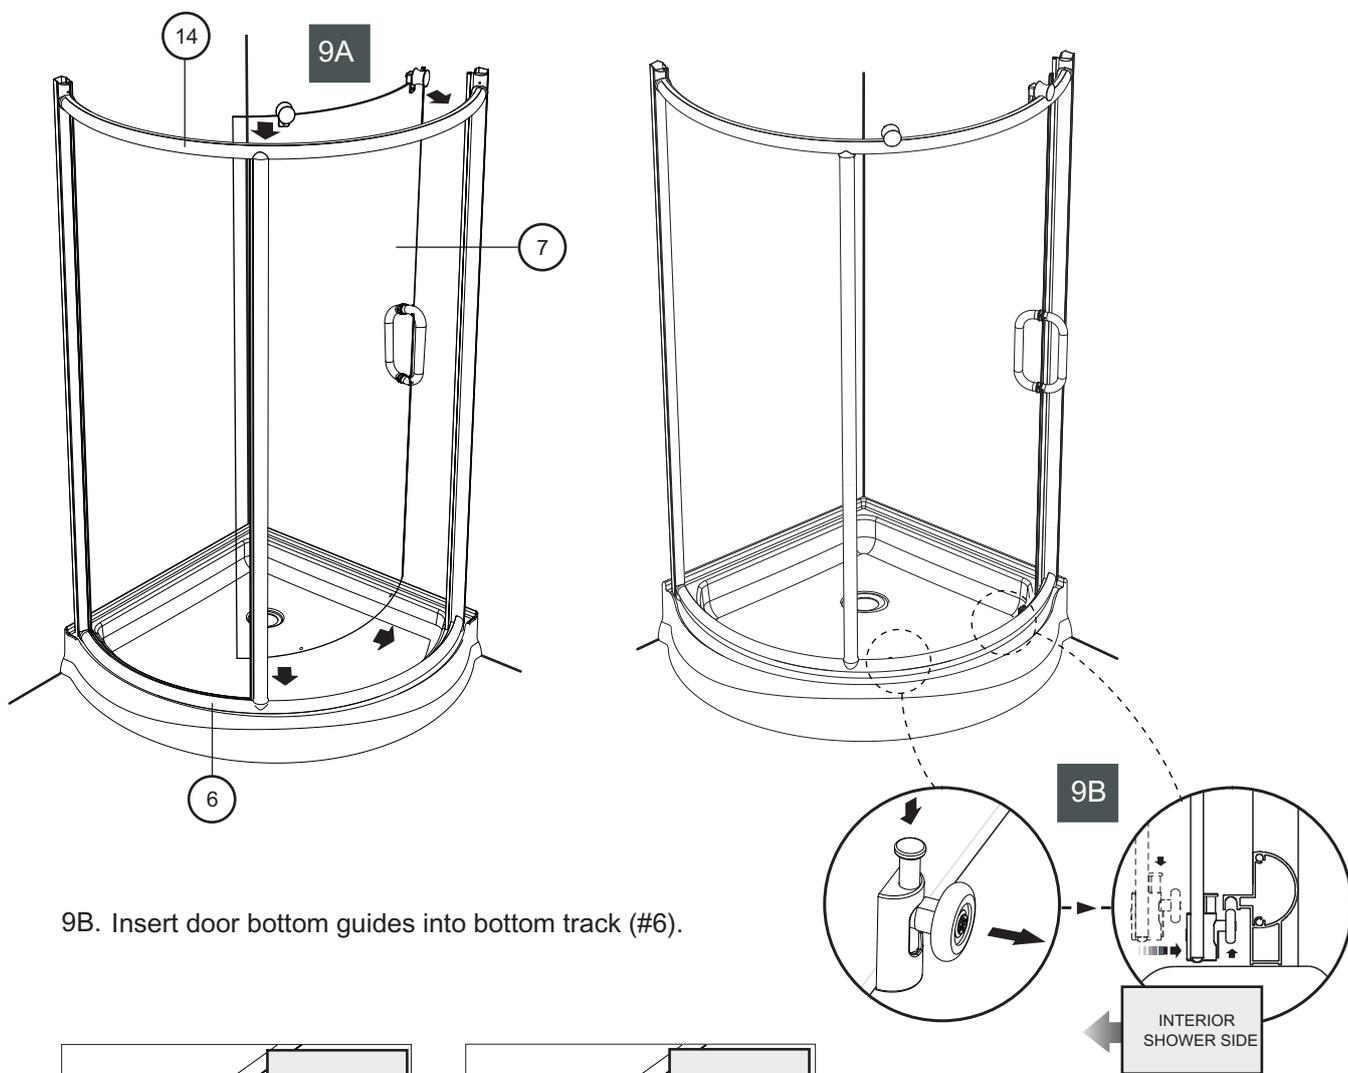

9B. Insert door bottom guides into bottom track (#6).

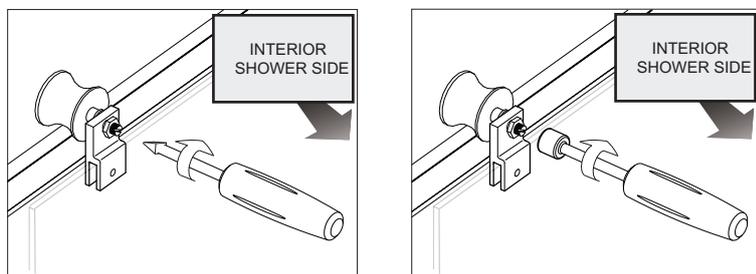


Slightly unscrew the nut of the top rollers of the door panel this will allow you to adjust the door. Screw it back by ensuring verticality with the level.


Step 10

10A. The bumper (#19) is located on the bottom track opposite the opening of the door.

To install a door which opens to the left, drill a 3.2 hole on the right edge of the bottom track (the location of the hole is marked on the track). Then use a M4x12 screw to put in the bumper [19] on the track. To install a door which opens to the right, drill the hole and install the bumper [19] on the left edge of the track.

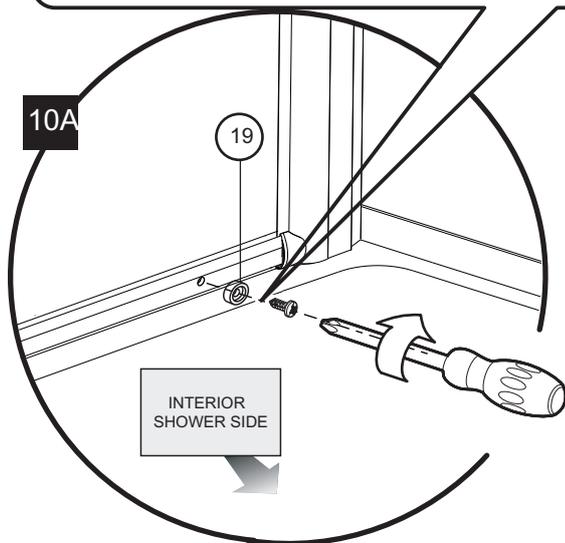

10B. Place the expander caps on the expanders.

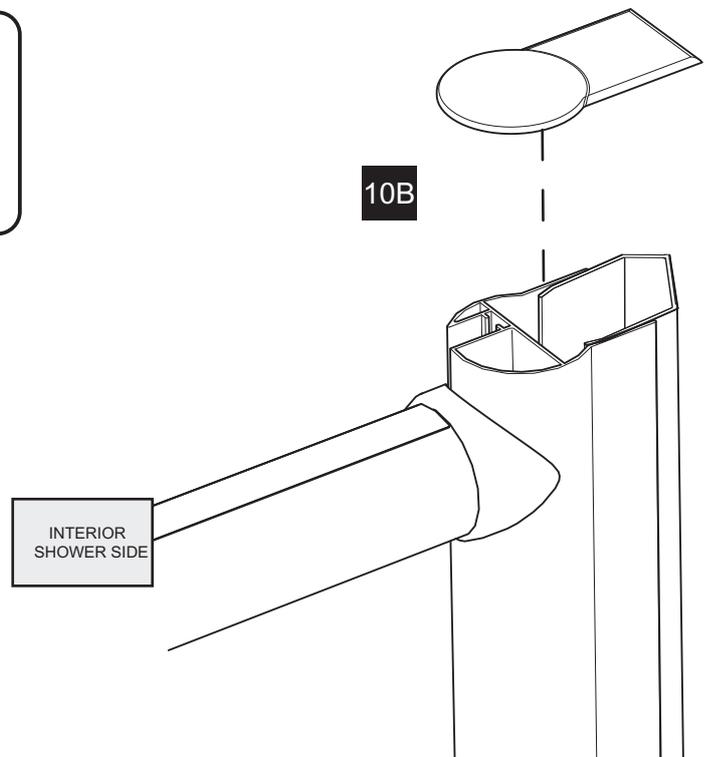

Step 11

11A. Silicone exterior the bottom track (#6) and along the wall jambs (#1) and at the bottom of the fix panel.



24 Hours

