


INSTALLATION INSTRUCTIONS

CP6121A

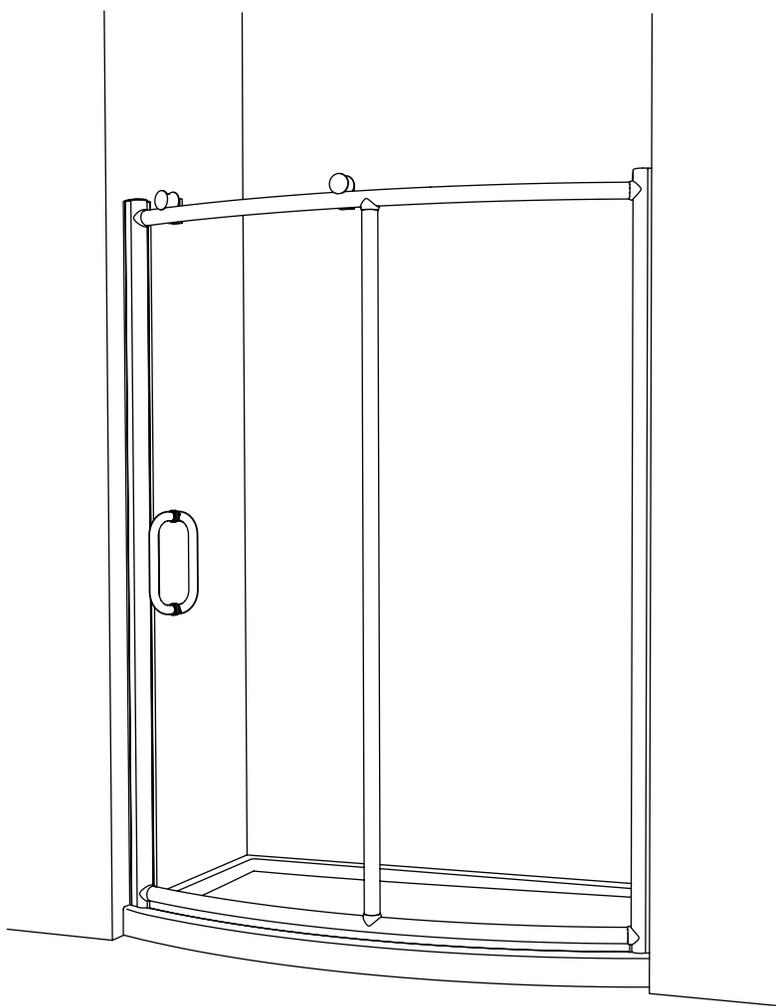

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions









After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.


Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.



Tools Required

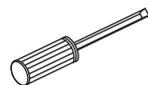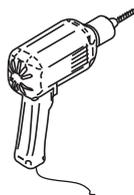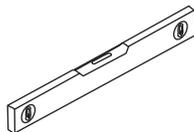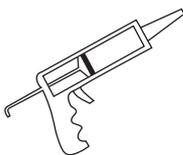

This product is heavy and may require two people to install.




PARTS LISTING

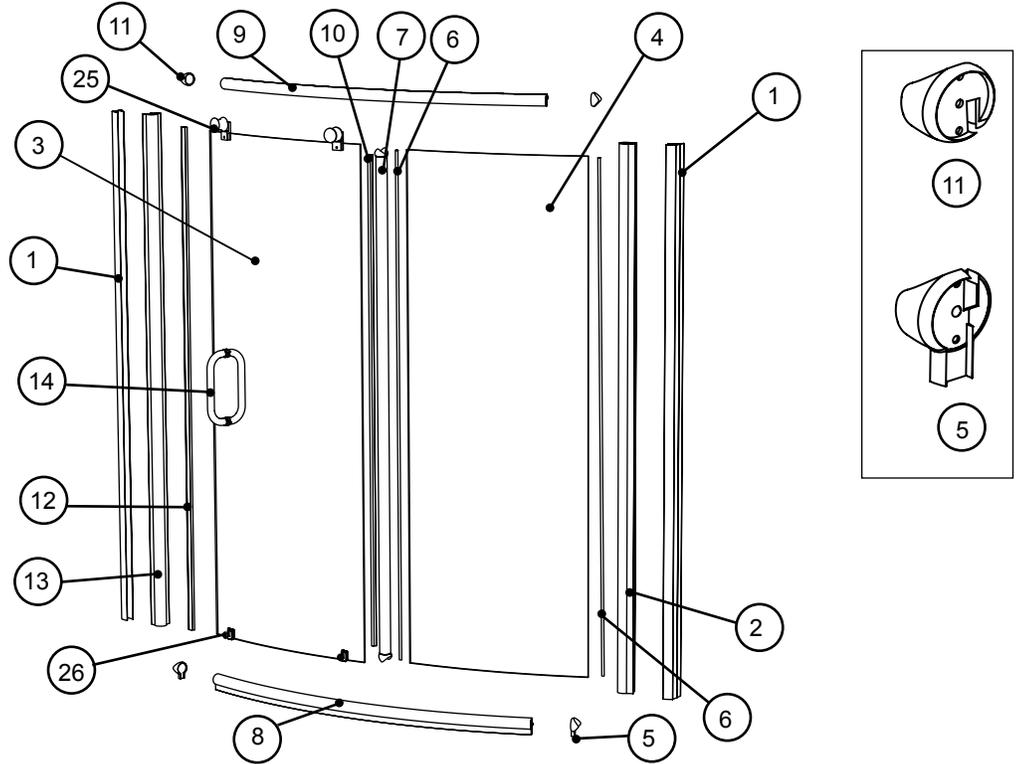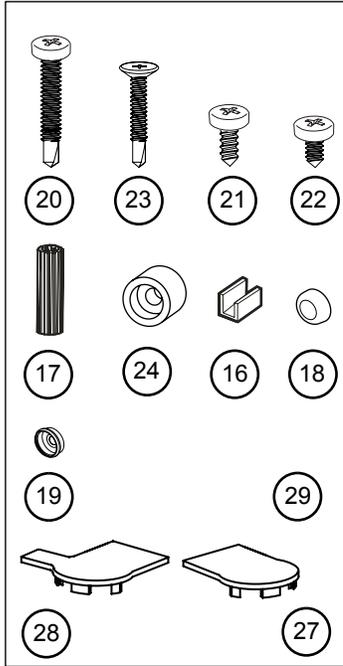


| ITEM | PARTS | QTY |
|------|---------------------------------|-----|
| 1 | WALL JAMB | 2 |
| 2 | EXPANDER | 1 |
| 3 | DOOR PANEL | 1 |
| 4 | SIDE PANEL | 1 |
| 5 | BOTTOM CONNECTOR | 2 |
| 6 | VERTICAL GASKET | 2 |
| 7 | VERTICAL | 1 |
| 8 | BOTTOM TRACK | 1 |
| 9 | TOP TRACK | 1 |
| 10 | DOOR SIDE GASKET | 1 |
| 11 | TOP CONNECTOR | 2 |
| 12 | MAGNETIC DOOR GASKET | 1 |
| 13 | MAGNETIC EXPANDER | 1 |
| 14 | SET OF HANDLES | 1 |
| 15 | | 1 |
| 16 | GLASS SUPPORT | 4 |
| 17 | WALL PLUG | 8 |
| 18 | SCREW CAP | 8 |
| 19 | BACK SCREW CAP | 8 |
| 20 | PAN SELF DRILLING SCREW #M4-35 | 8 |
| 21 | PAN HEAD SCREW #M4-12 | 1 |
| 22 | PAN CREW #M4-10 | 8 |
| 23 | FLAT HEAD SCREW #M4-20 | 2 |
| 24 | STOPPER | 1 |
| 25 | TOP WHEELS | 2 |
| 26 | BPTTOM WHEELS | 2 |
| 27 | COVER FOR THE EXPANDER | 1 |
| 28 | COVER FOR THE MAGNETIC EXPANDER | 1 |
| 29 | COVER FOR THE WALL JAMB | 2 |

1 POSITIONING ON THE THRESHOLD

- 1A** Use a measuring tape to mark the center of the threshold of the base.
- 1B** Using 1 3/8" screws (2), fasten the expander to the bottom track by placing the bottom connector between the bottom track and expander.
- 1C** Place glass clips (2) on the bottom edge of the fixed panel and slide it into the expander and bottom track.
- 1D** Place glass clips (2) on the top edge of the fix panel. Fasten the top track using 1 3/8" screws (2) by placing the top connector between the top track and expander.
- 1E** Insert the vertical column onto the fixed panel and screw into the top and bottom track using the 3/4" screws (2).
- 1F** Screw the magnetic expander to the top and bottom tracks using the 1 3/8" screws (4) by placing the two connectors in between.

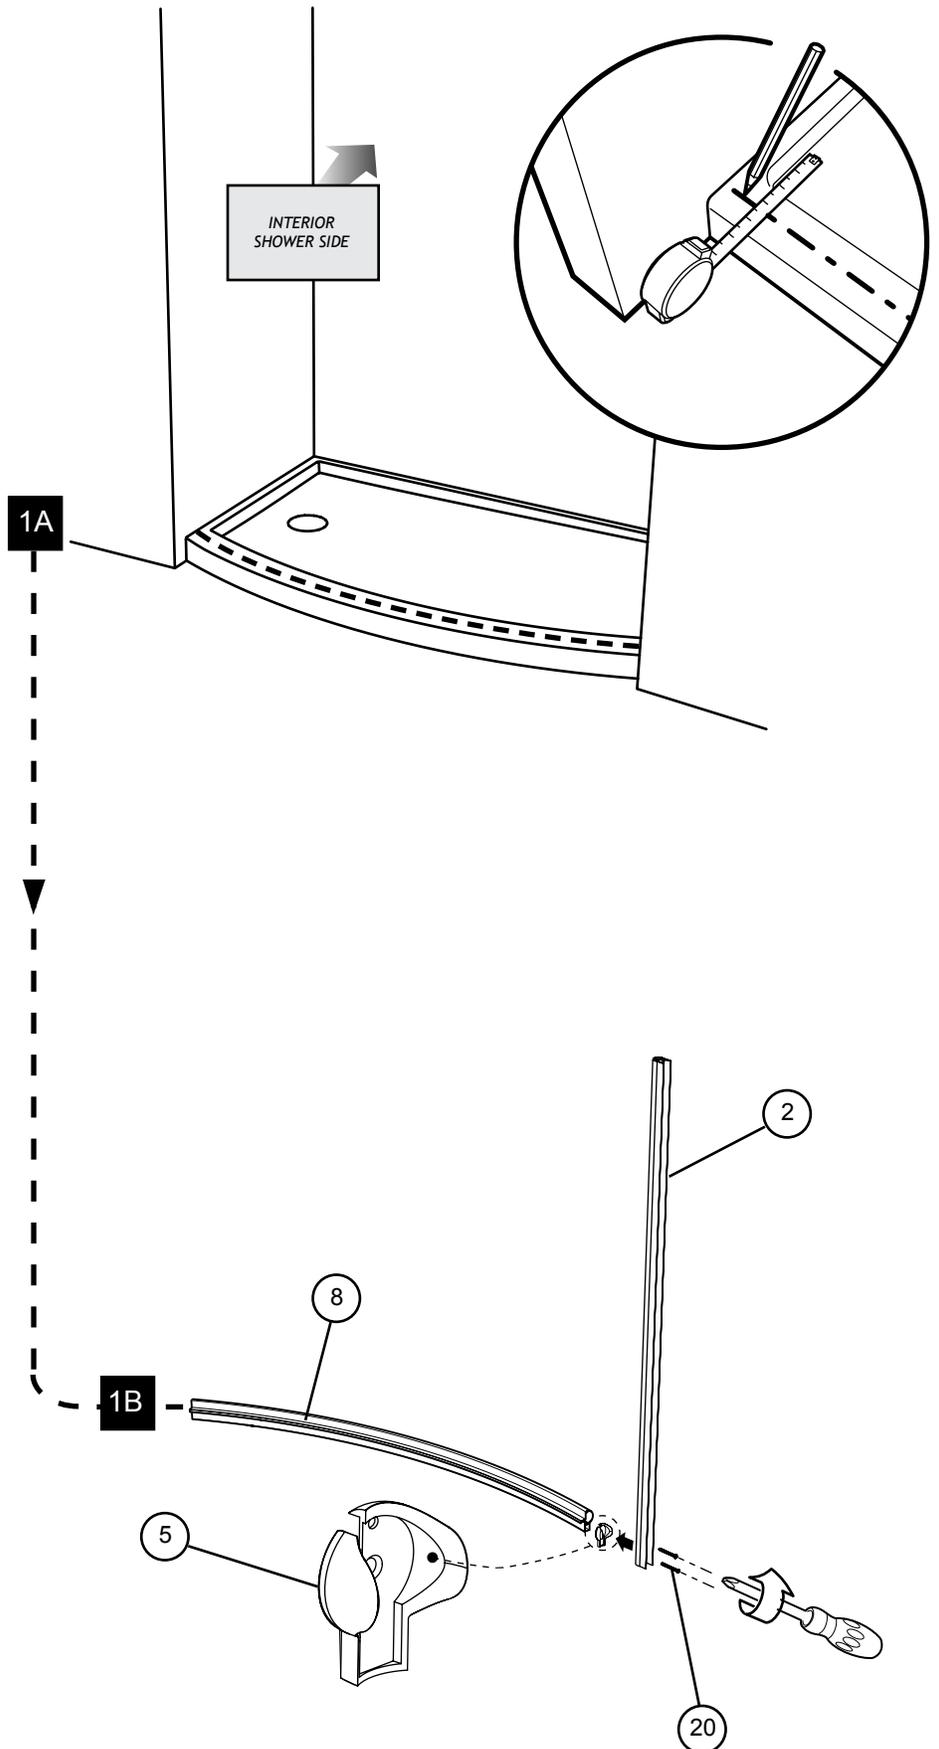


1 FIXED PANEL INSTALLATION

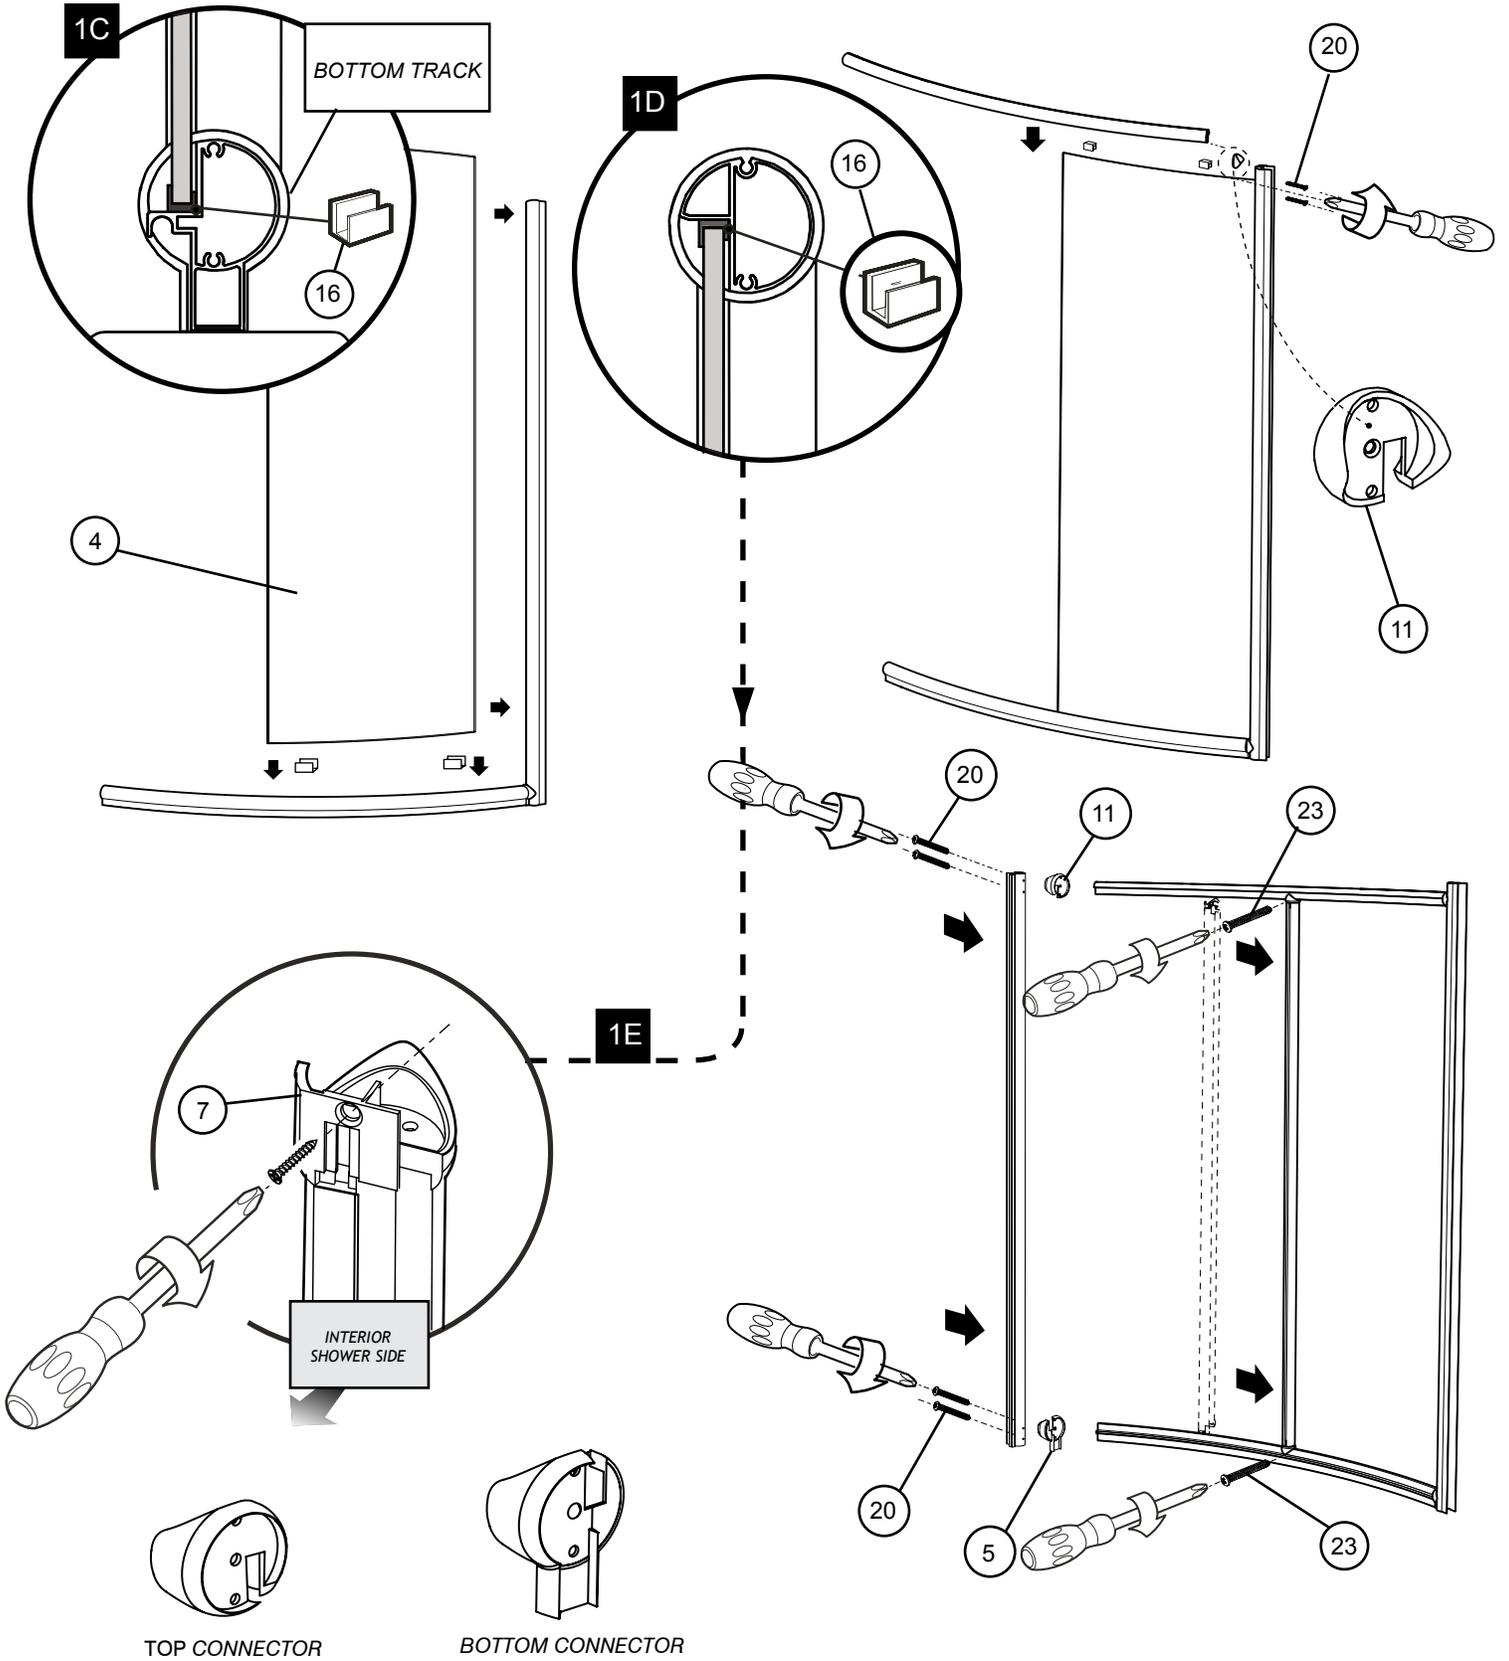


2 HANDLE INSTALLATION

2A Install the handle as shown.


2A

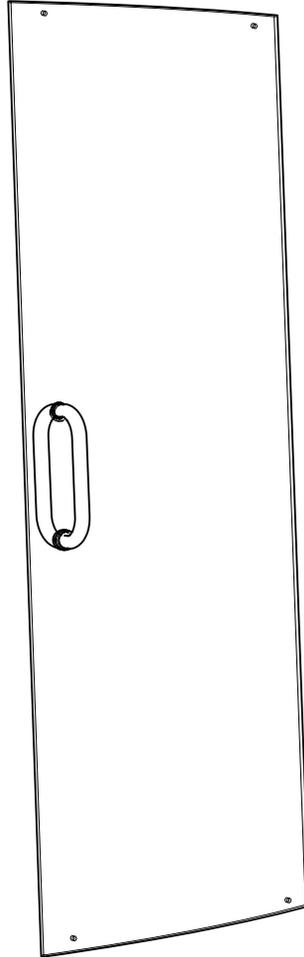

2A-1

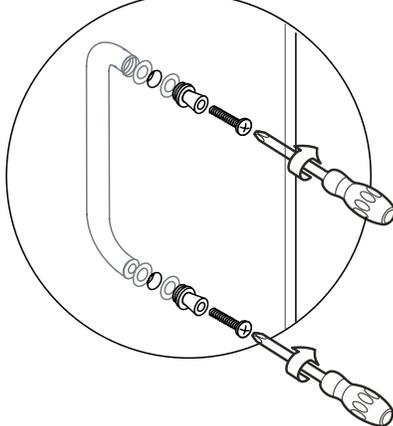

2A-2

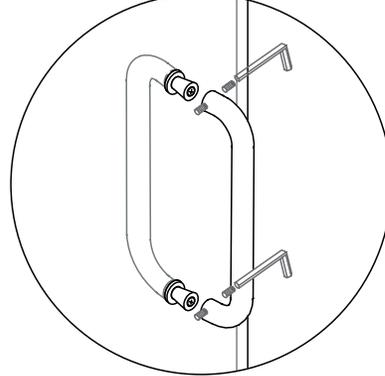


3 DOOR ASSEMBLY





3A Use a mallet to install the magnetic gasket on the door panel. Ensure the textured side of the glass panel is located towards the outside of the shower.

3B Install the rollers on the door panel so that the rollers point towards the outside of the shower. The vertical handle must always be on the opening side of the door towards the outside of the shower.

3C Install the bottom sliders on the door panel while placing the hooks towards the outside of the shower. Place the bottom slider cap over the screw.

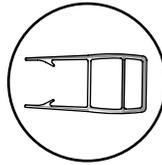


MAGNETIC GASKET

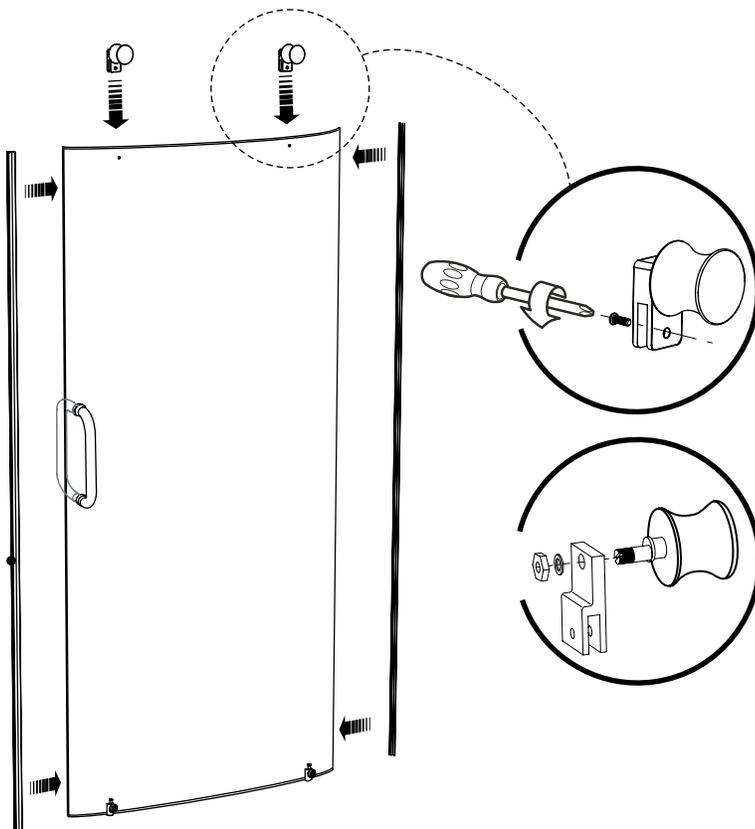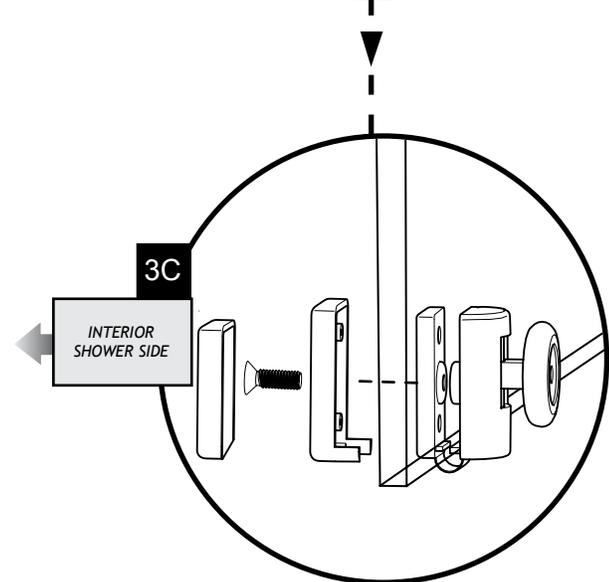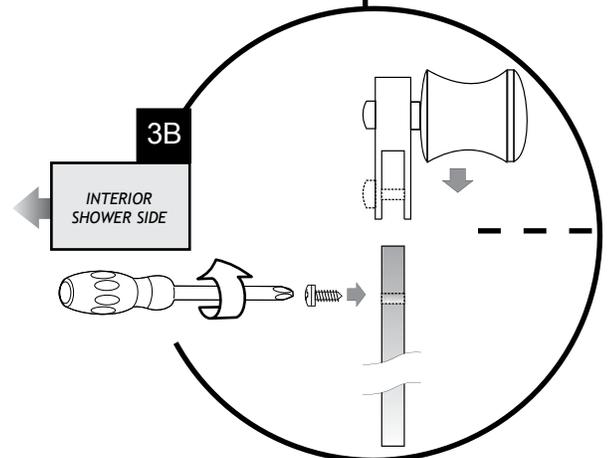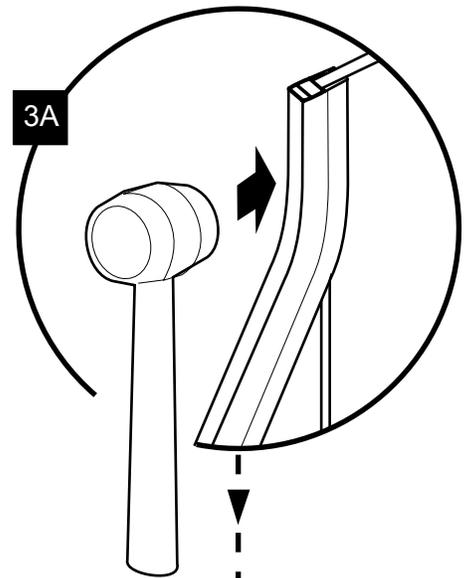


4 WALL JAMB INSTALLATION


- 4A** Place the door inside the shower by protecting the surface of the base. Insert the wall jamba into the expander and place the frame in its final position temporarily.
- 4B** Level the shower frame. Mark the drilling location of the holes for the wall jamb then remove the frame temporarily.
- 4C** With a 1/4" drill bit, drill 8 holes into the wall on the side of the opening of the door using the marks done in the previous step. Place a drop of silicone in each hole and insert 8 wall plugs.
- 4D** Fasten the wall jamb on the side of the opening of the door by using 1 3/8" (4) screws and the wall plugs already installed. Place the screw caps(4).
- 4E** Insert the second wall jamb. Reposition the frame onto the center of the threshold.
- 4F** Screw the wall jamb into the wall plugs already installed by using screws 1 3/8" (4) and place the screw caps

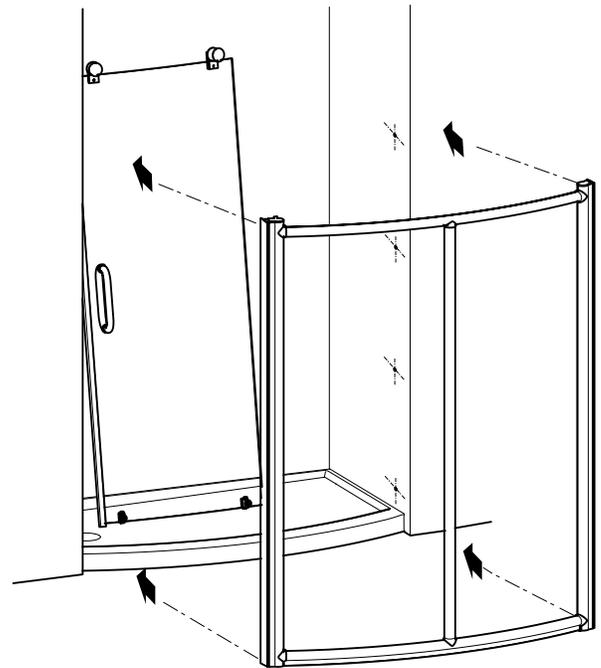


4A

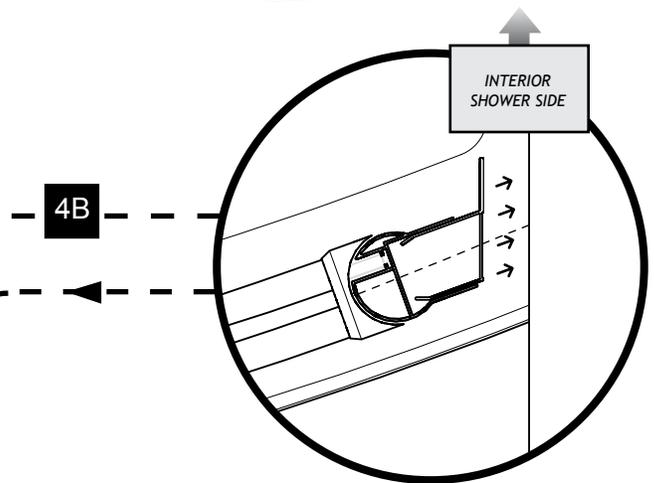

4B

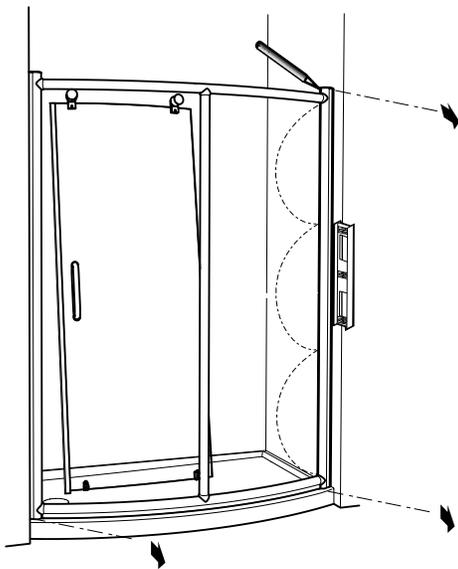


4B

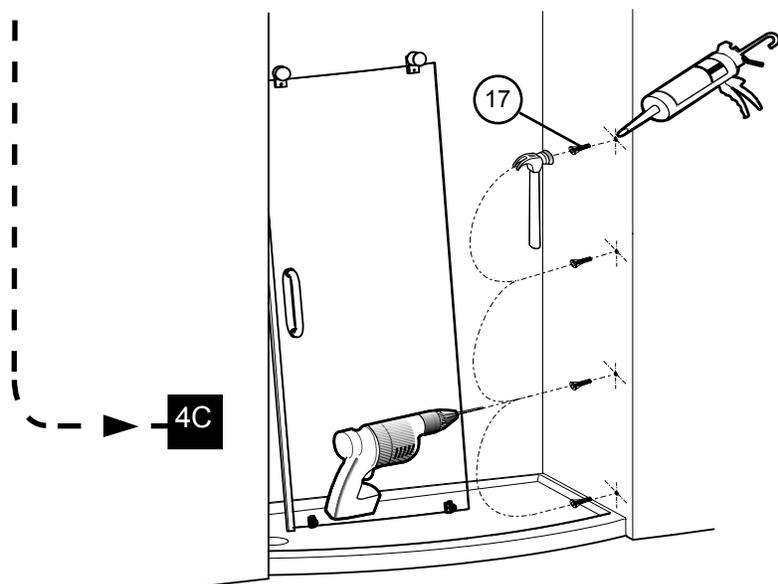




4C

4 WALL JAMB INSTALLATION


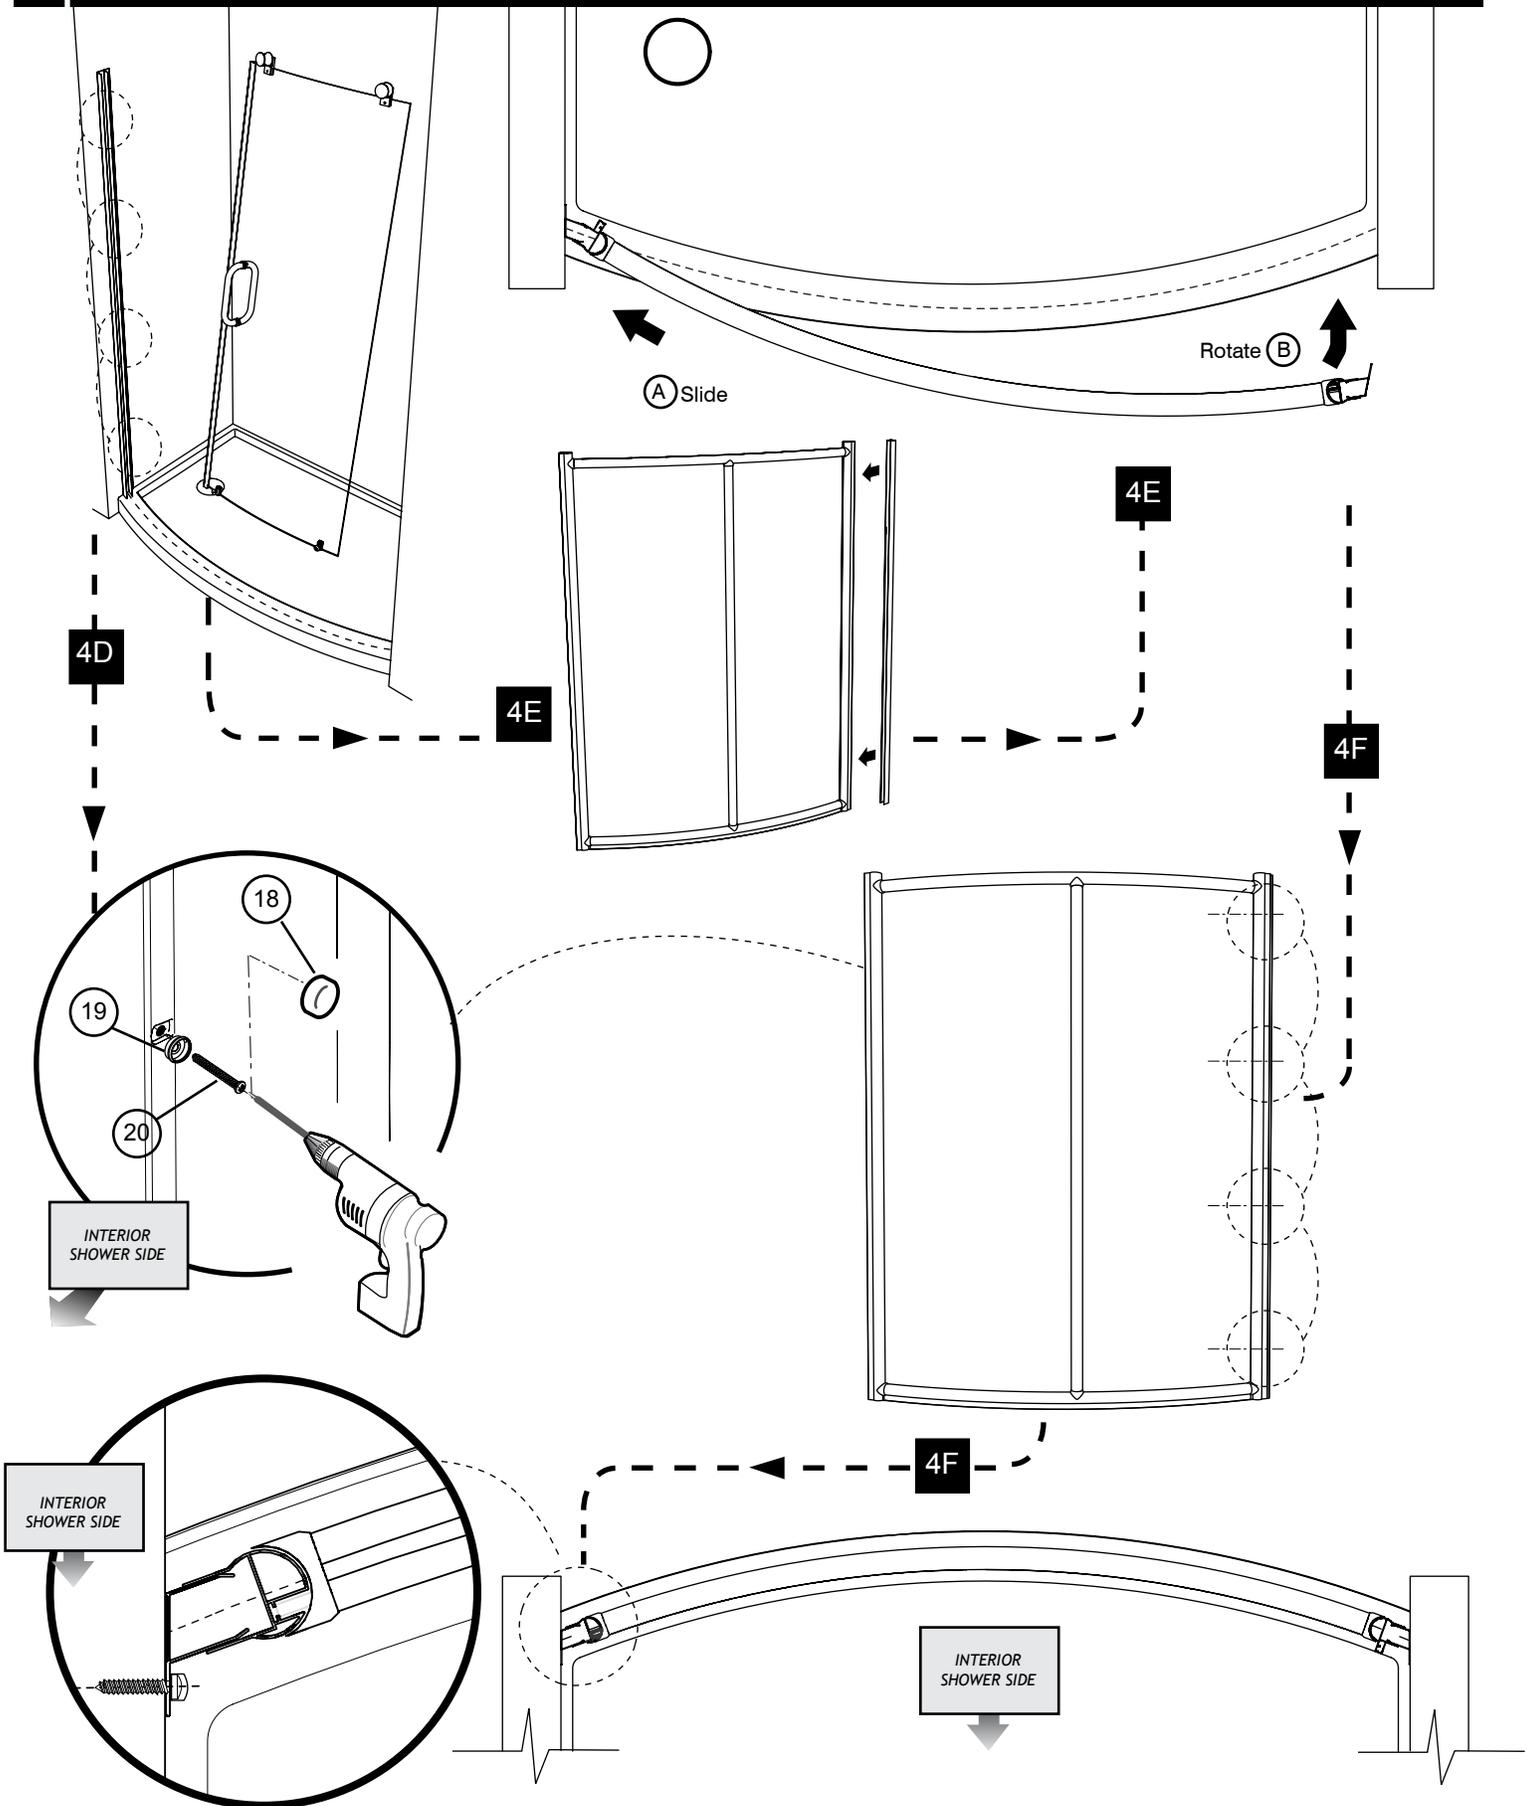


5 SECURE THE WALL JAMBS

- 5A** Level the top track and bottom track, by using locking pliers . Clamp the expanders with their wall jambs.*
- 5B** Secure the expanders with the wall jambs by using the 3/8" self drilling screws (6) and screw caps (6).

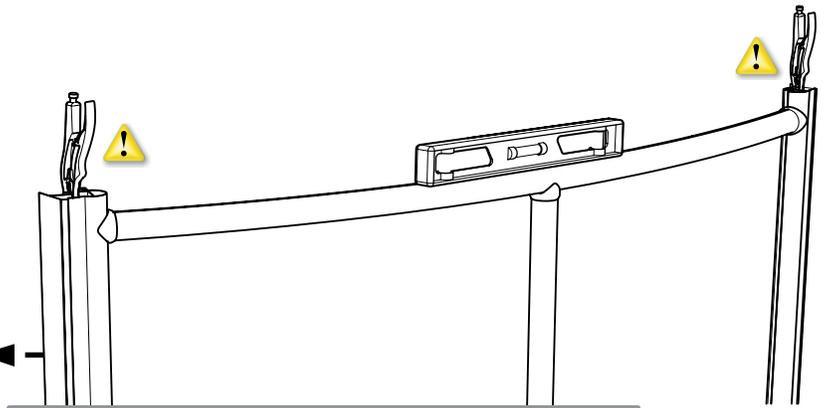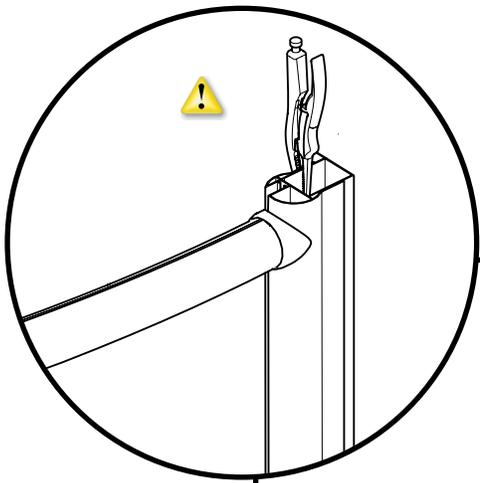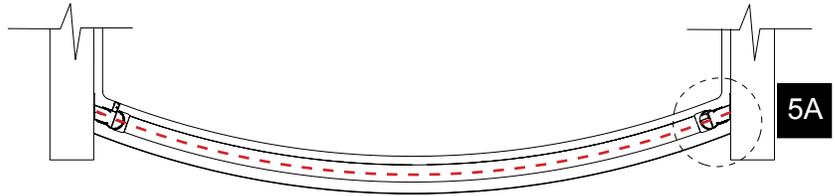

*  COVER THE PLIER'S TEETH BEFOREHAND TO AVOID SCRATCHING THE ALUMINUM PARTS.




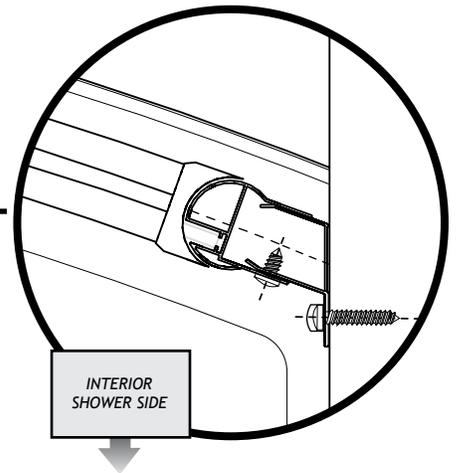
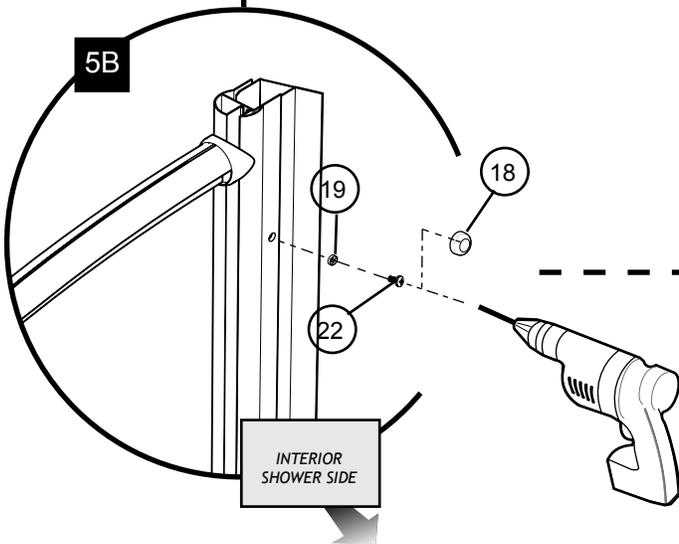


6 ACCESSORIES INSTALLATION

6A Using a mallet and block install the two vertical gaskets. One between the expander and fix panel, the second between the vertical column and fix panel. The gasket must be installed inside the shower.

6B The bumper is located on the bottom track opposite the opening of the door. Use a screw 1/2" to install the bumper.

6C Place the expander caps on the expanders.

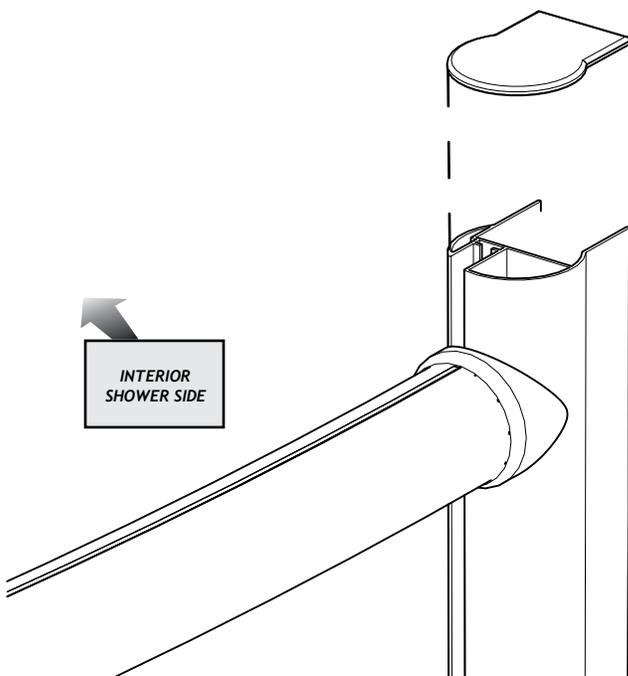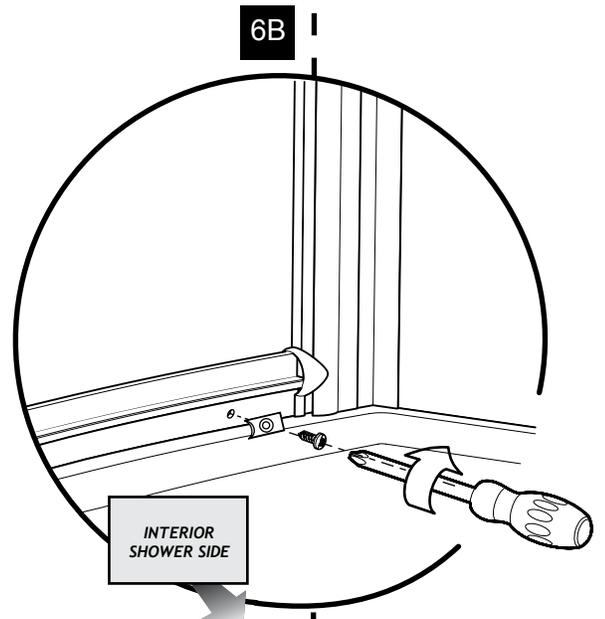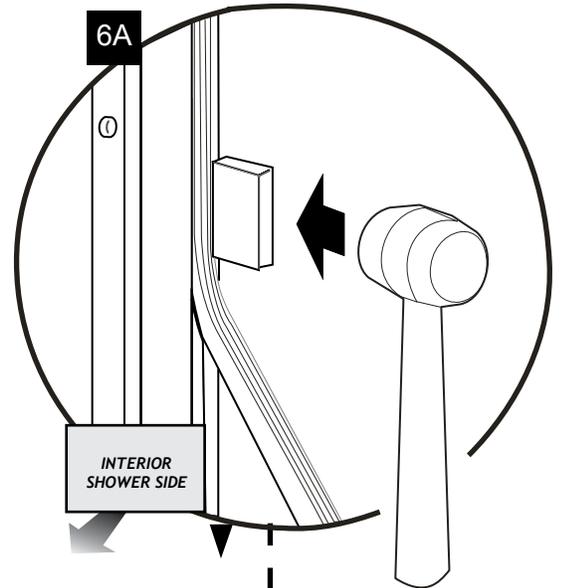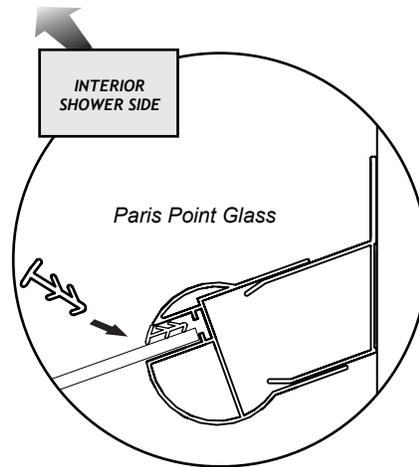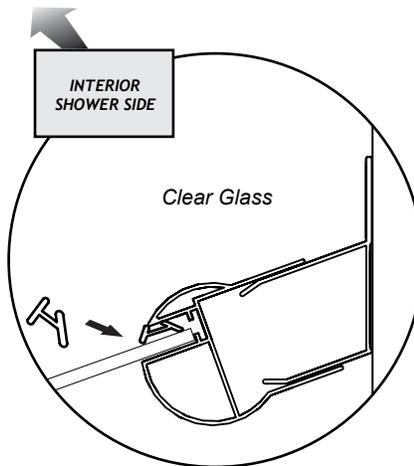


6C

7 DOOR PANEL ADJUSTEMENT

7A Place the expander caps on the expanders.

7B Place the top rollers of the door panel on the top track and push on the bottom sliders to engage them into the bottom track.

7C Slightly unscrew the nut of the top rollers of the door panel this will allow you to adjust the door. Screw it back by ensuring verticality with the level.

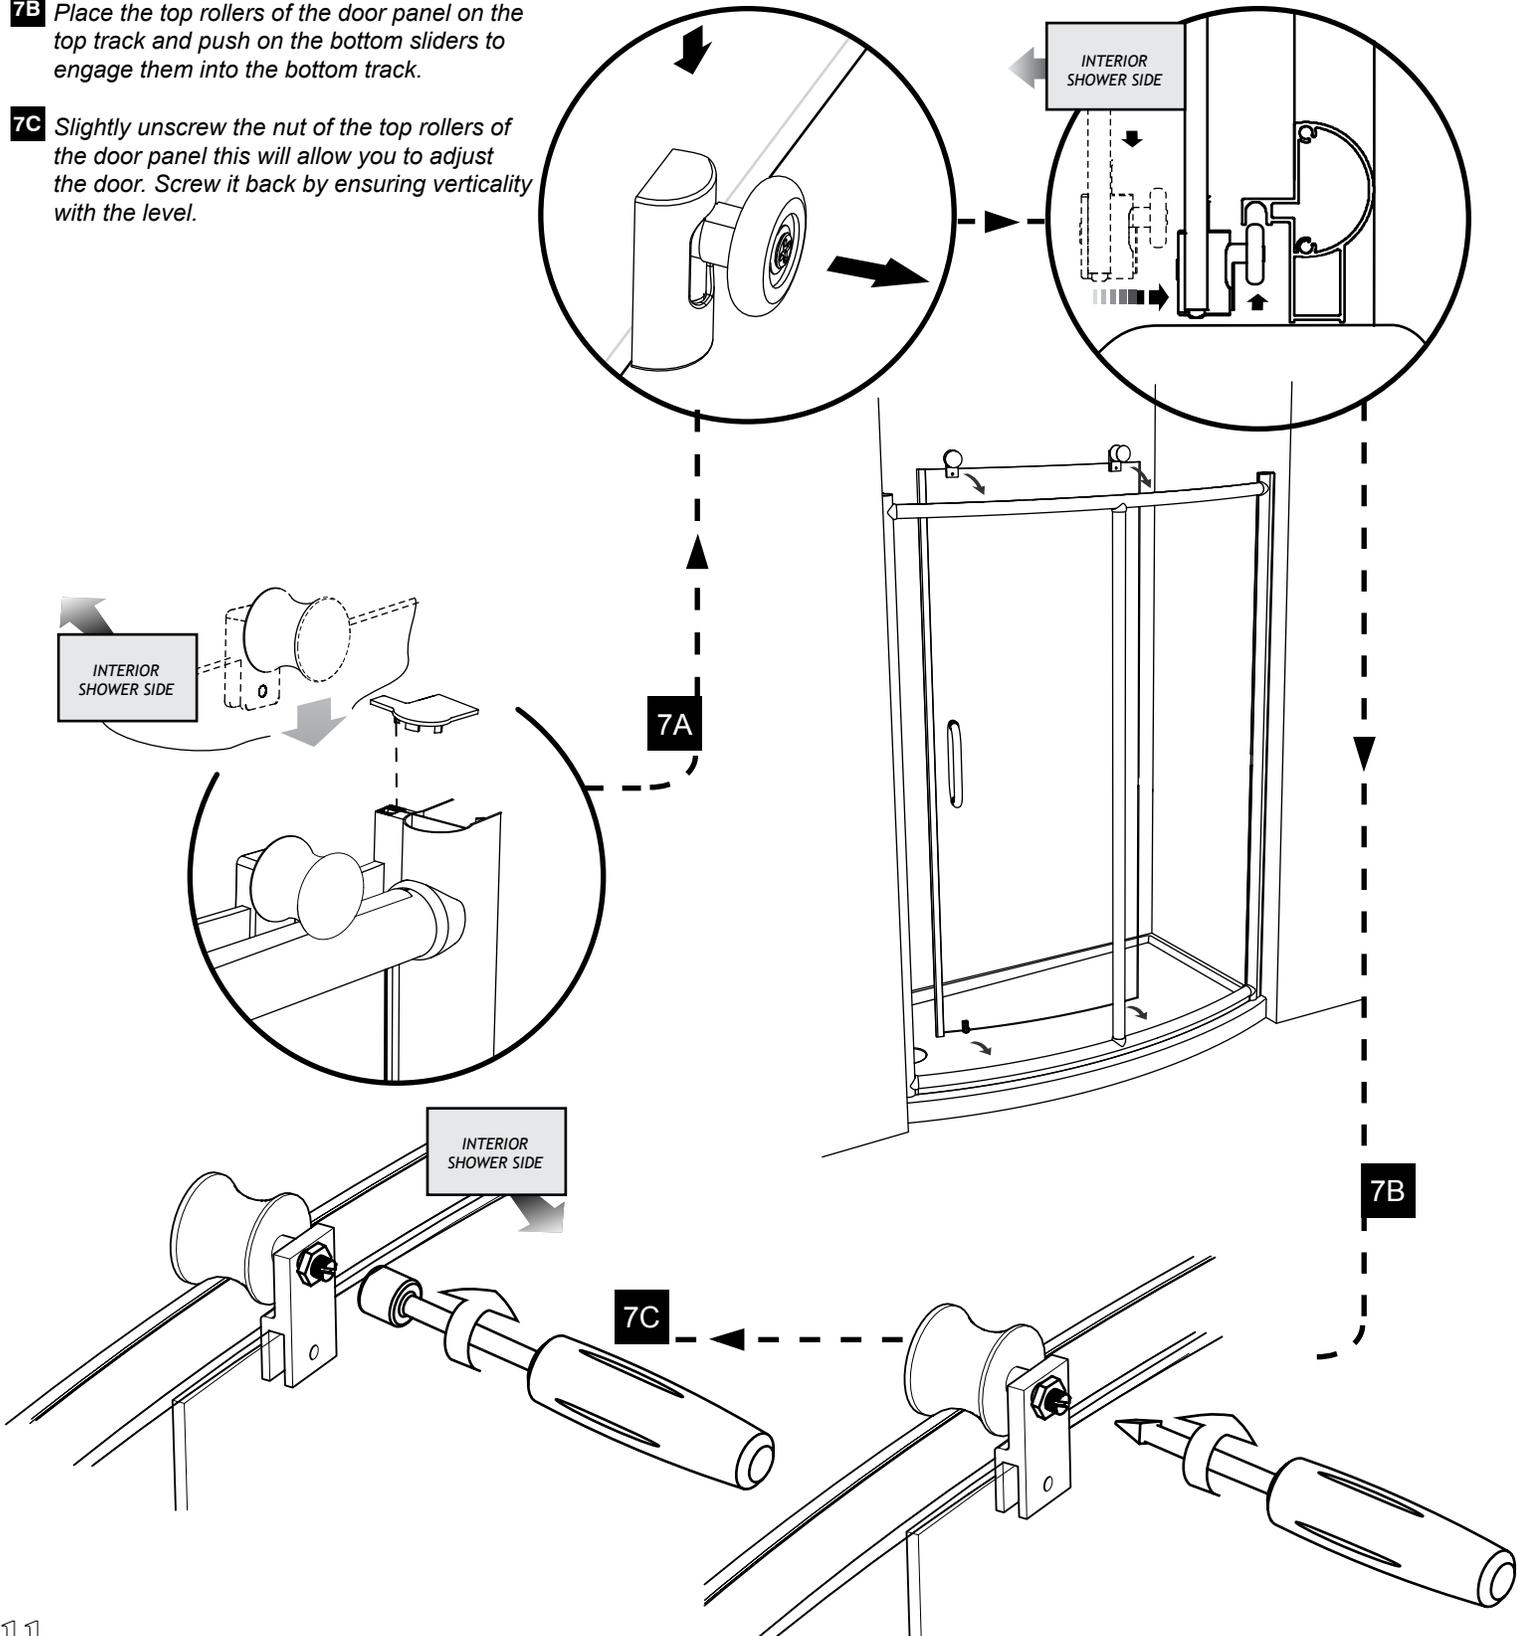

8A Silicone the outside of the frame between the wall and the wall jamb, along the bottom rail, below the fix panel and at the bottom of the return panel if applicable.

8B Wait 24 hours before using the shower to allow the silicon to dry.

